


SHARP

SERVICE MANUAL

S39E632L-S400

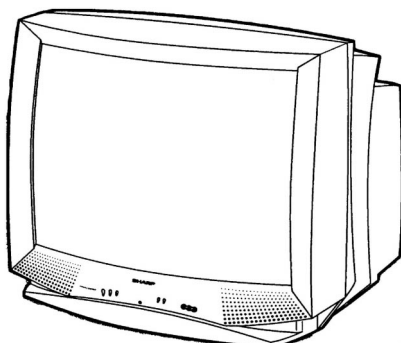

COLOR TELEVISION

Chassis No. SN-92

MODELS 32L-S400, 36L-S400 CL32S40, CL36S40

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

	Page
• ELECTRICAL SPECIFICATIONS	1
• IMPORTANT SERVICE SAFETY PRECAUTION	2
• LOCATION OF USER'S CONTROL	6
• INSTALLATION AND SERVICE INSTRUCTIONS	7
• CHASSIS LAYOUT	13
• BLOCK DIAGRAM	14
• SCHEMATIC DIAGRAMS	15
• PRINTED WIRING BOARD ASSEMBLIES	27
• REPLACEMENT PARTS LIST	31
• PACKING OF THE SET	42

ELECTRICAL SPECIFICATIONS

POWER INPUT 120V AC 60 Hz
 POWER RATING
 32L-S400, CL32S40 140W
 36L-S400, CL36S40 165W
 PICTURE SIZE
 32L-S400, CL32S40 3,073cm² (476sq inch)
 36L-S400, CL36S40 3,905cm² (605sq inch)
 CONVERGENCE Magnetic
 SWEEP DEFLECTION Magnetic
 FOCUS Hi-Bi-Potential Electrostatic
 INTERMEDIATE FREQUENCIES
 Picture IF Carrier Frequency 45.75 MHz
 Sound IF Carrier Frequency 41.25 MHz
 Color Sub-Carrier Frequency 42.17 MHz
 (Nominal)

AUDIO POWER
 OUTPUT RATING 2.5W + 2.5W (at 10% distortion and
 Dual CH Operate)
 SPEAKER
 SIZE 12 x 6 cm (2 pcs.)
 VOICE COIL IMPEDANCE 8 ohm at 400 Hz
 ANTENNA INPUT IMPEDANCE
 VHF/UHF 75 ohm Unbalanced
 TUNING RANGES
 VHF-Channels 2 thru 13
 UHF-Channels 14 thru 69
 CATV Channels 1 thru 125
 (EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
 The contents are subject to change without notice.


IMPORTANT SERVICE SAFETY PRECAUTION

■ Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.

To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

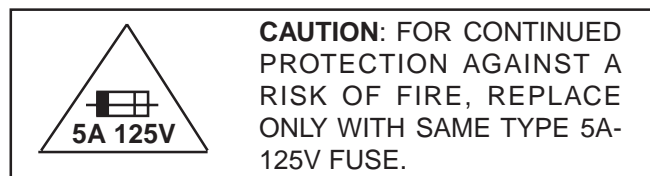

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.

It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.

2. It is essential that servicemen have available at all times an accurate high voltage meter. The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a colour chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver. Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)


Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
 - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15 μ F capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
 - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC ine cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

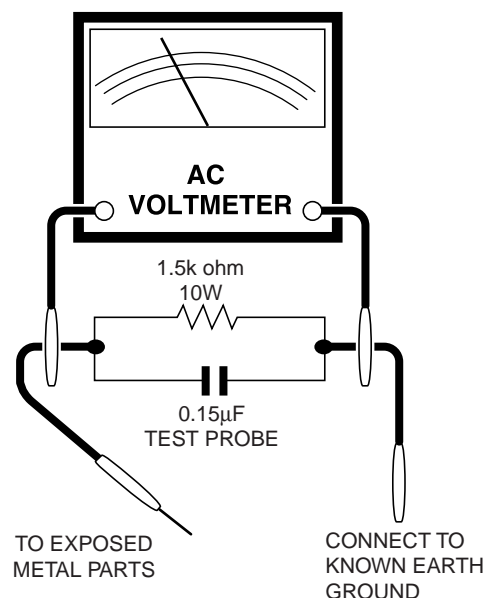

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by " \triangle " and shaded areas in the **Replacement Parts Lists** and **Schematic Diagrams**.


For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

■ **Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.**

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le récepteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC B+ basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

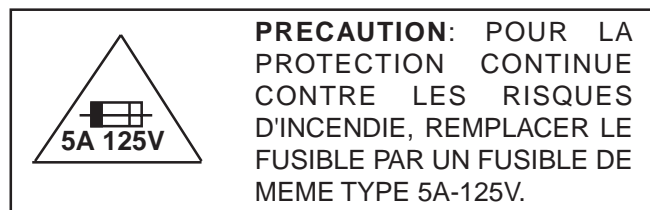

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce système, supprimer la charge statique en branchant une résistance de 10 k Ω en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anode. (Le cordon d'alimentation doit être retiré de la prise murale.)

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en portant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X. Le tube-image, seule source de rayons X dans les téléviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension". C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux prescrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée tout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

(Suite)

VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE


Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la façon suivante:
 - Brancher le cordon d'alimentation directement à une prise de courant de 120V (Ne pas utiliser de transformateur d'isolation pour cet essai).
 - A l'aide de deux fils à pinces, brancher une résistance de 1,5 k Ω 10 watts en parallèle avec un condensateur de 0,15 μ F en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
 - Utiliser un voltmètre CA d'une sensibilité d'au moins 5000 Ω /V pour mesurer la chute de tension en travers de la résistance.

- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adaptation non polarisée peut être utilisée dans le but de terminer ces vérifications.)

Tous les courants mesurés ne doivent pas dépasser 0,5 mA.

Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

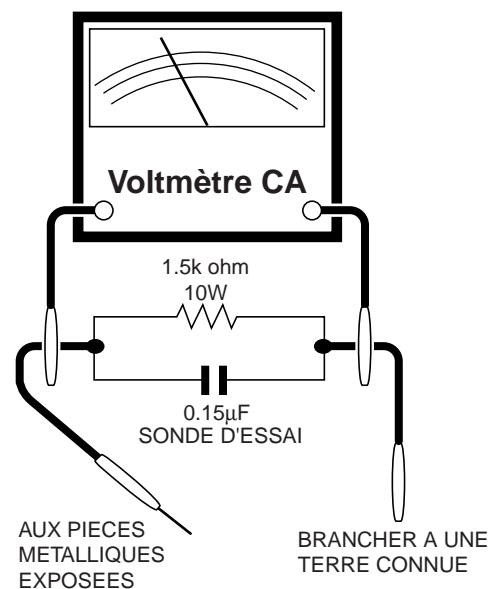

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.

Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont

identifiées par la marque " ⚠ " et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.

Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL


Front Panel

POWER

Press → On.
Press again → Off.

VOLUME UP/DOWN

(+) Increases sound.
(-) Decreases sound.

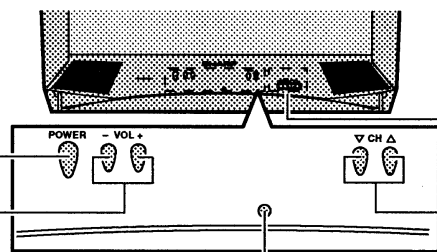

SENSOR AREA FOR
REMOTE CONTROL

VIDEO/AUDIO **IN 2** TERMINALS

(VIDEO/AUDIO terminals are also provided on the rear.)

CHANNEL UP/DOWN

(▲) Selects next higher channel.
(▼) Selects next lower channel.

Basic Remote Control Functions

POWER

Press → On.
Press again → Off.

REMOTE KEYPAD

Accesses any channel from keypad.

FLASHBACK

Returns to previous channel.

PERSONAL PREFERENCE

With the Personal Preference buttons, you can program your favorite programs by using the 4 categories A, B, C and D. The channels can be accessed quickly by using these buttons.

VOLUME UP/DOWN

(+) Increases sound.
(-) Decreases sound.
• In menu mode, changes or selects the TV adjustments.


MENU

Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

TV-CATV MODE SELECT SWITCH

In TV position, sends power and channel select commands (Channel up/down and Random Access buttons) to the TV.
In CATV position, sends power and channel select commands to a cable TV converter.

VCR CONTROL

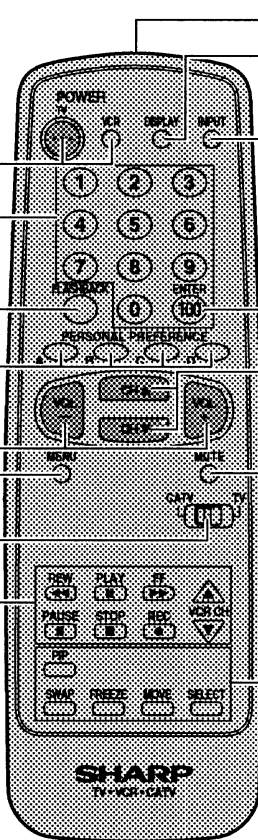

Infrared Transmitter Window

DISPLAY

Press → Displays receiving channel for 4 seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INPUT

Press → Switch to external video INPUT 1 mode.
Press again → Switch to external video INPUT 2 mode.
Press 3 times → Switch back to the original TV mode.

ENTER

Used in some instances where a VCR or Cable Converter Box requires an "enter" command after selecting channels, when using the REMOTE KEYPAD button.

CHANNEL UP/DOWN

(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the "◆" mark of the MENU screens.

MUTE

Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

PIP FUNCTION

With the VIDEO inputs, you can watch two pictures at the same time.

Note:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

INSTALLATION AND SERVICE INSTRUCTIONS

- Note:** (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
(2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 5.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

- 1) Apply 120V AC using a variac transformer for accurate input voltage.
- 2) Allow for warm up and adjust all customer controls for normal picture and sound.
- 3) Receive a good local channel.
- 4) Connect a digital voltmeter to TP653 and make sure that the voltmeter reads $13.8 \pm 0.7V$ (32L-S400, CL32S40)/ $13.2 \pm 0.7V$ (36L-S400, CL36S40).
- 5) Apply external 17.0V DC (32L-S400, CL32S40)/16.2V DC (36L-S400, CL36S40) at TP653 by using an external DC supply, TV must be shut off.
- 6) To reset the protector, unplug the AC cord and plug the AC cord power on. Now make sure that normal picture appears on the screen.
- 7) If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S19" and Bus data "01" (Y-mute on).
4. The voltage should be approximately 32.8kV(32L-S400, CL32S40)/33.4kV(36L-S400, CL36S40) (at zero beam).

If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required. See "Table-B" to determine, if service adjustments are required.

1. Service mode

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer controls are in their proper (reset) position.

2. Service number selection

Once in the service mode, press the Ch-up or Ch-down button on the remote controller or at the set. The service adjustment number will vary in increments of one, from "S01" to "P07". Select the item you wish to adjust.

3. Data number selection

Press the Vol-up or down button to adjust the data number.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket. Now the TV set is switched on and enters the service mode.

To exit the service mode, turn the television off by pressing the power button.

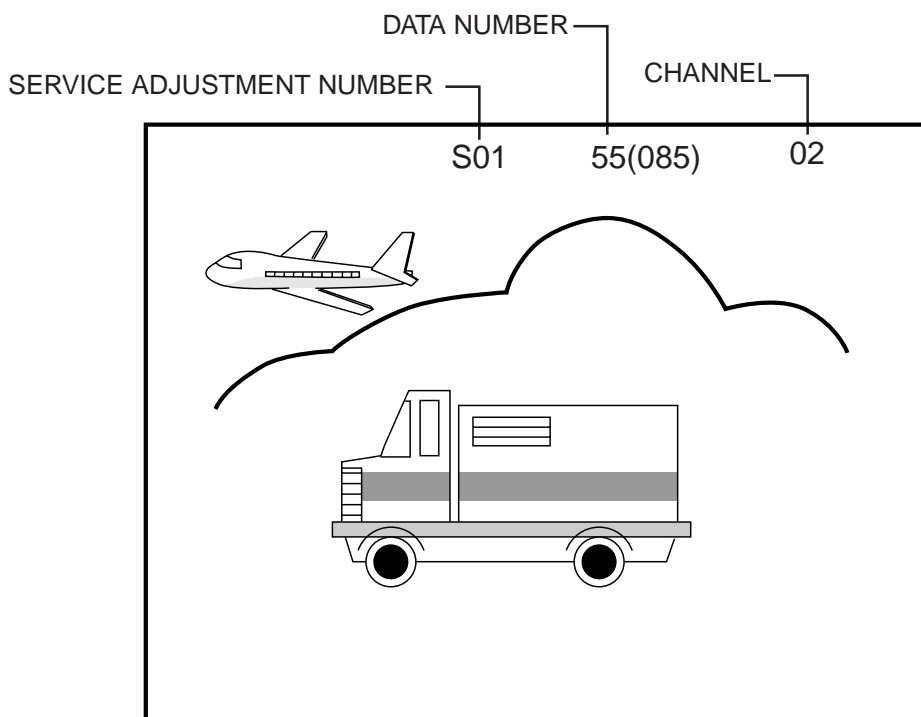


Figure A.

SERVICE NUMBER	ADJUSTMENT ITEM	DATA		ADJUSTMENT CONTENTS
		INITIAL VALUE	RANGE	
S01	PICTURE	55	00-7F	Must be set to "24" Must be set to "00"
S02	TINT	46	00-7F	
S03	COLOR	32	00-7F	
S04	BRIGHTNESS	40	00-7F	
S05	SHARPNESS	28	00-3F	
S06	Vert. PHASE	00	00-07	
S07	Hor. PHASE	12	00-1F	
S08	RF AGC	23	00-3F	
S09	Vert. AMPLITUDE	20	00-3F	
S10	PIF VCO	2C	00-7F	
S11	R CUT-OFF	00	00-FF	Must be set to "01" Must be set to "20"
S12	G CUT -OFF	00	00-FF	
S13	B CUT-OFF	00	00-FF	
S14	G GAIN	7F	00-FF	
S15	B GAIN	7F	00-FF	
S16	TRAP	0	00,01	
S17	BALANCE	20	00-3F	
S18	CC POSITION	17	00-7F	
S19	MUTE	00	00,01,03	
S20	ENERGY SAVE OFFSET	20	00-3F	
S21	D.D.E. OFFSET	03	00-1F	"00" : NORMAL, "01" : Y-MUTE, "03" : V-STOP & Y-MUTE Must be set to "23" Must be set to "03" Must be set to "00" Must be set to "00" Must be set to "FE"
S22	OSD SETUP	00	00-03	
S23	TUNER SETUP	00	00,01	
OP	OPTION	30	00-FF	
M01	INPUT LEVEL	0A	00-0F	
M02	ST VCO	20	00-3F	
M03	FILTER	1C	00-3F	
M04	WIDE BAND	20	00-3F	
M05	SPECTRAL	1B	00-3F	
P01	PIP Y-LEVEL	30	00-7F	
P02	PIP TINT	29	00-3F	Must be set to "29"
P03	PIP COLOR	2E	00-7F	
P04	PIP Y-OFFSET	09	00-1F	
P05	PIP H-POS.	0A	00-FF	
P06	PIP BGPM	00	00-0F	
P07	PP FREERUN	0B	00-0F	

Table - A

Holding down both the CH-up/down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2101.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201 and MTS level (M01).
IC2101	X		Holding down both the CH-up/down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2101. Then perform a complete adjustment.
CRT	X		Adjust items related to picture tube only.
IC3001	X		Adjust items related to MTS only (M01~M05).
IC1801	X		Adjust items related to P-IN-P only (P01~P07).

Table - B

■ SERVICE ADJUSTMENT

VCO Adjustment

1. Connect a digital voltmeter between pin (44) of IC201 and ground.
2. Receive a good local channel.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data so that digital voltmeter reads 2.2V.
5. Adjustment is completed, remove the voltmeter, return to "normal" mode.

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S08".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

Note 1 : You will have to come out of the service mode to select another channel.

Note 2 : Setting the data to "00" will produce a black raster.

Screen Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S03" and set the data value to "00" to set the color level to minimum. (Record original data code under adjustment "S03" before changing) You may skip this step, if you selected a B/W picture or monoscope pattern.
3. Select the service adjustment "S19" and adjust the data value to "01", this turn off the luminance signal (Y-mute).
4. Select the service adjustment "S04" and adjust data value to "4B".
5. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
6. Adjust the service adjustments "S11" red, "S12" green and "S13" blue to obtain a good grey scale with normal whites at low brightness level.
7. Select the service adjustment "S19" and reset data to "00". Select the service adjustment "S03" and reset data to obtain normal color level.
8. Reset the master screen control to obtain normal brightness range.

White Balance Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S03" and set to "00" (minimum color)(Record original data code under adjustment "S03" before changing). "S03" does not have to be adjusted, if you selected a B/W picture or monoscope pattern.
3. Alternately adjust the service adjustment data of "S14" and "S15" until a good grey scale with normal whites is obtained.
4. Select the service adjustment "S03" and adjust data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S01".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set customer tint control to center of it's range.
3. Enter the service mode and select the service adjustment "S02".
4. Adjust "S02" data value to obtain normal flesh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position .
3. Enter the service mode and select service adjustment "S03".
4. Adjust "S03" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S04".
4. Adjust "S04" data value to obtain normal brightness level.

Vertical-Size and Linearity Adjustments

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S09".
3. While observing the top and bottom of the screen, adjust "S09" data value to proper vertical size.
4. Using the R502 control adjust for the best linearity.

Vertical Phase Adjustment

1. Enter the service mode and select the service adjustment "S06".
2. Adjust data value to "00".
Note: This must be set "00" when changed data retrace line will appear.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S07".
3. Adjust "S07" data value so that picture is centered.

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S18".
3. A black text box appears on the screen. (see **Figure B.** below)
4. Adjust "S18" data value so that text box is positioned in the center of the screen.

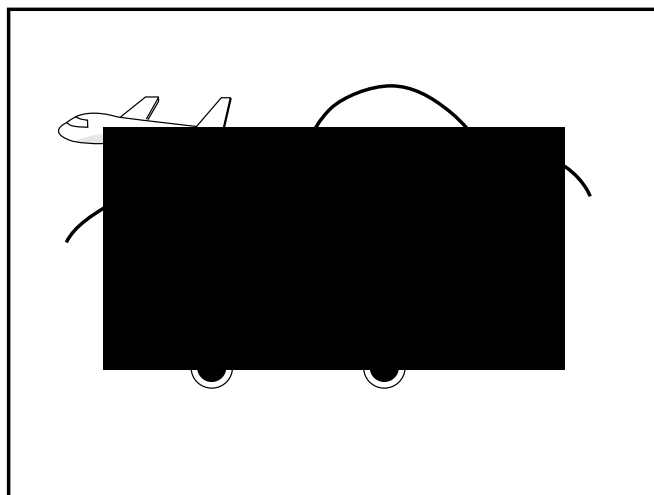


Figure B.

3.58MHz Trap Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S16".
3. This is a two position adjustment, "00" is ON, "01" is OFF.
4. Adjust data value to "01" for normal viewing.

Sharpness and Audio Balance Adjustments

1. Receive a good local channel.
2. Enter the service mode and select the service adjustments "S05" for sharpness and "S17" for audio balance.
- **Sharpness adjustment**
3. Adjust data value to "24"(center of data range) for sharpness adjustment.
- **Audio balance adjustment**
4. Adjust data value to "20"(center of data range) for Audio balance adjustment.

Vertical Center Adjustment

1. Receive a good CATV channel.
2. Adjust the S502 so that the picture is centered.

Side Pincushion Adjustment

1. Receive a good CATV channel or crosshatch pattern signal.
2. Adjust the R676 so that the outermost line on the screen is straight.

Horizontal Size Adjustment

1. Receive a good CATV channel or crosshatch pattern signal.
2. Adjust the R678 so that the best horizontal size.

Energy save offset Adjustment

1. Enter the service mode and select the service adjustment "S20".
 2. Adjust data value to "23".
- Note :** This position is used to preset the level for the energy save function.

Other Adjustments

1. Enter the service mode.
2. Adjust the following data values as listed below.

S21	"03"	DDE OFFSET
S22	"00"	OSD SETUP
S23	"00"	TUNER SETUP

■ MTS ADJUSTMENT

MTS Level Adjustment

1. Feed the following monaural signal to pin (14) of IC3001.
Monaural signal : 300Hz, 245mVrms
2. Connect the rms voltmeter to pin (39) of IC3001.
3. Enter the service mode and select the service adjustment "M01".
4. Adjust the data so that the rms voltmeter reads.
Spec : $490 \pm 10\text{mVrms}$.

MTS VCO Adjustment

1. Keep the unit in no-signal state.
2. Connect the frequency counter to pin (39) of IC3001.
3. Connect a capacitor (100 μ F, 50V) in between positive(+) side of C3005 and ground.
4. Enter the service mode and select the service adjustment "M02".
5. Adjust the data so that the frequency counter reads.
Spec : $62.94 \pm 0.75\text{kHz}$.

Filter Adjustment

1. Feed the following stereo pilot signal to pin (14) of IC3001 .
Stereo pilot signal: 9.4kHz, 600mVrms.
2. Enter the service mode and select the service adjustment "M03".
3. Adjust the data until "OK" appears in position on the screen. Make sure the "OK" is displayed almost at the center of the data range.

Separation Adjustment

1. Connect the rms voltmeter to pin (39) of IC3001.
2. Receive the following composite stereo signal 1.
Composite stereo signal: 30% modulation, left channel only, noise reduction on, 300Hz
3. Enter the service mode and select the service adjustment "M04".
4. Adjust the data until the AC voltage reading of the RMS voltmeter is minimum.
5. Receive the following composite stereo signal 2.
Stereo signal: 30% modulation, left channel only, noise reduction on, 3kHz
6. Enter the service mode and select the service adjustment "M05".
7. Adjust the data until the AC voltage reading of the RMS voltmeter is minimum.
8. Take the above steps 1 thru 8 again for fine adjustment.

■ P-IN-P ADJUSTMENT

P-IN-P Y LEVEL Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "P01".
3. Adjust "P01" data value to obtain normal contrast level.

P-IN-P TINT Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "P02".
3. Adjust data value to "29".

P-IN-P COLOR Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position.
3. Enter the service mode and select service adjustment "P03".
4. Adjust "P03" data value to obtain normal color level.

P-IN-P Y-OFF SET Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "P04".
3. Adjust data value to "09".

P-IN-P H-POSITION Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "P05".
3. Adjust data value to "0A".

P-IN-P BURST GATE PULSE (for MAIN)

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "P06".
3. Adjust data value to "00".

P-IN-P FREE RUN

1. Receive a good local channel.
2. Enter the service mode and select service adjustment "P07".
3. Adjust data value to "0B".

CHASSIS LAYOUT

H

G

F

E


D

C


B

A


PWB-B

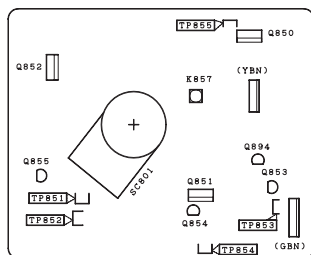


PWB-F

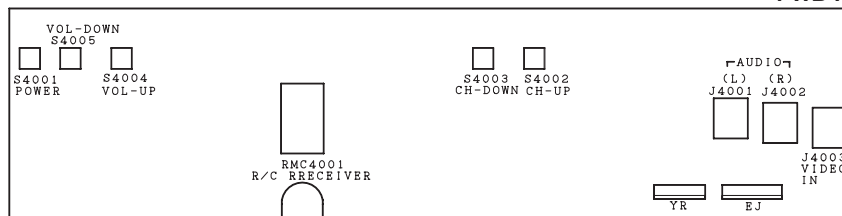

PWB-R

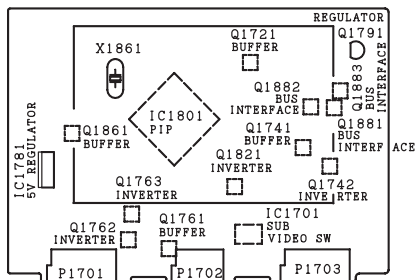

PWB-A

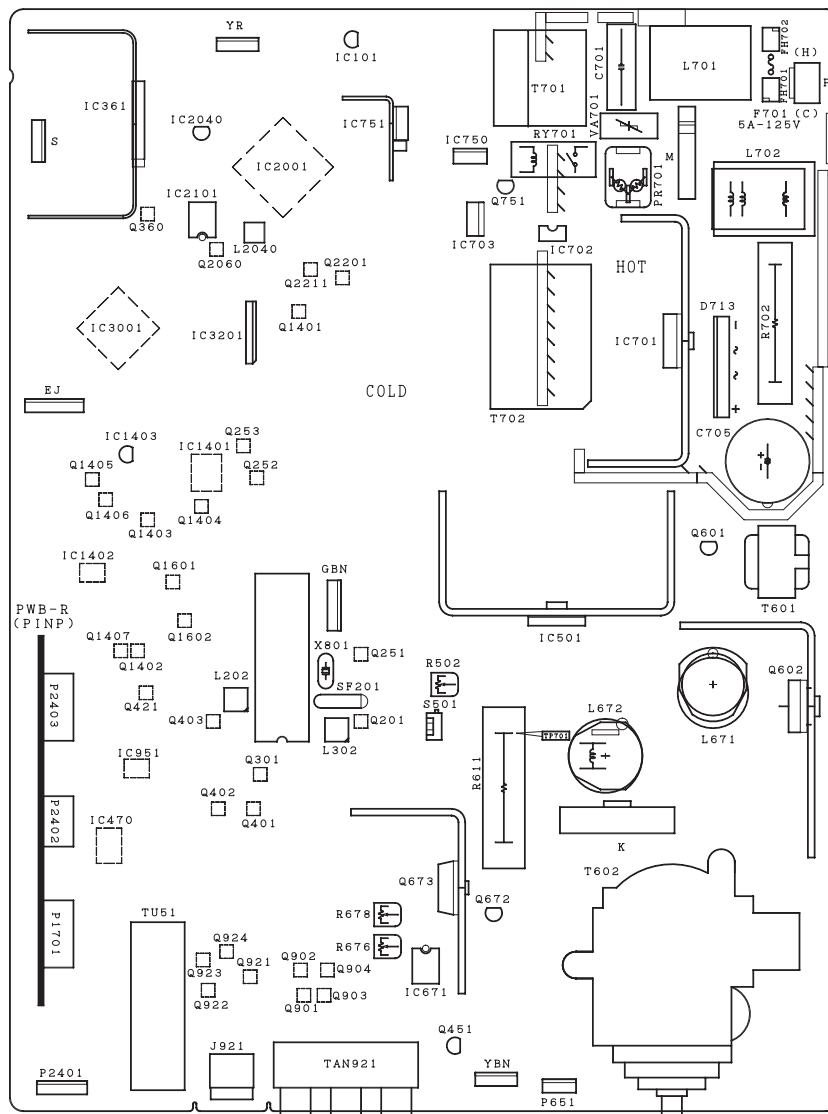

1

2


3

4

5

6

BLOCK DIAGRAM

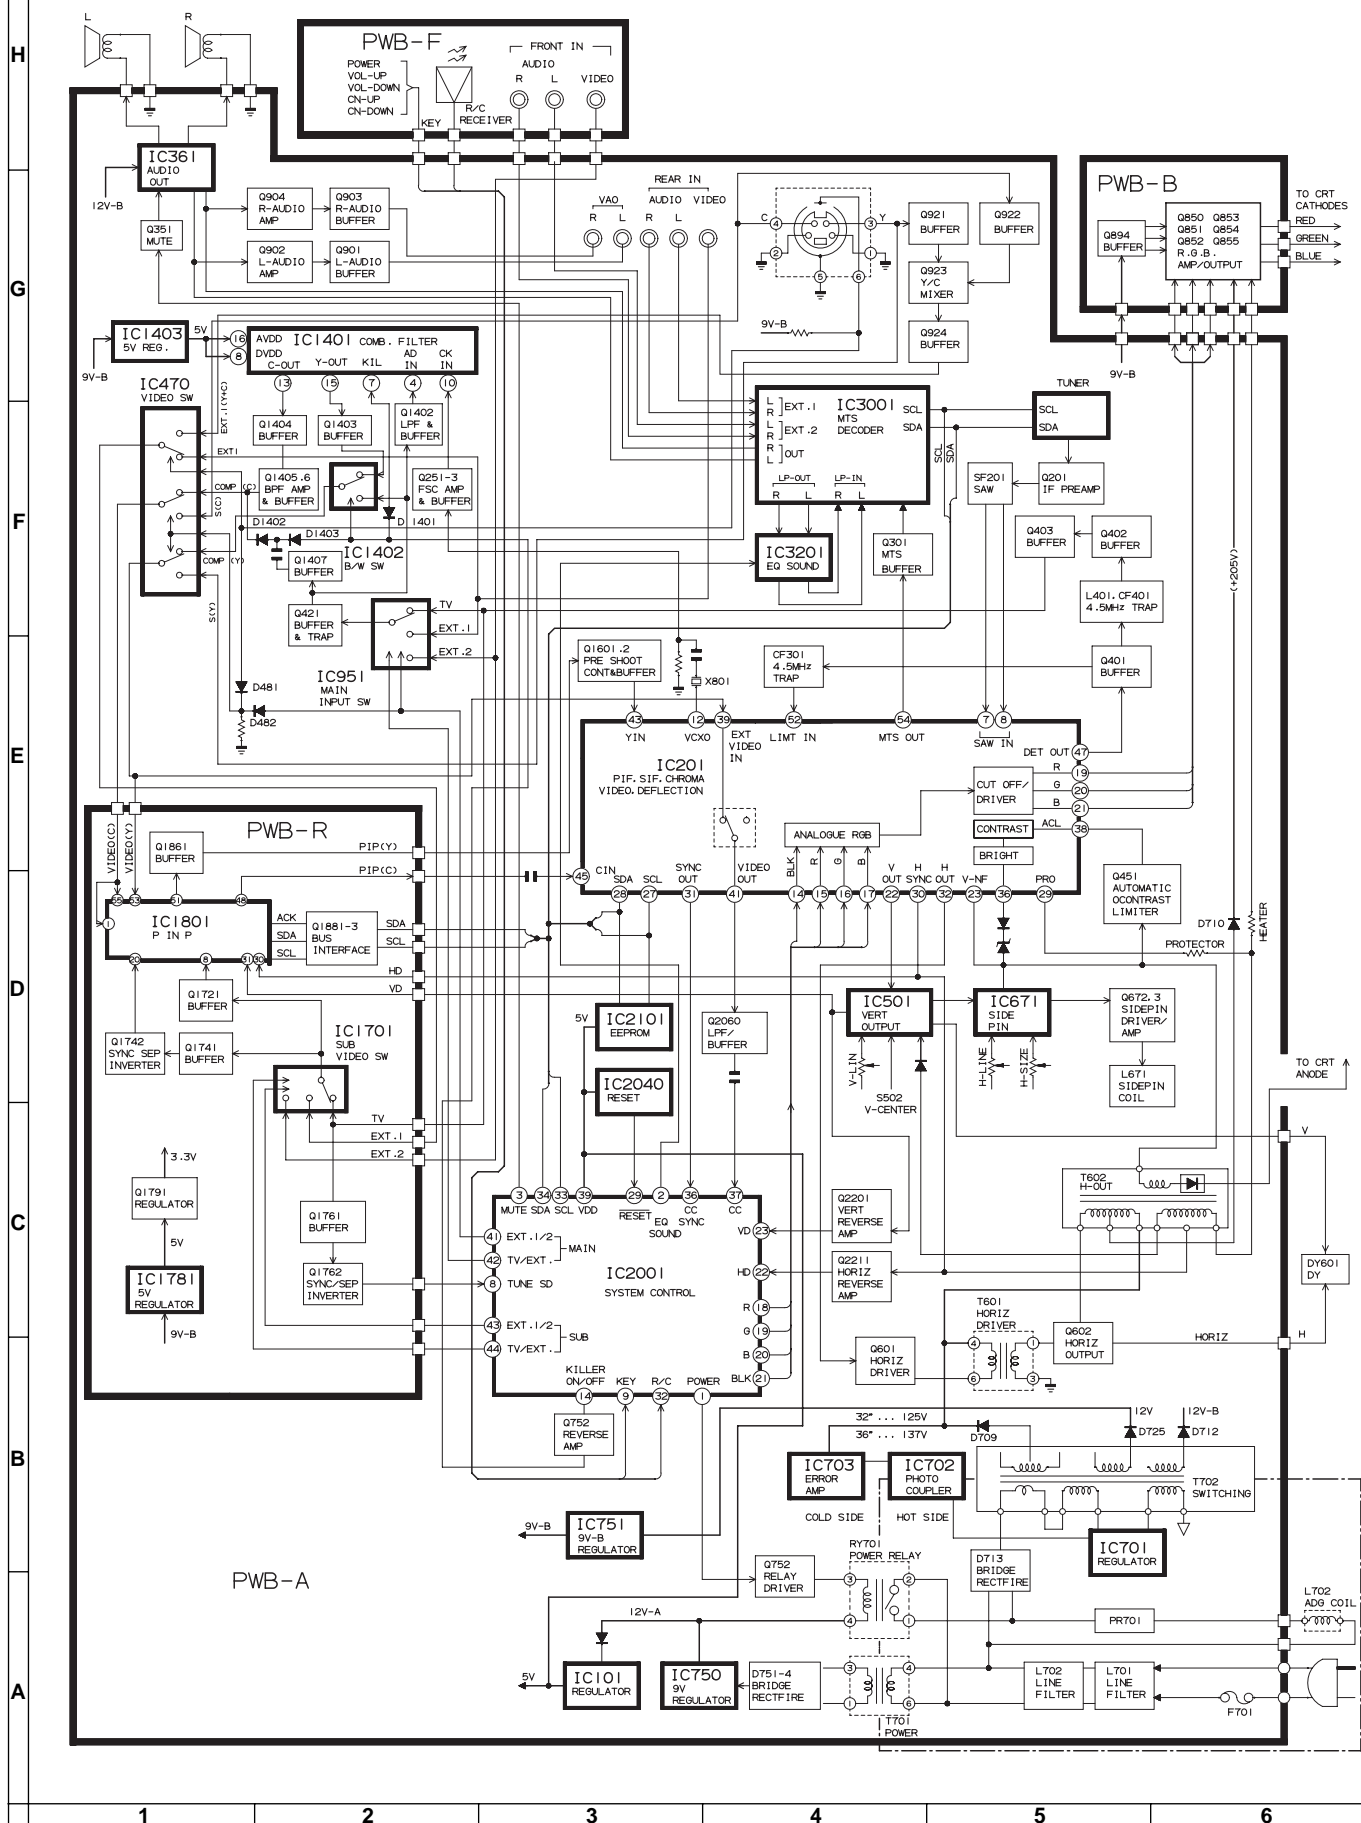

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. The unit of resistance "ohm" is omitted.
($K=k\Omega=1000\Omega$, $M=M\Omega$)
2. All resistors are 1/8 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
($P=pF=\mu\mu F$)
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. \perp indicates line isolated ground.
6. \downarrow indicates hot ground.

VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with 1000 μ V B & W or Color signal.

WAVEFORM MEASUREMENT CONDITIONS:


1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2. \bigcirc indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)

\triangle AND SHADED () COMPONENTS
= SAFETY RELATED PARTS.
 \blacktriangle MARK= X-RAY RELATED PARTS.


DRGANNES MARQUES \triangle ET HACHRES ():
PIECES RELATIVES A LA SECURITE.
MARQUE \blacktriangle : PIECS RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.


WAVEFORMS

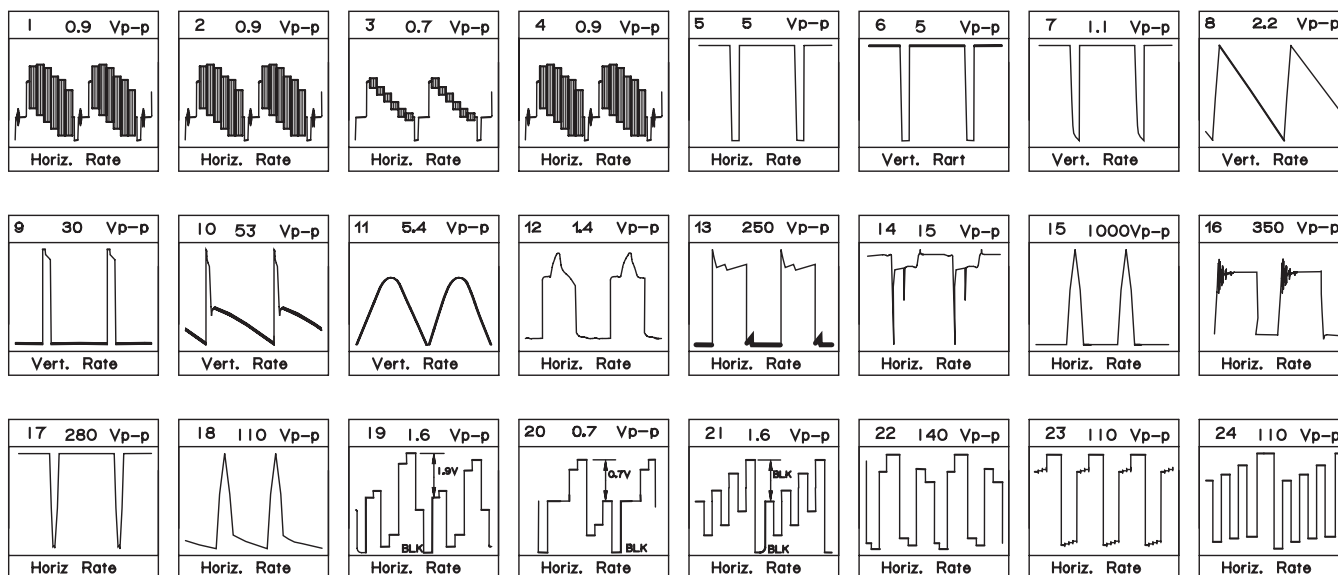




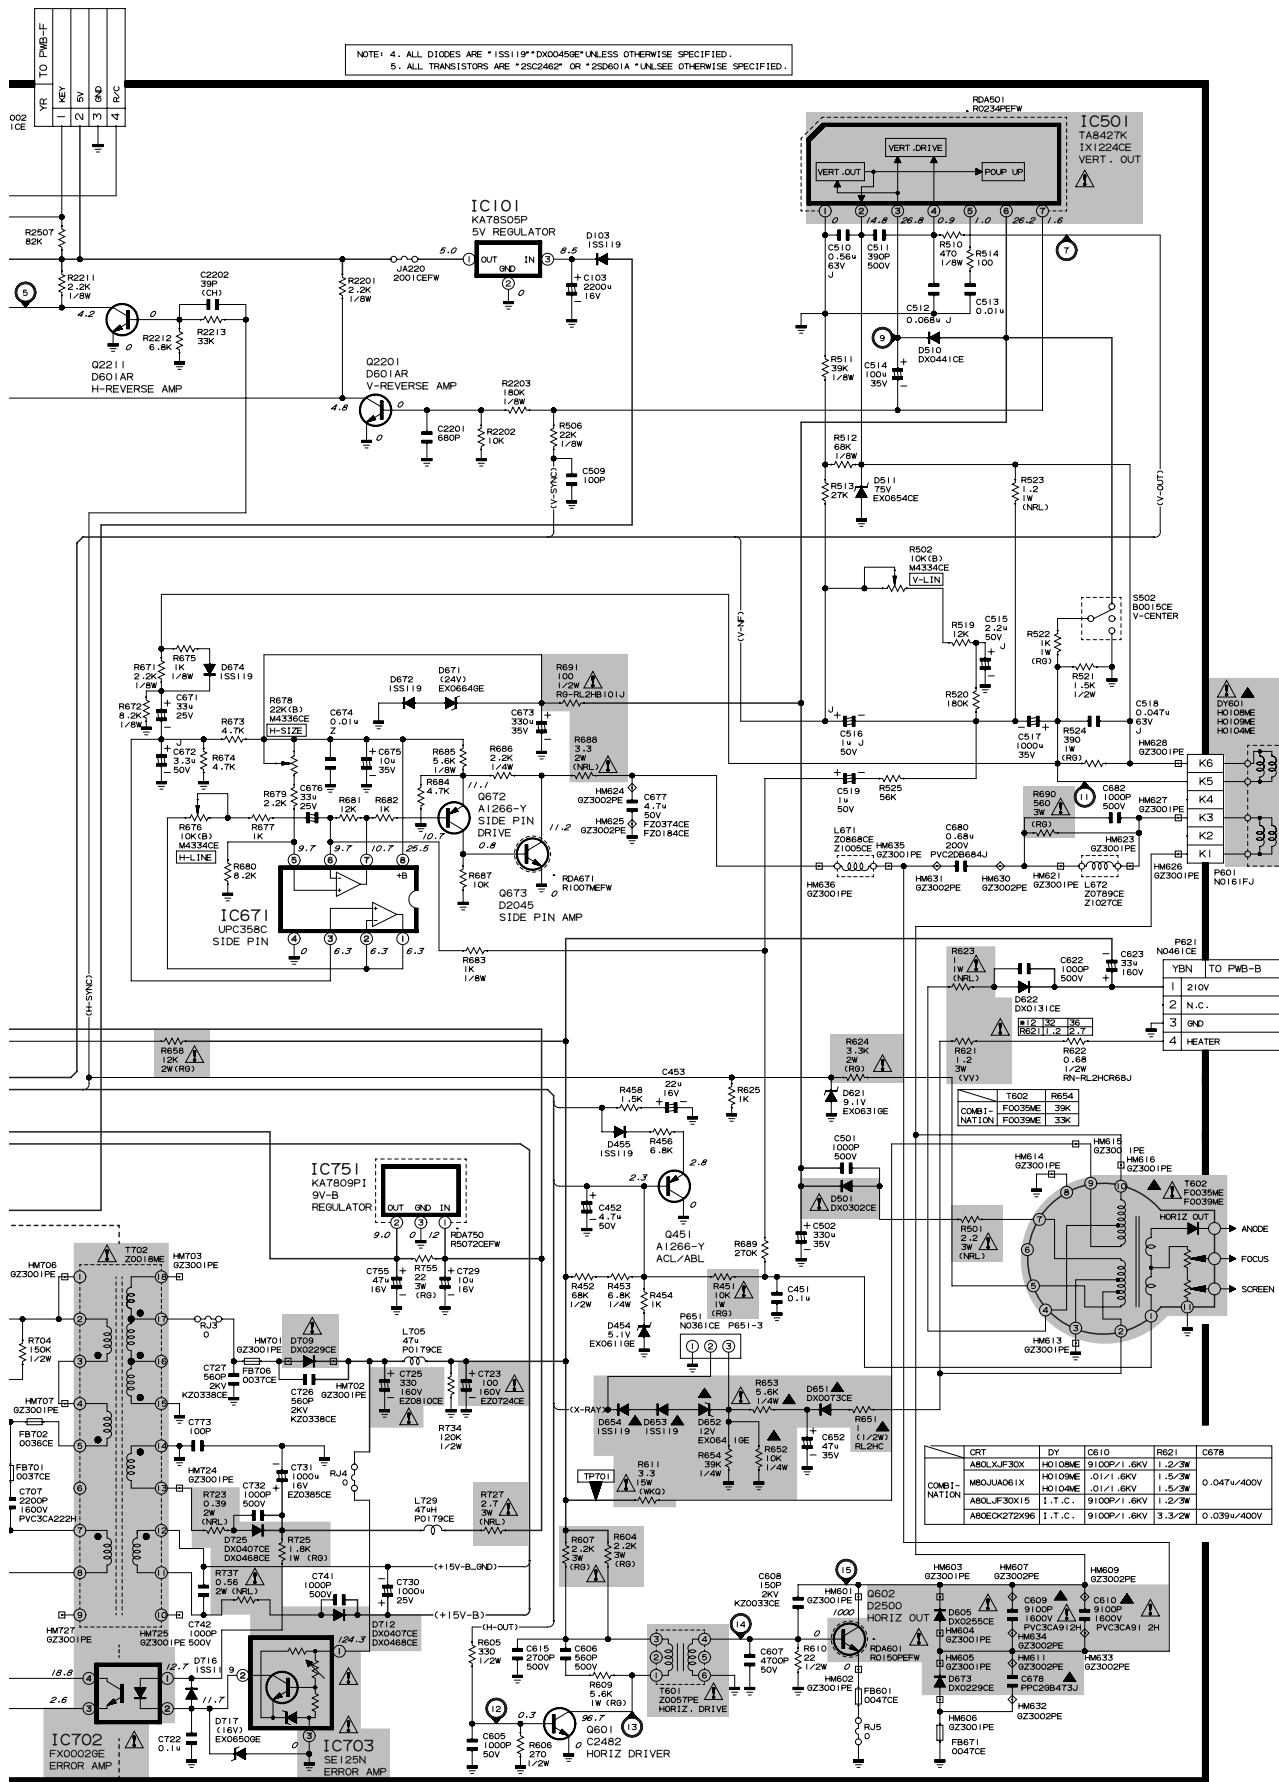

MODELS 32L-S400, CL32S40 SCHEMATIC DIAGRAM: MAIN-2 Unit

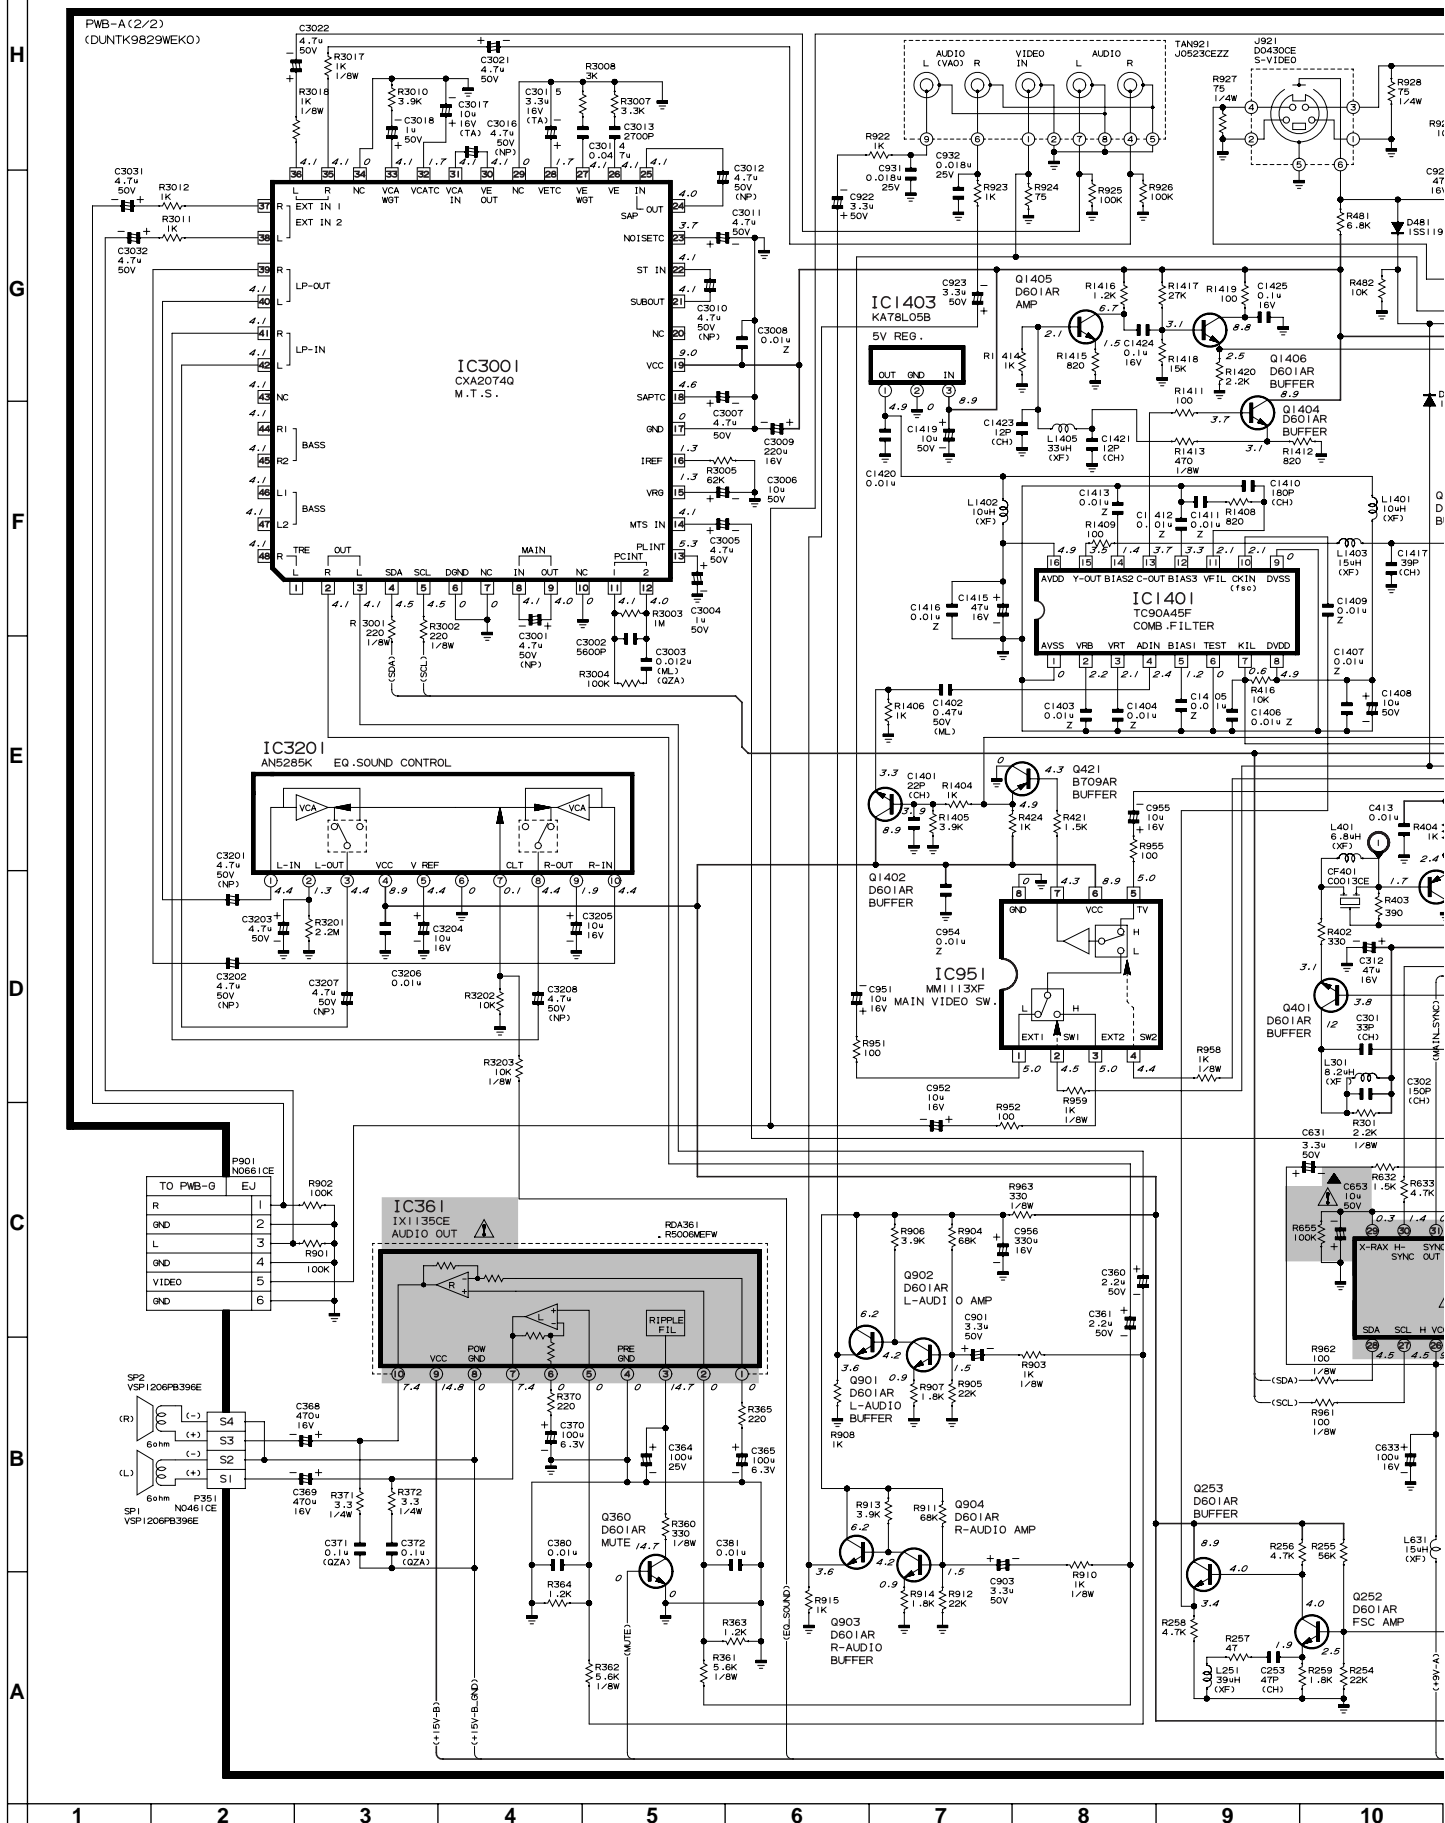


NOTE: 4. ALL DIODES ARE "1SS119" OR "DX00450E" UNLESS OTHERWISE SPECIFIED.
5. ALL TRANSISTORS ARE "2SC2462" OR "2SD601A" UNLESS OTHERWISE SPECIFIED.

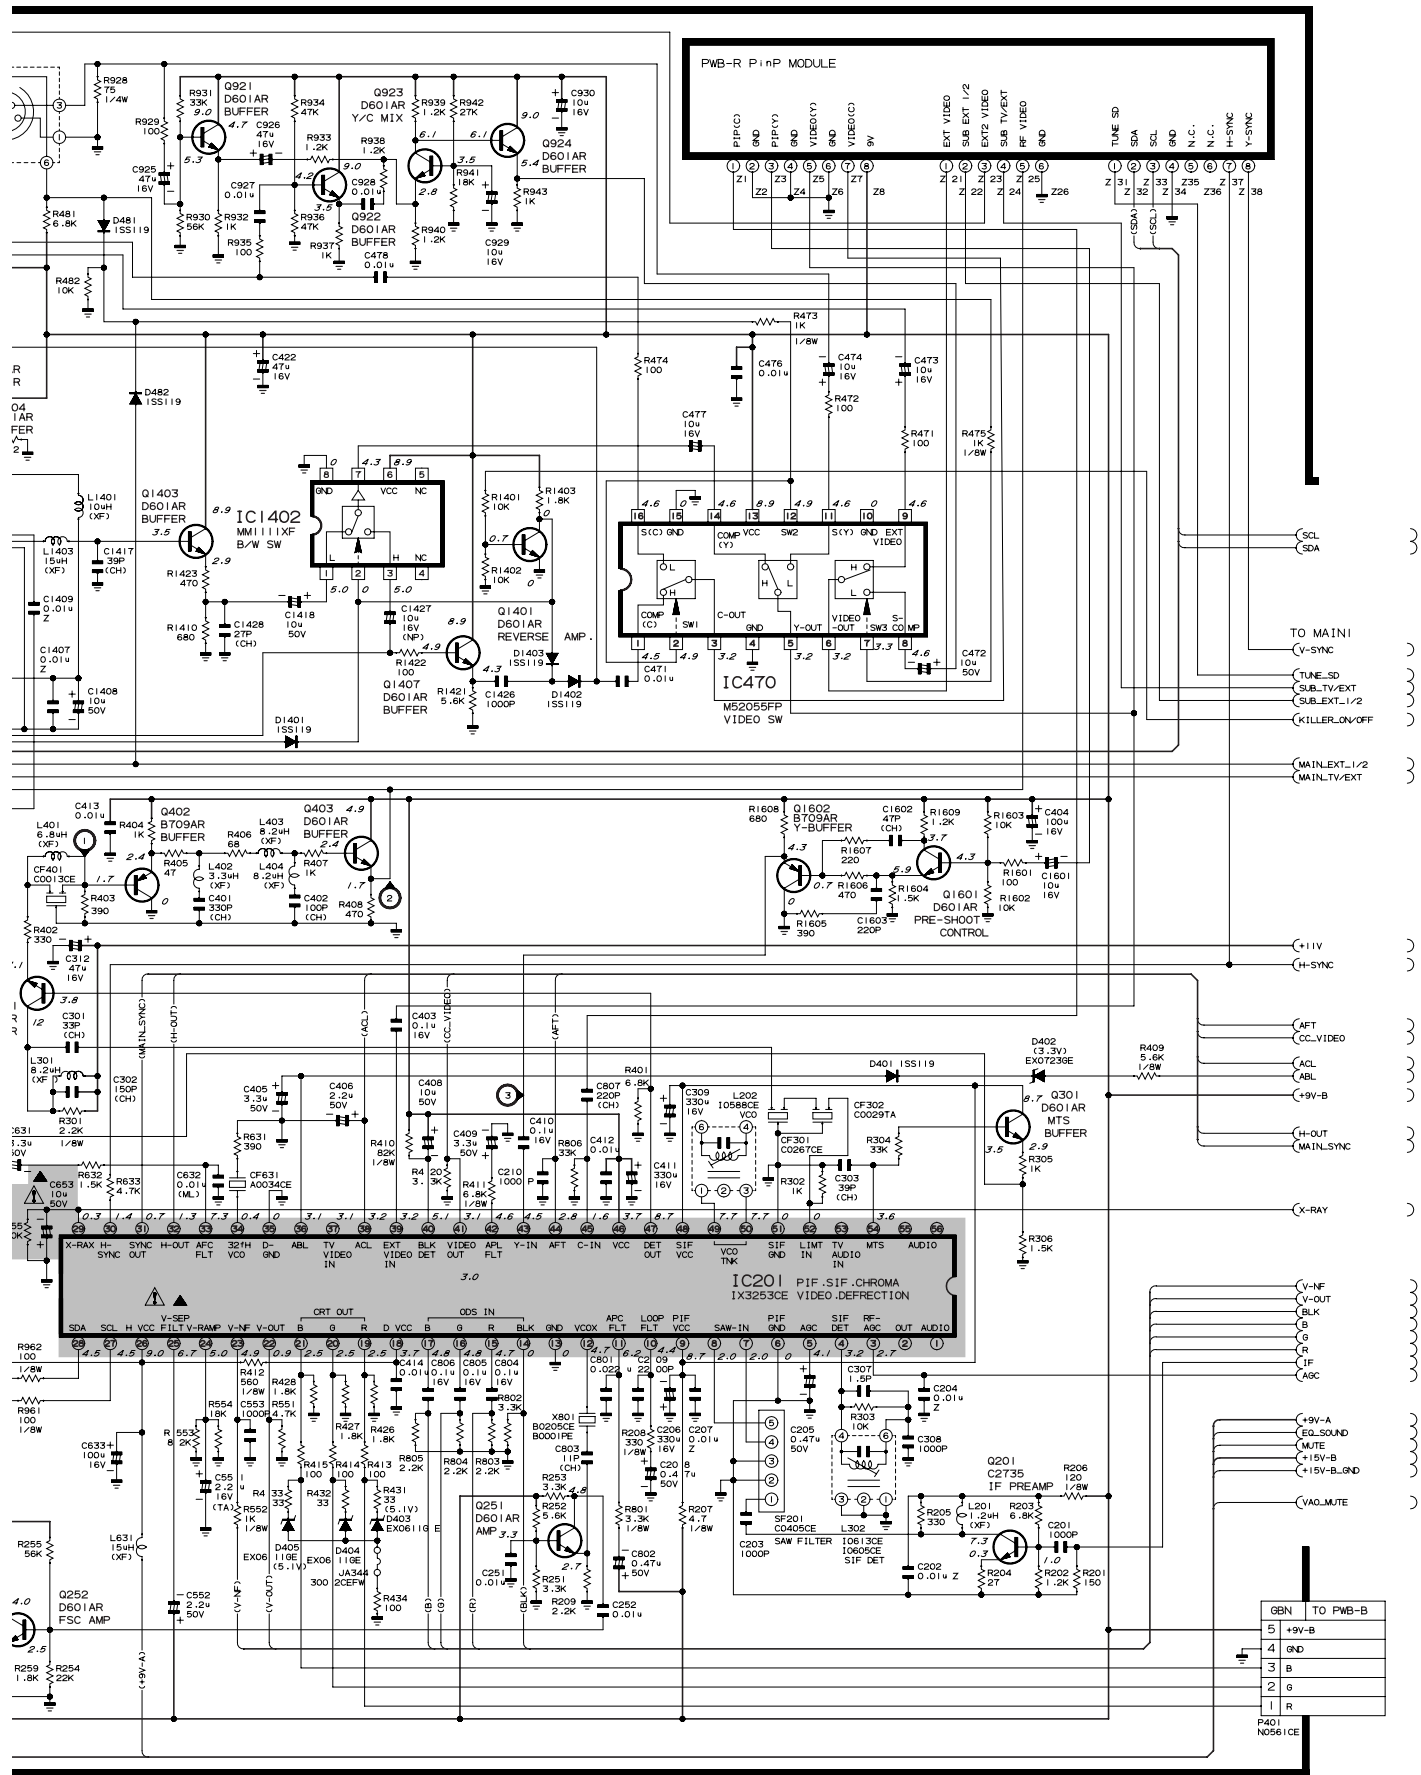


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----






MODELS 36L-S400, CL36S40 SCHEMATIC DIAGRAM: MAIN-2 Unit

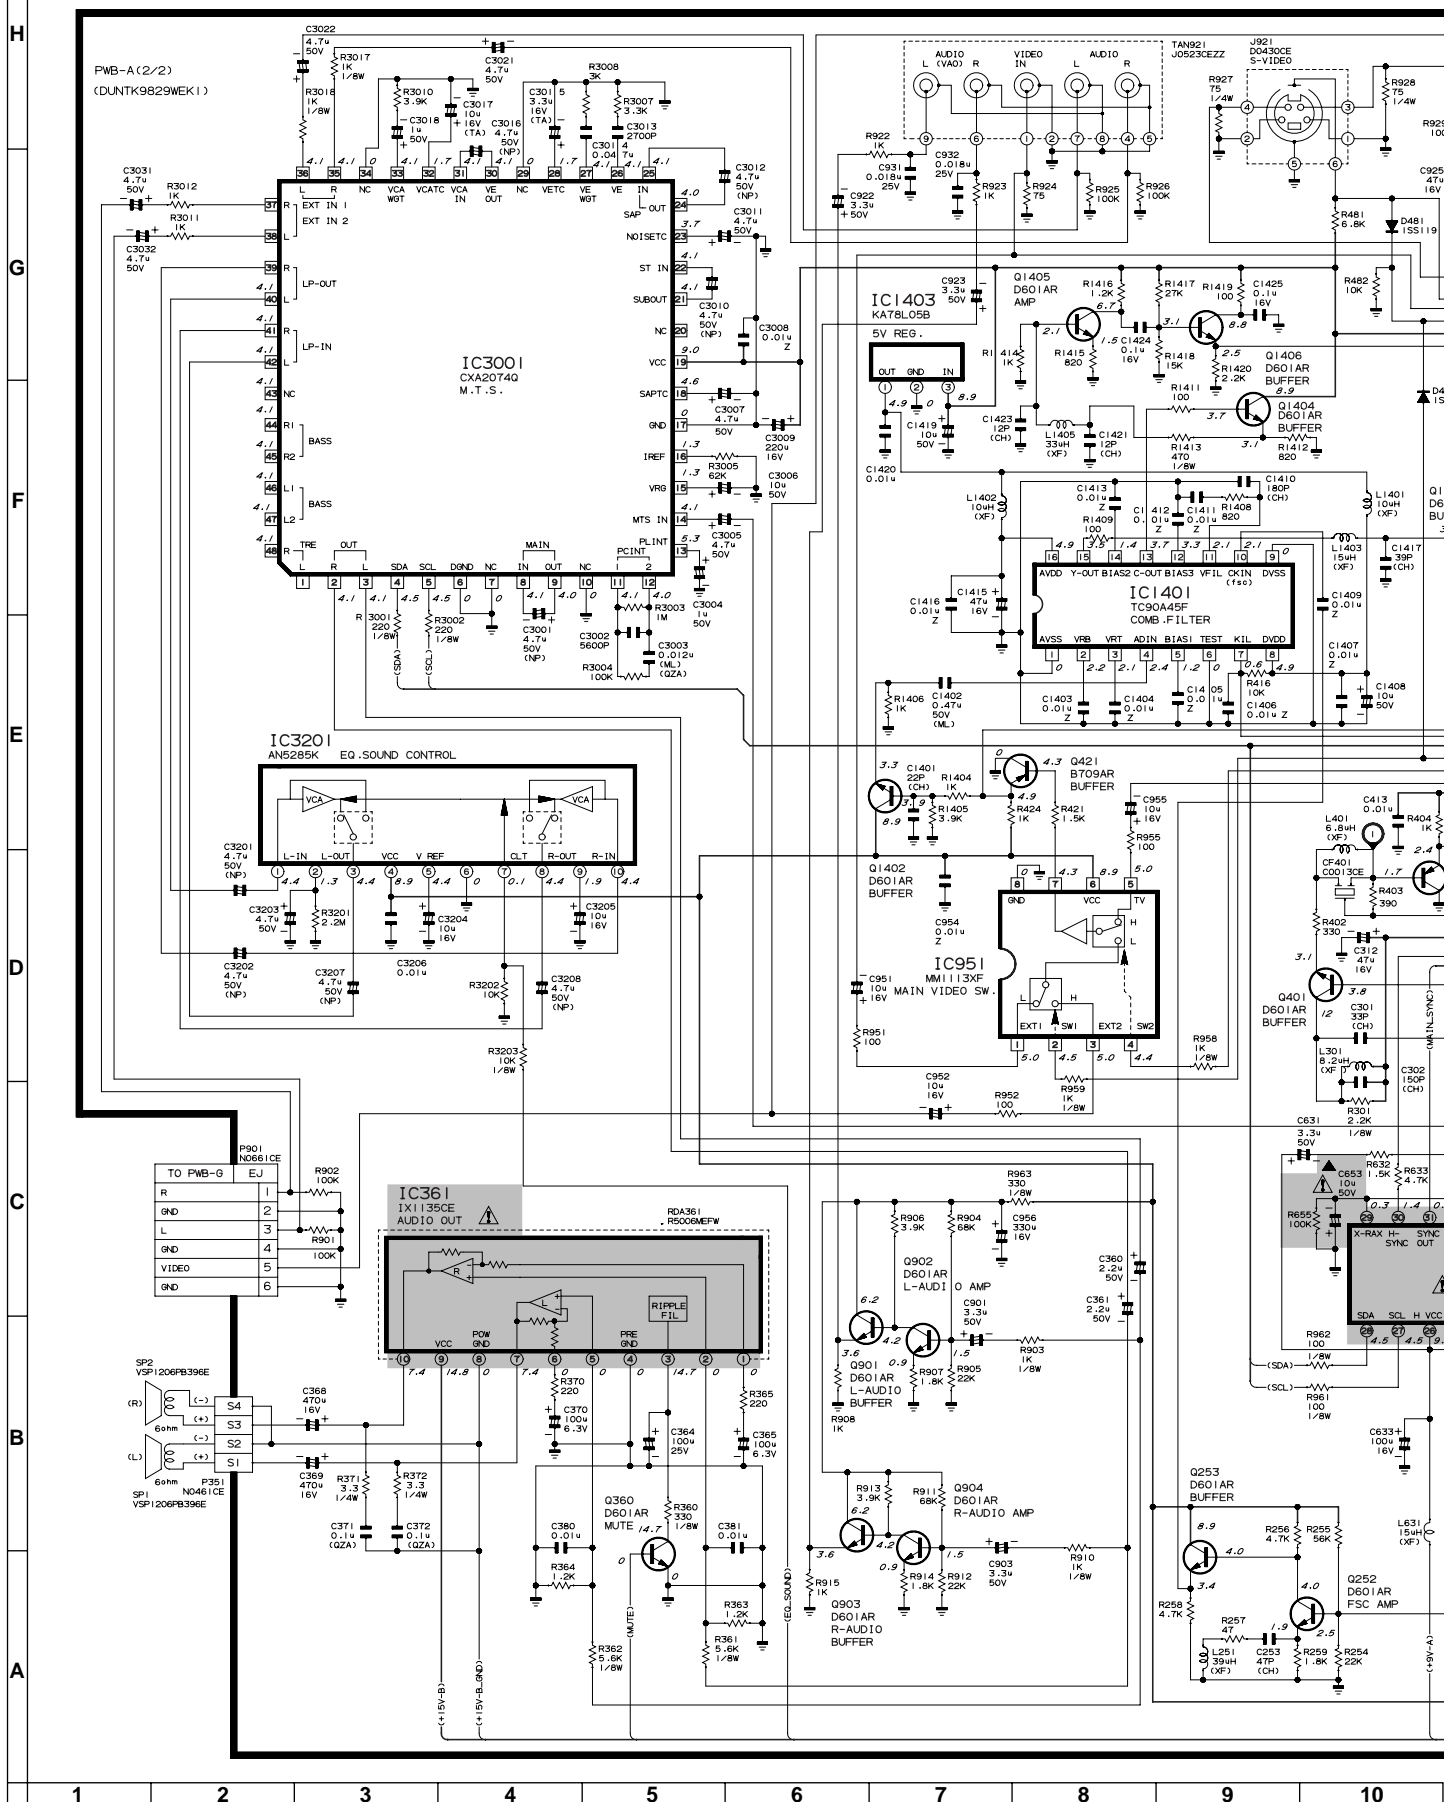

NOTE: 4. ALL DIODES ARE *1SS119*DX00456E*UNLESS OTHERWISE SPECIFIED.
5. ALL TRANSISTORS ARE *2SC2462* OR *2SD601A*UNLESS OTHERWISE SPECIFIED.

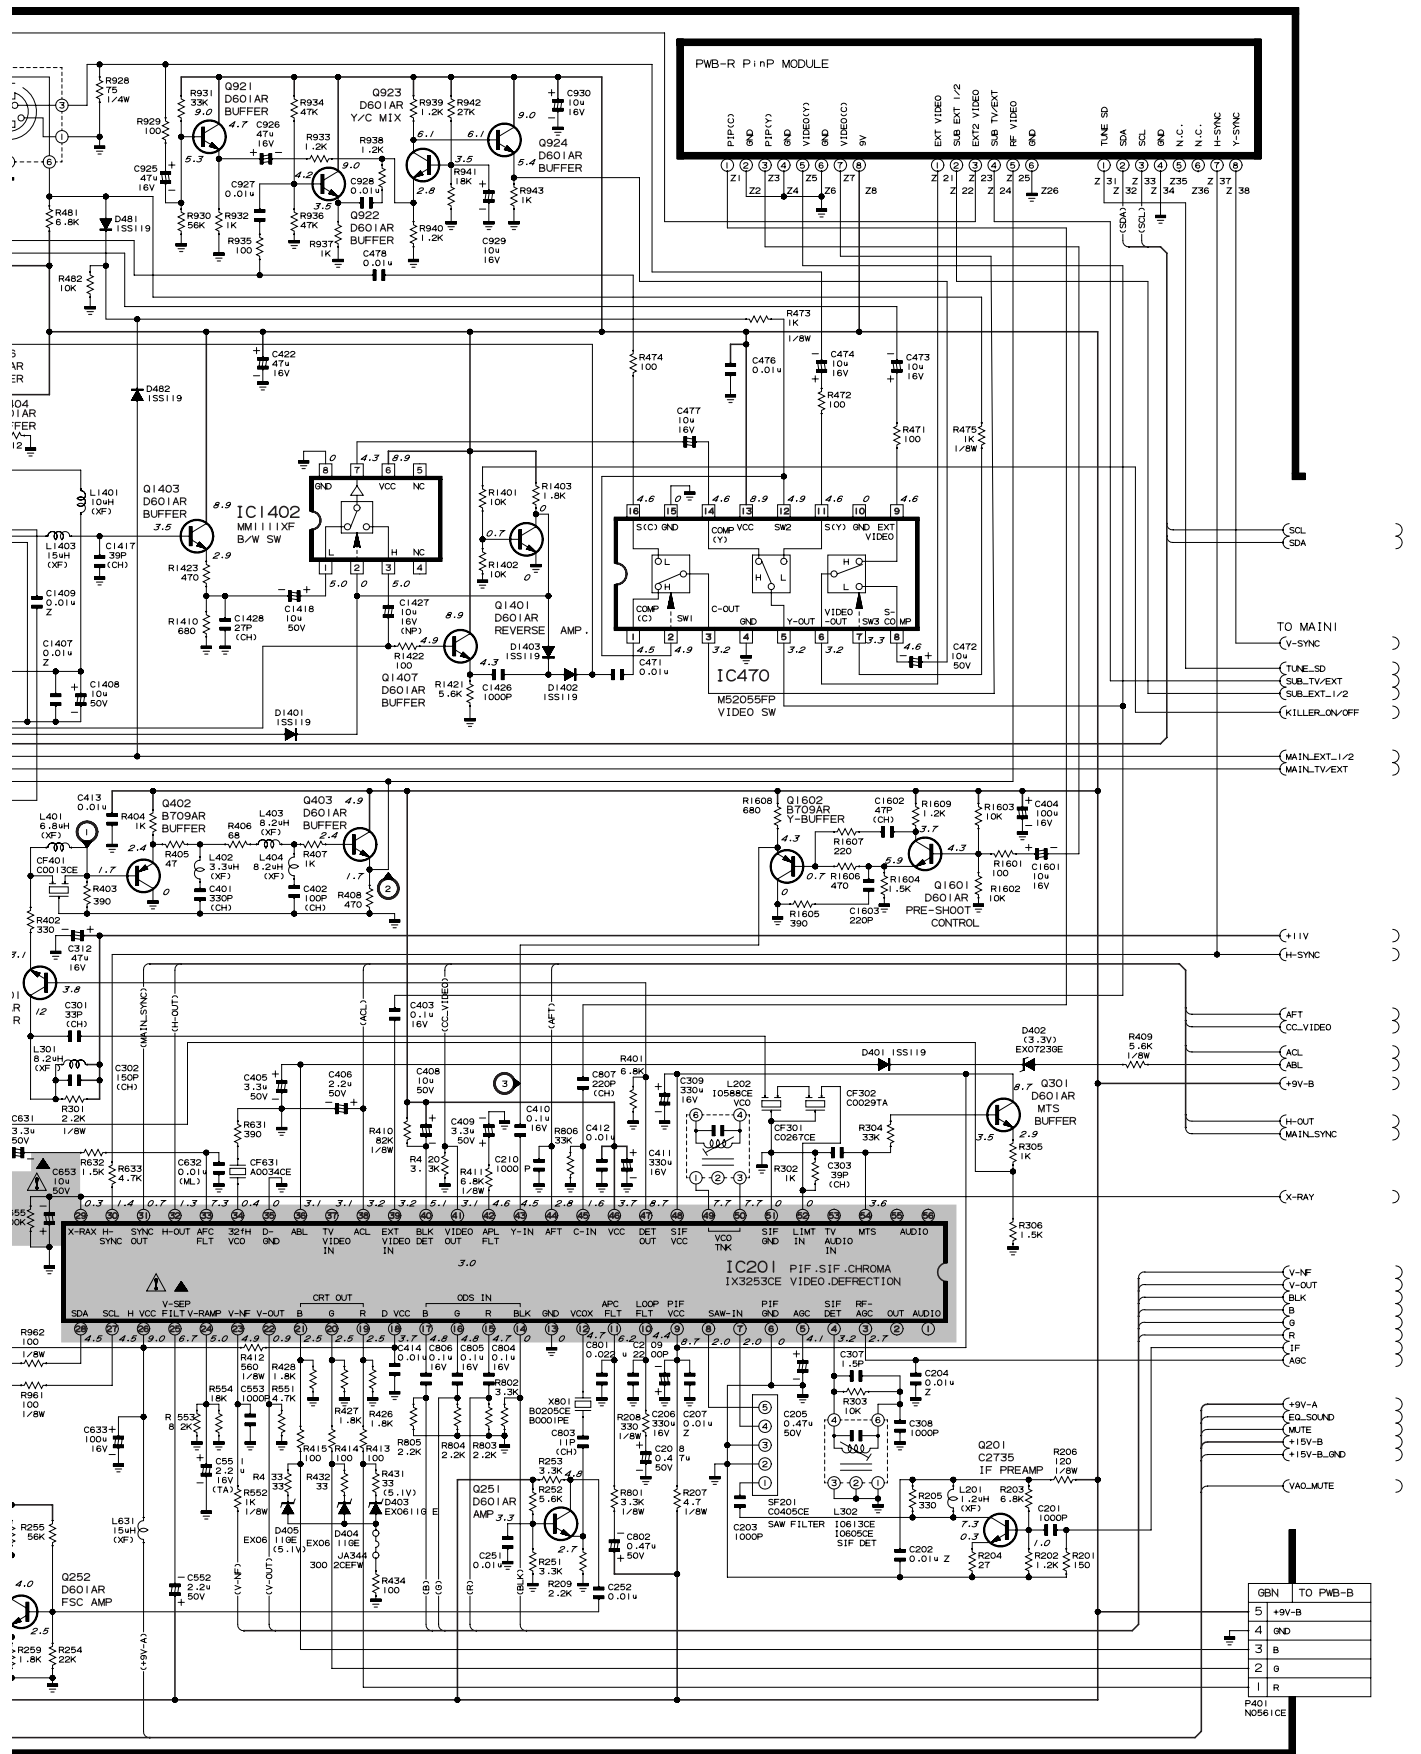


10	11	12	13	14	15	16	17	18	19
----	----	----	----	----	----	----	----	----	----

SCHEMATIC DIAGRAM: CONTROL Unit

CONTROL

PWB-F
(DUNTK9514WEK0)

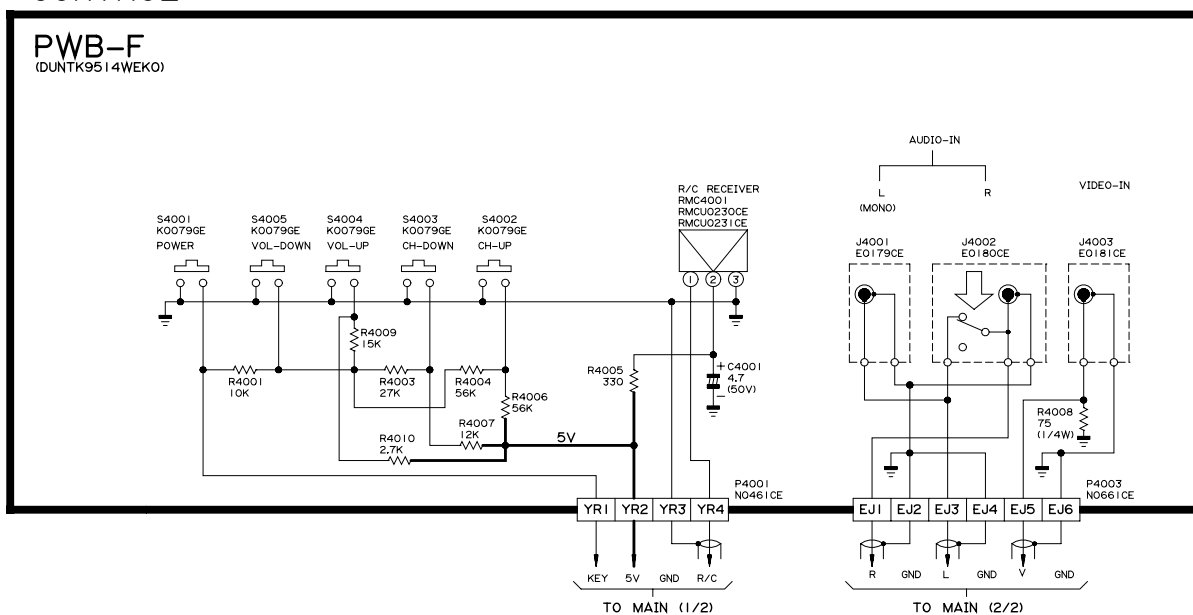





H

G

F


E

D


C

B

A

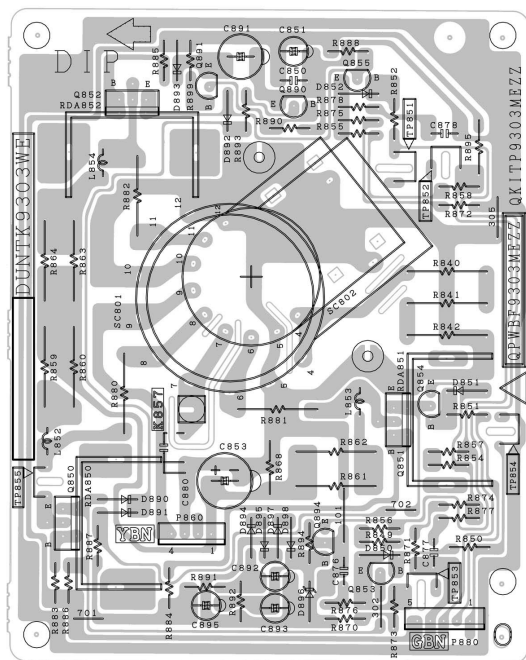


PWB-B: CRT Unit (Wiring Side)

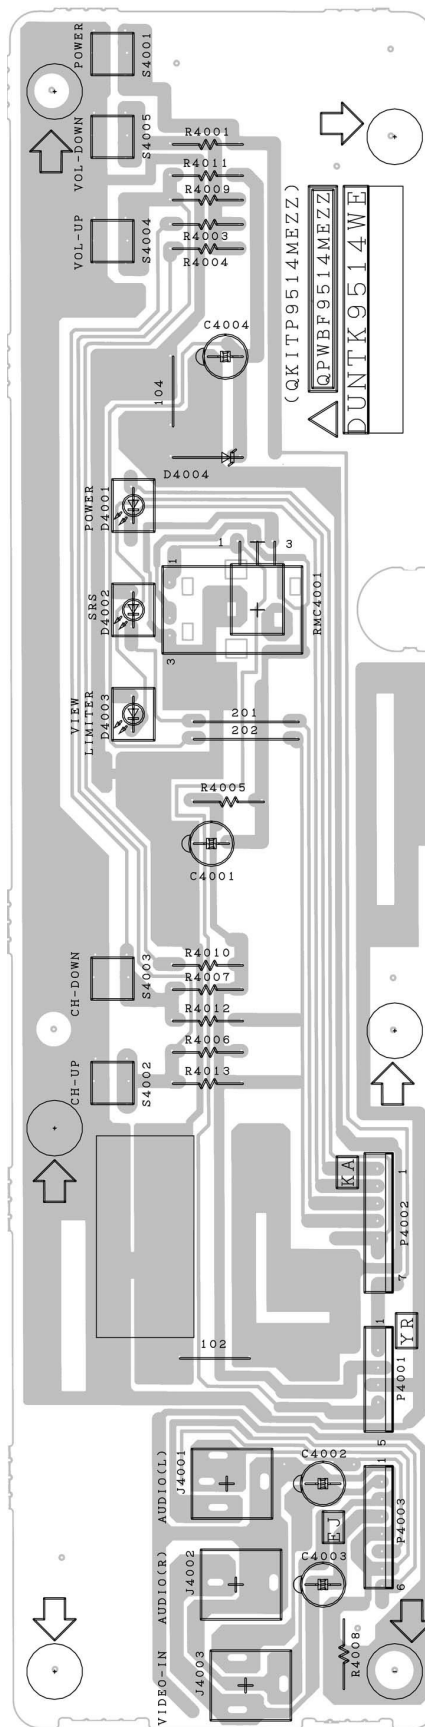

PWB-F: CONTROL Unit (Wiring Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by  and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |

in **USA**: Contact your nearest SHARP Parts Distributor to order.
For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

★MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK : X- RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PICTURE TUBE


32L-S400, CL32S40

▲▲ V101	VB80LJF3015*S	M	Picture Tube (I.T.C.)	DD
	or			
	VB80EKC272X1E	M	Picture Tube (I.T.C.)	
	or			
	VB80LJF30X*S	M	Picture Tube (DY: H0108ME)	
	or			
	VB80JUA061X*S	M	Picture Tube (DY: H0104ME or H0109ME)	
▲▲ DY601	RCiLH0108MEZZ	M	DY (CRT: A80LJF30X)	
	or			
	RCiLH0109MEZZ	M	DY (CRT: A80JUA061X)	
	or			
	RCiLH0104MEZZ	M	DY (CRT: A80JUA061X)	
▲ L702	RCiLG0034MEZZ	M	Degaussing Coil	AV
	or			
	RCiLG0028MEZZ			
	MSPRT0002MEZZ	M	Spring for CRT	AA
	QEARC3102MEZZ	M	Grounding Part	AH

	CRT	DY	C610	R621	C676
COMBI-NATION	A80LJF30X	H0108ME	9100p /1.6kV	1.2/3W	0.047/400V
	M80JUA061X	H0109ME	0.01 /1.6kV	1.5/3W	
		H0104ME	0.01 /1.6kV	1.5/3W	
	A80LJF30X15	I.T.C.	9100p /1.6kV	1.2/3W	
	A80EKC272X1	I.T.C.	9100p /1.6kV	3.3/2W	0.039/400V

LISTE DES PIECES

CHANGE DES PIECES

Les pièces de rechange qui présentent ces caractéristiques spéciales de sécurité, sont identifiées dans ce manuel : les pièces électriques qui présentent ces particularités, sont repérées par la marque  et sont hachurées dans les listes de pièces et dans les diagrammes schématisés.

La substitution d'une pièce de rechange par une autre qui ne présente pas les mêmes caractéristiques de sécurité que la pièce recommandée par l'usine et dans ce manuel de service, peut provoquer une électrocution, un incendie ou tout autre sinistre.

"COMMENT COMMANDER LES PIECES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

- | | |
|---------------------|----------------|
| 1. NUMERO DU MODELE | 2. NO. DE REF |
| 3. NO. DE PIECE | 4. DESCRIPTION |

in **CANADA**: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100

★MARQUE: SECTION LIVRAISON DES PIECES DE RECHANGE

▲ MARQUE : PIECES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

36L-S400, CL36S40

▲▲ V101	VB90AHH5006*S	M	Picture Tube (I.T.C.)	DU
	or			
	VB90AEJ1509*S	M	Picture Tube (I.T.C.)	
	or			
	VB90AFX1513*S	M	Picture Tube (I.T.C.)	
▲ L702	RCiLG0035MEZZ	M	Degaussing Coil	AW
	or			
	RCiLG0027MEZZ			
	MSPRT0002MEZZ	M	Spring for CRT	AA
	QEARC3502MEZZ	M	Grounding Part	AH

	CRT	R621	R553	R554	R513	R502	R519	R520	R840-2
COMBI-NATION	A90AHH5006	2.7/3W	82k	18k	56K	10k(B)	12k	180k	JUMPER
	A90AEJ1509	2.2/3W	100k	22k	47K	33k(B)	10k	150k	OPEN
	A90AFX1513								

PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

PWB-A	DUNTK9829WEK0	-	MAIN Unit (32L-S400, CL32S40)	—
PWB-A	DUNTK9829WEK1	-	MAIN Unit (36L-S400, CL36S40)	—
PWB-B	DUNTK9303WEK3	-	CRT Unit (32L-S400, CL32S40)	—
PWB-B	DUNTK9303WEK4	-	CRT Unit (36L-S400, CL36S40)	—
PWB-F	DUNTK9514WEK0	-	CONTROL Unit	—
PWB-R	DUNTK9511WEK2	-	P-IN-P Unit	—

Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)				
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)				
MAIN UNIT				

TUNER

NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENEDENTLY.

△ TU51	VTU115B8035AT	M	Tuner	AU
	or			
	VTU115B8025AM			

	TU51	R53	D53	C54	R57
COMBI-NATION	115B8035AT	47 (2W)	EX0611GE	4.7u (50V)	3.9k
	115B8025AM	1	—	2.2u (50V)	10k

INTEGRATED CIRCUITS

	IC101	VHiKA78S05P-1	J	KA78S05P	AD
▲△	IC201	RH-iX3253CEZZ	J	TA1268AN	AV
△	IC361	RH-iX1135CEZZ	J	LA4261	AH
	IC470	VHiM52055FP-1	J	M52055FP	AH
△	IC501	VHiTA8427K/-1	J	TA8427K	AL
		or			
		RH-iX1224CEZZ			
	IC671	VHiUPC358C/-1	J	UPC358C	AD
▲△	IC701	VHiSTRF66261E	J	STRF6626	AX
△	IC702	RH-FX0002GEZZ	J	PS2501-1	AD
△	IC703	VHiSE135N/-1	J	SE135N	AG
		(36L-S400, CL36S40)			
△	IC703	VHiSE125N/-1	M	SE125N	
		(32L-S400, CL32S40)			
△	IC750	VHiKA7809Pi-1	R	KA7809PI	AE
	IC751	VHiKA7809Pi-1	R	KA7809PI	AE
	IC951	VHiMM1113XF1E	J	MM1113XFBE	AE
	IC1401	VHiTC90A45F-1	J	TC90A45F	AM
	IC1402	VHiMM1111XF1E	J	MM1111XFBE	AE
	IC1403	VHiKA78L05B-1	J	KA78L05BP	AE
	IC2001	RH-iX3256CEZZ	J	I.C.	
	IC2040	VHiKA7045P-1	J	KIA7045P	AD
	IC2101	VHiM24C01B/-1	J	I.C.	
	IC3001	VHiCXA2074Q-1	J	CXA2074Q	AY
	IC3201	VHiAN5285K/-1	J	AN5285K	AP

TRANSISTORS

You can substitute "VS2SD601AR/-1" for "VS2SC2462-C-1".

	Q201	VS2SC2735//1E	J	2SC2735	AC
	Q251	VS2SD601AR/-1	J	2SD601AR	AC
	Q252	VS2SD601AR/-1	J	2SD601AR	AC
	Q253	VS2SD601AR/-1	J	2SD601AR	AC
	Q301	VS2SD601AR/-1	J	2SD601AR	AC
	Q360	VS2SD601AR/-1	J	2SD601AR	AC
	Q401	VS2SD601AR/-1	J	2SD601AR	AC
	Q402	VS2SB709AR/-1	J	2SB709AR	AC
	Q403	VS2SD601AR/-1	J	2SD601AR	AC
	Q421	VS2SB709AR/-1	J	2SB709AR	AC
	Q451	VS2SA1266-Y-1	J	2SA1266 (Y)	AA
	Q601	VS2SC2482//1	J	2SC2482	AD
△	Q602	VS2SC5150//2E	M	2SC5150	
		(36L-S400, CL36S40)			
△	Q602	VS2SD2500//2E	J	2SD2500	AT
		(32L-S400, CL32S40)			
	Q672	VS2SA1266-Y-1	J	2SA1266 (Y)	AA
	Q673	VS2SD2045//1	J	2SD2045	AL
	Q751	VS2SC3198-Y-1	J	2SC3198 (Y)	AA
	Q901	VS2SD601AR/-1	J	2SD601AR	AC
	Q902	VS2SD601AR/-1	J	2SD601AR	AC
	Q903	VS2SD601AR/-1	J	2SD601AR	AC
	Q904	VS2SD601AR/-1	J	2SD601AR	AC
	Q921	VS2SD601AR/-1	J	2SD601AR	AC
	Q922	VS2SD601AR/-1	J	2SD601AR	AC
	Q923	VS2SD601AR/-1	J	2SD601AR	AC
	Q924	VS2SD601AR/-1	J	2SD601AR	AC
	Q1401	VS2SD601AR/-1	J	2SD601AR	AC

Ref. No.	Part No.	★	Description	Code
Q1402	VS2SD601AR/-1	J	2SD601AR	AC
Q1403	VS2SD601AR/-1	J	2SD601AR	AC
Q1404	VS2SD601AR/-1	J	2SD601AR	AC
Q1405	VS2SD601AR/-1	J	2SD601AR	AC
Q1406	VS2SD601AR/-1	J	2SD601AR	AC
Q1407	VS2SD601AR/-1	J	2SD601AR	AC
Q1601	VS2SD601AR/-1	J	2SD601AR	AC
Q1602	VS2SB709AR/-1	J	2SB709AR	AC
Q2060	VS2SD601AR/-1	J	2SD601AR	AC
Q2201	VS2SD601AR/-1	J	2SD601AR	AC
Q2211	VS2SD601AR/-1	J	2SD601AR	AC

DIODES

D51	RH-EX0611GEZZ	J	Zener Diode	AA
D52	RH-EX0676GEZZ	J	Zener Diode	AA
D53	RH-EX0611GEZZ	J	Zener Diode	AA
D103	VHD1SS119//1	J	Diode	AB
D401	VHD1SS119//1	J	Diode	AB
D402	RH-EX0723GEZZ	J	Zener Diode	AB
D403	RH-EX0611GEZZ	J	Zener Diode	AA
D404	RH-EX0611GEZZ	J	Zener Diode	AA
D405	RH-EX0611GEZZ	J	Zener Diode	AA
D454	RH-EX0611GEZZ	J	Zener Diode	AA
D455	VHD1SS119//1	J	Diode	AB
D481	VHD1SS119//1	J	Diode	AB
D482	VHD1SS119//1	J	Diode	AB
△ D501	RH-DX0302CEZZ	J	Diode	AC
D510	RH-DX0441CEZZ	J	Diode	AC
D511	RH-EX0654CEZZ	J	Zener Diode	AD
△ D605	RH-DX0255CEZZ	J	Diode	AC
D621	RH-EX0631GEZZ	J	Zener Diode	AA
D622	RH-DX0131CEZZ	J	Diode	AC
▲△ D651	RH-DX0073CEZZ	J	Diode	AD
▲△ D652	RH-EX0641GEZZ	J	Zener Diode	AA
▲△ D653	VHD1SS119//1	J	Diode	AB
	(32L-S400, CL32S40)			
▲△ D654	VHD1SS119//1	J	Diode	AB
	(32L-S400, CL32S40)			
D671	RH-EX0664GEZZ	J	Zener Diode	AA
D672	VHD1SS119//1	J	Diode	AB
△ D673	RH-DX0229CEZZ	J	Diode	AF
D674	VHD1SS119//1	J	Diode	AB
D705	VHD1SS82///1A	J	Diode	AC
D706	RH-DX0066GEZZ	J	Diode	AB
D707	VHD1SS82///1A	J	Diode	AC
D708	RH-DX0066GEZZ	J	Diode	AB
D709	RH-DX0229CEZZ	J	Diode	AF
△ D710	RH-EX0673GEZZ	J	Zener Diode	AB
△ D712	RH-DX0407CEZZ	J	Diode	AD
	or			
△ D713	RH-DX0468CEZZ	J	Diode	AH
	or			
	RH-DX0477CEZZ			
D715	RH-EX0610GEZZ	J	Zener Diode	AA
D716	VHD1SS119//1	J	Diode	AB
D717	RH-EX0650GEZZ	J	Zener Diode	AB
△ D725	RH-DX0407CEZZ	J	Diode	AD
	or			
△ D751	RH-DX0441CEZZ	J	Diode	AC
△ D752	RH-DX0441CEZZ	J	Diode	AC
△ D753	RH-DX0441CEZZ	J	Diode	AC
△ D754	RH-DX0441CEZZ	J	Diode	AC
D755	VHD1SS119//1	J	Diode	AB
D756	RH-DX0441CEZZ	J	Diode	AC
D1401	VHD1SS119//1	J	Diode	AB
D1402	VHD1SS119//1	J	Diode	AB
D1403	VHD1SS119//1	J	Diode	AB
D2011	RH-EX0611GEZZ	J	Zener Diode	AA
△ VA701	RH-VX0035CEZZ	J	Varistor	AF

PACKAGED CIRCUITS

△ PR701	RMPTP0059CEZZ	J	Packaged Circuit	AH
---------	---------------	---	------------------	----

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)									
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)									
MAIN UNIT (Continued)									
X801	RCRSB0205CEZZ	J	Crystal	AF	C253	VCCCCY1HH470J	J	47p 50V Ceramic	AA
	or				C301	VCCCCY1HH330J	J	33p 50V Ceramic	AA
	RCRSB0001PEZZ				C302	VCCCCY1HH151J	J	150p 50V Ceramic	AA
FILTERS					C303	VCCCCY1HH390J	J	39p 50V Ceramic	AA
CF301	RFILC0267CEZZ	J	Ceramic Filter	AD	C307	VCCCCY1HH1R5C	J	1.5p 50V Ceramic	AD
CF302	RFILC0029TAZZ	J	Ceramic Filter	AD	C308	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
CF401	RFILC0013CEZZ	J	Ceramic Filter	AE	C309	VCEA0A1CW337M	J	330 16V EL.	AC
CF631	RFILA0034CEZZ	J	Ceramic Filter	AD	C312	VCEA0A1CW476M	J	47 16V EL.	AB
CF2040	RFILC0121GEZZ	J	Ceramic Filter	AD	C360	VCEA0A1HW225M	J	2.2 50V EL.	AB
SF201	RFILC0405CEZZ	J	S.A.W. Filter	AH	C361	VCEA0A1HW225M	J	2.2 50V EL.	AB
COILS					C364	VCEA0A1EW107M	J	100 25V EL.	AC
L201	VP-XF1R2K0000	J	Peaking 1.2μH	AB	C365	VCEA0A0JW107M	J	100 6.3V EL.	AB
L202	RCiLi0588CEZZ	J	VCO Coil	AF	C368	VCEA0A1CW477M	J	470 16V EL.	AC
L251	VP-XF390K0000	J	Peaking 39μH	AB	C369	VCEA0A1CW477M	J	470 16V EL.	AC
L301	VP-XF8R2K0000	J	Peaking 8.2μH	AB	C370	VCEA0A0JW107M	J	100 6.3V EL.	AB
L302	RCiLi0613CEZZ	J	IF Coil	AE	C371	RC-QZA104TAYK	J	0.1 50V Mylar	AB
L401	VP-XF6R8K0000	J	Peaking 6.8μH	AB	C372	RC-QZA104TAYK	J	0.1 50V Mylar	AB
L402	VP-XF3R3K0000	J	Peaking 3.3μH	AB	C380	RC-QZA103TAYK	J	0.01 50V Mylar	AA
L403	VP-XF8R2K0000	J	Peaking 8.2μH	AB	C381	RC-QZA103TAYK	J	0.01 50V Mylar	AA
L404	VP-XF8R2K0000	J	Peaking 8.2μH	AB	C401	VCKYCY1HB331K	J	330p 50V Ceramic	AA
L631	VP-XF150K0000	J	Peaking 15μH	AB	C402	VCCCCY1HH101J	J	100p 50V Ceramic	AA
L671	RCiLZ1005CEZZ	J	Coil	AH	C403	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
L672	RCiLZ0789CEZZ	J	Coil	AK	C404	VCEA0A1CW107M	J	100 16V EL.	AC
△ L701	RCiLF0273CEZZ	J	Line Filter	AM	C405	VCEA0A1HW335M	J	3.3 50V EL.	AB
△ L702	RCiLF0025PEZZ	R	Line Filter	AK	C406	VCEA0A1HW225M	J	2.2 50V EL.	AB
	or				C408	VCEA0A1HW106M	J	10 50V EL.	AB
	RCiLF0273PEZZ				C409	VCEA0A1HW335M	J	3.3 50V EL.	AB
L705	RCiLP0179CEZZ	J	Coil	AD	C410	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
L729	RCiLP0179CEZZ	J	Coil	AD	C411	VCEA0A1CW337M	J	330 16V EL.	AC
L1401	VP-XF100K0000	J	Peaking 10μH	AB	C412	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
L1402	VP-XF100K0000	J	Peaking 10μH	AB	C413	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
L1403	VP-XF150K0000	J	Peaking 15μH	AB	C414	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
L1405	VP-XF330K0000	J	Peaking 33μH	AB	C422	VCEA0A1CW476M	J	47 16V EL.	AB
L2040	RCiLB0159CEZZ	J	Oscillation Coil	AE	C451	RC-QZA104TAYK	J	0.1 50V Mylar	AB
TRANSFORMERS					C452	VCEA0A1HW475M	J	4.7 50V EL.	AB
△ T601	RTRNZ0057PEZZ	R	Transformer	AK	C453	VCEA0A1CW226M	J	22 16V EL.	AB
▲▲ T602	RTRNF0040MEZZ	M	H-Volt Transformer (36L-S400, CL36S40)		C471	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
▲▲ T602	RTRNF0035MEZZ	M	H-Volt Transformer (32L-S400, CL32S40)		C472	VCEA0A1HW106M	J	10 50V EL.	AB
△ T701	RTRNP0543CEZZ	J	Power Transformer	AM	C473	VCEA0A1CW106M	J	10 16V EL.	AB
△ T702	RTRNZ0018MEZZ	M	Transformer		C474	VCEA0A1CW106M	J	10 16V EL.	AB
CONTROLS					C476	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
R502	RVR-M4334CEZZ	J	10k (B) V-Lin	AC	C477	VCE9GA1CW106M	J	10 16V EL.(N.P)	AB
R676	RVR-M4334CEZZ	J	10k (B) H-Lin	AC	C478	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
R678	RVR-M4336CEZZ	J	22k (B) H-Size	AC	C501	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
CAPACIORS					C502	VCEA0A1VW337M	J	330 35V EL.	AD
[EL.... Electrolytic, M-Poly.... Metalized Polypro Film]					C509	VCCSPA1HL101J	J	100p 50V Ceramic	AA
C51	VCEA0A1CW476M	J	47 16V EL.	AB	C510	VCFYSA1JA564J	J	0.56 63V Mylar	AE
C53	VCEA0A1HW105M	J	1.0 50V EL.	AB	C511	VCKYPA2HB391K	J	390p 500V Ceramic	AA
C54	VCEA0A1HW475M	J	4.7 50V EL.	AB	C512	RC-QZA683TAYJ	J	0.068 50V Mylar	AB
C55	VCEA0A1CW108M	J	1000 16V EL.	AD	C513	RC-QZA103TAYK	J	0.01 50V Mylar	AA
C103	VCEA0A1CW228M	J	2200 16V EL.	AD	C514	VCEA0A1VW107M	J	100 35V EL.	AC
C201	VCKYCY1HB102K	J	1000p 50V Ceramic	AA	C515	VCEACA1HC225J	J	2.2 50V EL.	AC
C202	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	C516	VCEACA1HC105J	J	1.0 50V EL.	AB
C203	VCKYCY1HB102K	J	1000p 50V Ceramic	AA	C517	VCEA0A1VW108M	J	1000 35V EL.	AD
C204	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	C518	VCFYSA1JA473J	J	0.047 63V Mylar	AC
C205	VCEA0A1HW474M	J	0.47 50V EL.	AB	C519	VCEA0A1HW105M	J	1.0 50V EL.	AB
C206	VCEA0A1CW337M	J	330 16V EL.	AC	C551	VCSATA1CE225K	J	2.2 16V Tantalum	AB
C207	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA	C552	VCEA0A1HW225M	J	2.2 50V EL.	AB
C208	VCEA0A1HW474M	J	0.47 50V EL.	AB	C553	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
C209	VCKYCY1HB222K	J	2200p 50V Ceramic	AA	C605	VCKYPA1HB102K	J	1000p 50V Ceramic	AA
C210	VCKYCY1HB102K	J	1000p 50V Ceramic	AA	C606	VCKYPA2HB561K	J	560p 500V Ceramic	AA
C251	VCKYCY1HB103K	J	0.01 50V Ceramic	AA	C607	VCKYPA1HB472K	J	4700p 50V Ceramic	AA
C252	VCKYCY1HB103K	J	0.01 50V Ceramic	AA	C608	VCKYPH3DB271K	J	270p 2000V Ceramic	AC
					C608	RC-KZ0033CEZZ	J	150p 2kV Ceramic (32L-S400, CL32S40)	AB
					C609	VCFPVC3CA822H	J	8200p 1.6kV M-Poly. (36L-S400, CL36S40)	AE
					C609	VCFPVC3CA912H	J	9100p 1.6kV M-Poly. (32L-S400, CL32S40)	AE
					C610	VCFPVC3CA912H	J	9100p 1.6kV M-Poly.	AE
					C615	VCKYPA2HB272K	J	2700p 500V Ceramic	AA
					C622	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
					C623	VCEA0A2CW336M	J	33 160V EL.	AE
					C631	VCEA0A1HW335M	J	3.3 50V EL.	AB
					C632	RC-QZA103TAYK	J	0.01 50V Mylar	AA

Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)				
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)				
MAIN UNIT (Continued)				
C633	VCEA0A1CW107M	J	100 16V EL.	AC
C652	VCEA0A1VW476M	J	47 35V EL.	AB
C653	VCEA0A1HW106M	J	10 50V EL.	AB
C671	VCEA0A1EW336M	J	33 25V EL.	AB
C672	VCEACA1HC335J	J	3.3 50V EL.	AC
C673	VCEA0A1VW337M	J	330 35V EL.	AD
C674	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C675	VCEA0A1VW106M	J	10 35V EL.	AB
C676	VCE9GA1EW336M	J	33 25V EL.(N.P)	AB
C677	RC-FZ0374CEZZ	J	4.7 50V	AF
▲▲ C678	VCQPPC2JB473J	J	0.047 630V M-Poly.	AC
			(36L-S400, CL36S40)	
▲▲ C678	VCQPPC2GB473J	J	0.047 630V M-Poly.	AC
			(32L-S400, CL32S40)	
C680	VCFPVC2DB684J	M	0.68 200V M-Poly.	
C682	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
▲ C701	RC-FZ017SCEZZ	J	0.22 AC125V Plastic	AD
	or			
	RC-FZ0025PEZZ			
C702	RC-KZ0029CEZZ	J	0.01 500V Ceramic	AC
C703	RC-KZ0029CEZZ	J	0.01 500V Ceramic	AC
▲ C705	RC-EZ0722CEZZ	M	820 200V EL.	AL
	or		(36L-S400, CL36S40)	
	RC-EZ0395CEZZ			
	or			
	RC-EZ0685CEZZ			
▲ C705	RC-EZ0720CEZZ	J	680 200V EL.	
	or		(32L-S400, CL32S40)	
	RC-EZ0684CEZZ			
	or			
	RC-EZ0394CEZZ			
C706	RC-KZ0092GEZZ	J	0.0033 AC250V Ceramic	AC
	or			
	RC-KZ0311CEZZ			
C707	VCFPVC3CA222H	J	2200p 1.6kV M-Poly.	AE
C708	VCCSPA1HL471J	J	470p 50V Ceramic	AA
C709	VCEA0A1VW107M	J	100 35V EL.	AC
C710	RC-QZA821TAYJ	J	820p 50V Mylar	
C717	VCKYPA2HB472K	J	4700p 500V Ceramic	AB
C722	RC-QZA104TAYK	J	0.1 50V Mylar	AB
▲ C723	RC-EZ0724CEZZ	J	100 16V EL.	AG
▲ C725	RC-EZ0810CEZZ	M	330 160V EL.	
C726	RC-KZ0338CEZZ	J	560p 2kV Ceramic	AD
C727	RC-KZ0338CEZZ	J	560p 2kV Ceramic	AD
C729	VCEA0A1CW106M	J	10 16V EL.	AB
C730	VCEA4A1EN108M	J	1000 25V EL.	AD
C731	RC-EZ0385CEZZ	J	1000 16V EL.	AE
C732	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C741	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C742	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C751	VCKYPA1HF103Z	J	0.01 50V Ceramic	AA
▲ C753	VCEA0A1CW107M	J	100 16V EL.	AC
C755	VCEA0A1CW476M	J	47 16V EL.	AB
▲ C772	VCEA0A1VW477M	J	470 35V EL.	AB
C773	VCCSPA1HL101J	J	100p 50V Ceramic	AA
C801	RC-QZA223TAYK	J	0.022 50V Mylar	AB
C802	VCEA0A1HW474M	J	0.47 50V EL.	AB
C803	VCCCCY1HH110J	J	11p 50V Ceramic	AA
C804	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C805	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C806	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C807	VCCCCY1HH221J	J	220p 50V Ceramic	AA
C901	VCEA0A1HW335M	J	3.3 50V EL.	AB
C903	VCEA0A1HW335M	J	3.3 50V EL.	AB
C922	VCEA0A1HW335M	J	3.3 50V EL.	AB
C923	VCEA0A1HW335M	J	3.3 50V EL.	AB
C925	VCEA0A1CW476M	J	47 16V EL.	AB
C926	VCEA0A1CW476M	J	47 16V EL.	AB
C927	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C928	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C929	VCEA0A1CW106M	J	10 16V EL.	AB
C930	VCEA0A1CW106M	J	10 16V EL.	AB

Ref. No.	Part No.	★	Description	Code
C931	VCKYCY1EB183K	J	0.018 25V Ceramic	AA
C932	VCKYCY1EB183K	J	0.018 25V Ceramic	AA
C951	VCEA0A1CW106M	J	10 16V EL.	AB
C952	VCEA0A1CW106M	J	10 16V EL.	AB
C954	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C955	VCEA0A1CW106M	J	10 16V EL.	AB
C956	VCEA0A1CW337M	J	330 16V EL.	AC
C1401	VCCCCY1HH220J	J	22p 50V Ceramic	AA
C1402	VCFYSA1HB474J	J	0.47 50V Mylar	AC
C1403	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1404	VCKYPA1HF103Z	J	0.01 50V Ceramic	AA
C1405	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1406	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1407	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1408	VCEA0A1HW106M	J	10 50V EL.	AB
C1409	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1410	VCCCCY1HH181J	J	180p 50V Ceramic	AA
C1411	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1412	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1413	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1415	VCEA0A1CW476M	J	47 16V EL.	AB
C1416	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C1417	VCCCCY1HH390J	J	39p 50V Ceramic	AA
C1418	VCEA0A1HW106M	J	10 50V EL.	AB
C1419	VCEA0A1HW106M	J	10 50V EL.	AB
C1420	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C1421	VCCCCY1HH120J	J	12p 50V Ceramic	AA
C1423	VCCCCY1HH120J	J	12p 50V Ceramic	AA
C1424	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C1425	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C1426	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
C1427	VCE9GA1CW106M	J	10 16V EL.(N.P)	AB
C1428	VCCCCY1HH270J	J	27p 50V Ceramic	AA
C1601	VCEA0A1CW106M	J	10 16V EL.	AB
C1602	VCCCCY1HH470J	J	47p 50V Ceramic	AA
C1603	VCKYCY1HB221K	J	220p 50V Ceramic	AA
C2001	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2002	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2040	VCEA0A1AW107M	J	100 10V EL.	AB
C2041	VCEA0A1HW105M	J	1.0 50V EL.	AB
C2060	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C2061	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2062	VCEA0A1AW107M	J	100 10V EL.	AB
C2063	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C2201	VCKYCY1HB681K	J	680p 50V Ceramic	AA
C2202	VCCCCY1HH390J	J	39p 50V Ceramic	AA
C3001	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3002	VCKYCY1HB562K	J	5600p 50V Ceramic	AA
C3003	RC-QZA123TAYK	J	0.012 50V Mylar	AB
C3004	VCEA0A1HW105M	J	1.0 50V EL.	AB
C3005	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3006	VCEA0A1HW106M	J	10 50V EL.	AB
C3007	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3008	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C3009	VCEA0A1CW227M	J	220 16V EL.	AC
C3010	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3011	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3012	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3013	VCKYCY1HB272K	J	2700p 50V Ceramic	AA
C3014	RC-QZA473TAYK	J	0.047 50V Mylar	AB
C3015	VCSATA1CE335K	J	3.3 16V Tantalum	AC
C3016	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3017	VCSATA1CE106K	J	10 16V Tantalum	AD
C3018	VCEA0A1HW105M	J	1.0 50V EL.	AB
C3021	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3022	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3031	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3032	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3201	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3202	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3203	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3204	VCEA0A1CW106M	J	10 16V EL.	AB
C3205	VCEA0A1CW106M	J	10 16V EL.	AB
C3206	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C3207	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB
C3208	VCE9GA1HW475M	J	4.7 50V EL.(N.P)	AB

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)									
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)									
MAIN UNIT (Continued)									
RESISTORS									
<i>[M-Ox... Metal Oxide, M-Film... Metal Film]</i>									
RJ2	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R413	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
RJ3	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R414	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
RJ19	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R415	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
RJ20	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R416	VRS-CY1JF103J	J 10k	1/16W	M-Ox. AA
RJ21	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R420	VRS-CY1JF332J	J 3.3k	1/16W	M-Ox. AA
RJ22	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R421	VRS-CY1JF152J	J 1.5k	1/16W	M-Ox. AA
RJ23	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R424	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA
RJ24	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R426	VRS-CY1JF182J	J 1.8k	1/16W	M-Ox. AA
RJ25	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R427	VRS-CY1JF182J	J 1.8k	1/16W	M-Ox. AA
RJ27	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R428	VRS-CY1JF182J	J 1.8k	1/16W	M-Ox. AA
RJ28	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R431	VRS-CY1JF330J	J 33	1/16W	M-Ox. AA
RJ29	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R432	VRS-CY1JF330J	J 33	1/16W	M-Ox. AA
RJ30	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R433	VRS-CY1JF330J	J 33	1/16W	M-Ox. AA
RJ31	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R434	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
RJ32	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	△ R451	VRS-RG3AB103J	J 10k	1W	M-Ox. AB
RJ33	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R452	VRD-RM2HD683J	J 68k	1/2W	Carbon AA
RJ35	VRS-CY1JF000J	J 0	1/16W	M-Ox. AA	R453	VRD-RA2EE682J	J 6.8k	1/4W	Carbon AA
△ R51	VRS-RG3AB151J	M 150	1W	M-Ox.	(32L-S400, CL32S40)				
R53	VRS-RG3DB470J	M 47	2W	M-Ox.	R454	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA
R54	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA	R456	VRS-CY1JF682J	J 6.8k	1/16W	M-Ox. AA
R55	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA	R458	VRS-CY1JF152J	J 1.5k	1/16W	M-Ox. AA
R56	VRS-CY1JF823J	J 82k	1/16W	M-Ox. AA	R471	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
R57	VRS-CY1JF392J	J 3.9k	1/16W	M-Ox. AA	R472	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
R201	VRS-CY1JF151J	J 150	1/16W	M-Ox. AA	R473	VRD-RA2BE102J	J 1.0k	1/8W	Carbon AA
R202	VRS-CY1JF122J	J 1.2k	1/16W	M-Ox. AA	R474	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
R203	VRS-CY1JF682J	J 6.8k	1/16W	M-Ox. AA	R475	VRD-RA2BE102J	J 1.0k	1/8W	Carbon AA
R204	VRS-CY1JF270J	J 27	1/16W	M-Ox. AA	R481	VRS-CY1JF682J	J 6.8k	1/16W	M-Ox. AA
R205	VRS-CY1JF331J	J 330	1/16W	M-Ox. AA	R482	VRS-CY1JF103J	J 10k	1/16W	M-Ox. AA
R206	VRD-RA2BE121J	J 120	1/8W	Carbon AA	△ R501	VRN-RL3LB2R2J	M 2.2	3.0W	M-Film AB
R207	VRD-RA2BE4R7J	J 4.7	1/8W	Carbon AA	R506	VRD-RA2BE223J	J 22k	1/8W	Carbon AA
R208	VRD-RA2BE331J	J 330	1/8W	Carbon AA	R510	VRD-RA2BE471J	J 470	1/8W	Carbon AA
R209	VRS-CY1JF222J	J 2.2k	1/16W	M-Ox. AA	R511	VRD-RA2BE473J	J 47k	1/8W	Carbon AA
R251	VRS-CY1JF332J	J 3.3k	1/16W	M-Ox. AA	(36L-S400, CL36S40)				
R252	VRS-CY1JF562J	J 5.6k	1/16W	M-Ox. AA	R511	VRD-RA2BE393J	J 39k	1/8W	Carbon AA
R253	VRS-CY1JF332J	J 3.3k	1/16W	M-Ox. AA	(32L-S400, CL32S40)				
R254	VRS-CY1JF223J	J 22k	1/16W	M-Ox. AA	R512	VRD-RA2BE683J	J 68k	1/8W	Carbon AA
R255	VRS-CY1JF563J	J 56k	1/16W	M-Ox. AA	R513	VRS-CY1JF563J	J 56k	1/16W	M-Ox. AA
R256	VRS-CY1JF472J	J 4.7k	1/16W	M-Ox. AA	(36L-S400, CL36S40)				
R257	VRS-CY1JF470J	J 47	1/16W	M-Ox. AA	R513	VRS-CY1JF273J	J 27k	1/16W	M-Ox. AA
R258	VRS-CY1JF472J	J 4.7k	1/16W	M-Ox. AA	(32L-S400, CL32S40)				
R259	VRS-CY1JF182J	J 1.8k	1/16W	M-Ox. AA	R514	VRS-CY1JF101J	J 100	1/16W	M-Ox. AA
R301	VRD-RA2BE222J	J 2.2k	1/8W	Carbon AA	R519	VRS-CY1JF123J	J 12k	1/16W	M-Ox. AA
R302	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA	R520	VRS-CY1JF184J	J 180k	1/16W	M-Ox. AA
R303	VRS-CY1JF103J	J 10k	1/16W	M-Ox. AA	R521	VRD-RM2HD152J	J 1.5k	1/2W	Carbon AA
R304	VRS-CY1JF333J	J 33k	1/16W	M-Ox. AA	R522	VRS-RG3AB102J	M 1.0k	1W	M-Ox. AA
R305	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA	R523	VRN-RL3AB1R0J	M 1.0	1W	M-Film AA
R306	VRS-CY1JF152J	J 1.5k	1/16W	M-Ox. AA	(36L-S400, CL36S40)				
R360	VRD-RA2BE331J	J 330	1/8W	Carbon AA	R523	VRN-RL3AB1R2J	M 1.2	1W	M-Film AA
R361	VRD-RA2BE562J	J 5.6k	1/8W	Carbon AA	(32L-S400, CL32S40)				
R362	VRD-RA2BE562J	J 5.6k	1/8W	Carbon AA	R524	VRS-RG3AB391J	M 390	1W	M-Ox. AA
R363	VRS-CY1JF122J	J 1.2k	1/16W	M-Ox. AA	R525	VRS-CY1JF563J	J 56k	1/16W	M-Ox. AA
R364	VRS-CY1JF122J	J 1.2k	1/16W	M-Ox. AA	R551	VRS-CY1JF472J	J 4.7k	1/16W	M-Ox. AA
R365	VRS-CY1JF221J	J 220	1/16W	M-Ox. AA	R552	VRD-RA2BE102J	J 1.0k	1/8W	Carbon AA
R370	VRS-CY1JF221J	J 220	1/16W	M-Ox. AA	R553	VRS-CY1JF823J	J 82k	1/16W	M-Ox. AA
R371	VRD-RA2EE3R3J	J 3.3	1/4W	Carbon AA	R554	VRS-CY1JF183J	J 18k	1/16W	M-Ox. AA
R372	VRD-RA2EE3R3J	J 3.3	1/4W	Carbon AA	△ R604	VRS-RG3LB332J	M 3.3k	3.0W	M-Ox. AB
R401	VRS-CY1JF682J	J 6.8k	1/16W	M-Ox. AA	(36L-S400, CL36S40)				
R402	VRS-CY1JF331J	J 330	1/16W	M-Ox. AA	△ R604	VRS-RG3LB222J	M 2.2k	3W	M-Ox. AB
R403	VRS-CY1JF391J	J 390	1/16W	M-Ox. AA	(32L-S400, CL32S40)				
R404	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA	R605	VRD-RM2HD331J	J 330	1/2W	Carbon AA
R405	VRS-CY1JF470J	J 47	1/16W	M-Ox. AA	R606	VRD-RM2HD271J	J 270	1/2W	Carbon AA
R406	VRS-CY1JF680J	J 68	1/16W	M-Ox. AA	△ R607	VRS-RG3LB332J	M 3.3k	3.0W	M-Ox. AB
R407	VRS-CY1JF102J	J 1.0k	1/16W	M-Ox. AA	(36L-S400, CL36S40)				
R408	VRS-CY1JF471J	J 470	1/16W	M-Ox. AA	△ R607	VRS-RG3LB222J	M 2.2k	3W	M-Ox. AB
R409	VRD-RA2BE562J	J 5.6k	1/8W	Carbon AA	(32L-S400, CL32S40)				
R410	VRD-RA2BE823J	J 82k	1/8W	Carbon AA	R609	VRS-RG3AB562J	M 5.6k	1W	M-Ox. AB
R411	VRD-RA2BE682J	J 6.8k	1/8W	Carbon AA	R610	VRD-RM2HD220J	J 22	1/2W	Carbon AA
R412	VRD-RA2BE561J	J 560	1/8W	Carbon AA	△ R611	VRW-KQ41C3R3K	J 3.3	15W	Cement AG
					△ R621	VRN-VV3LB2R7J	J 2.7	3.0W	M-Film AB
					(36L-S400, CL36S40)				
					△ R621	VRN-VV3LB1R2J	J 1.2	3.0W	M-Film AC
					(32L-S400, CL32S40)				
					R622	VRN-RL2HCR56J	M 0.56	1/2W	M-Film AB
					(36L-S400, CL36S40)				
					R622	VRN-RL2HCR68J	M 0.68	1/2W	M-Film AA
					(32L-S400, CL32S40)				

Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)				
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)				
MAIN UNIT (Continued)				
△ R623	VRN-RL3AB1R0J	M	1.0 1W M-Film	AA
△ R624	VRS-RG3DB332J	M	3.3k 2W M-Ox.	AA
R625	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R631	VRS-CY1JF391J	J	390 1/16W M-Ox.	AA
R632	VRS-CY1JF152J	J	1.5k 1/16W M-Ox.	AA
R633	VRS-CY1JF472J	J	4.7k 1/16W M-Ox.	AA
▲△ R651	VRN-RL2HC1R0J	J	1.0 1/2W M-Film	AA
▲△ R652	VRD-RA2EE393J	J	39k 1/4W Carbon (36L-S400, CL36S40)	AA
▲△ R652	VRD-RA2EE103J	J	10k 1/4W Carbon (32L-S400, CL32S40)	AA
▲△ R653	VRD-RA2EE333J	J	33k 1/4W Carbon (36L-S400, CL36S40)	AA
▲△ R653	VRD-RA2EE562J	J	5.6k 1/4W Carbon (32L-S400, CL32S40)	AA
△ R654	VRD-RA2EE184J	J	180k 1/4W Carbon (36L-S400, CL36S40)	AA
△ R654	VRD-RA2EE393J	J	39k 1/4W Carbon (32L-S400, CL32S40)	AA
△ R655	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
△ R658	VRS-RG3DB153J	J	15k 2W M-Ox. (36L-S400, CL36S40)	AA
△ R658	VRS-RG3DB123J	J	12k 2W M-Ox. (32L-S400, CL32S40)	AA
R671	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R672	VRD-RA2BE822J	J	8.2k 1/8W Carbon	AA
R673	VRS-CY1JF472J	J	4.7k 1/16W M-Ox.	AA
R674	VRS-CY1JF472J	J	4.7k 1/16W M-Ox.	AA
R675	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R677	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R679	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R680	VRS-CY1JF822J	J	8.2k 1/16W M-Ox.	AA
R681	VRS-CY1JF123J	J	12k 1/16W M-Ox.	AA
R682	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R683	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R684	VRS-CY1JF472J	J	4.7k 1/16W M-Ox.	AA
R685	VRD-RA2BE562J	J	5.6k 1/8W Carbon	AA
R686	VRD-RA2EE222J	J	2.2k 1/4W Carbon	AA
R687	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
△ R688	VRN-RL3DB3R3J	M	3.3 2W M-Film	AA
R689	VRS-CY1JF274J	J	270k 1/16W M-Ox.	AA
△ R690	VRS-RG3LB561J	M	560 3.0W M-Ox.	AB
△ R691	VRG-RL2HB101J	J	100 1/2W Carbon	AB
R701	RR-HZ0048CEZZ	J	3.9M 1/2W Carbon	AB
△ R702	VRW-KQ4AC1R2K	M	1.2 10W Cement	AA
△ R703	VRS-RG3LB101J	J	100 3.0W M-Ox.	AC
R704	VRD-RM2HD154J	J	150k 1/2W Carbon	AA
△ R705	VRN-RL3DBR22J	J	0.22 2W M-Film	AA
△ R706	VRN-RL3DBR22J	J	0.22 2W M-Film (36L-S400, CL36S40)	AA
△ R706	VRN-RL3DBR27J	J	0.27 2W M-Film (32L-S400, CL32S40)	AA
R707	VRS-RG2HC681J	J	680 1/2W M-Ox.	AA
R709	VRN-GA2EB1R0J	J	1.0 1/4W M-Film	AA
R710	VRD-RM2HD470J	J	47 1/2W Carbon (36L-S400, CL36S40)	AA
R710	VRD-RM2HD330J	J	33 1/2W Carbon (32L-S400, CL32S40)	AA
R711	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
△ R715	VRS-RG3DB153J	J	15k 2W M-Ox.	AA
△ R723	VRN-RL3DBR39J	M	0.39 2W M-Film	AA
R724	VRS-RG2HC332J	J	3.3k 1/2W M-Ox.	AA
△ R725	VRS-RG3AB182J	J	1.8k 1W M-Ox.	AA
R726	VRD-RM2HD102J	J	1.0k 1/2W Carbon (36L-S400, CL36S40)	AA
△ R727	VRN-RL3LB2R7J	M	2.7 3.0W M-Film	AB
R734	VRD-RM2HD124J	J	120k 1/2W Carbon	AA
△ R737	VRN-RL3DBR56J	M	0.56 2W M-Film	AA
R751	VRS-CY1JF473J	J	47k 1/16W M-Ox.	AA
R755	VRS-RG3LB220J	M	22 3.0W M-Ox.	AB
R801	VRD-RA2BE332J	J	3.3k 1/8W Carbon	AA
R802	VRS-CY1JF332J	J	3.3k 1/16W M-Ox.	AA

Ref. No.	Part No.	★	Description	Code
R803	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R804	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R805	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R806	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R901	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R902	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R903	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R904	VRS-CY1JF683J	J	68k 1/16W M-Ox.	AA
R905	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R906	VRS-CY1JF392J	J	3.9k 1/16W M-Ox.	AA
R907	VRS-CY1JF182J	J	1.8k 1/16W M-Ox.	AA
R908	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R910	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R911	VRS-CY1JF683J	J	68k 1/16W M-Ox.	AA
R912	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R913	VRS-CY1JF392J	J	3.9k 1/16W M-Ox.	AA
R914	VRS-CY1JF182J	J	1.8k 1/16W M-Ox.	AA
R915	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R922	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R923	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R924	VRS-CY1JF750J	J	75 1/16W M-Ox.	AA
R925	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R926	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R927	VRD-RA2EE750J	J	75 1/4W Carbon	AA
R928	VRD-RA2EE750J	J	75 1/4W Carbon	AA
R929	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R930	VRS-CY1JF563J	J	56k 1/16W M-Ox.	AA
R931	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R932	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R933	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R934	VRS-CY1JF473J	J	47k 1/16W M-Ox.	AA
R935	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R936	VRS-CY1JF473J	J	47k 1/16W M-Ox.	AA
R937	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R938	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R939	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R940	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R941	VRS-CY1JF183J	J	18k 1/16W M-Ox.	AA
R942	VRS-CY1JF273J	J	27k 1/16W M-Ox.	AA
R943	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R951	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R952	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R955	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R958	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R959	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R961	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R962	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R963	VRD-RA2BE331J	J	330 1/8W Carbon	AA
R1401	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R1402	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R1403	VRS-CY1JF182J	J	1.8k 1/16W M-Ox.	AA
R1404	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R1405	VRS-CY1JF392J	J	3.9k 1/16W M-Ox.	AA
R1406	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R1408	VRS-CY1JF821J	J	820 1/16W M-Ox.	AA
R1409	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1410	VRS-CY1JF681J	J	680 1/16W M-Ox.	AA
R1411	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1412	VRS-CY1JF821J	J	820 1/16W M-Ox.	AA
R1413	VRD-RA2BE471J	J	470 1/8W Carbon	AA
R1414	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R1415	VRS-CY1JF821J	J	820 1/16W M-Ox.	AA
R1416	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R1417	VRS-CY1JF273J	J	27k 1/16W M-Ox.	AA
R1418	VRS-CY1JF153J	J	15k 1/16W M-Ox.	AA
R1419	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1420	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R1421	VRS-CY1JF562J	J	5.6k 1/16W M-Ox.	AA
R1422	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1423	VRS-CY1JF471J	J	470 1/16W M-Ox.	AA
R1601	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1602	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R1603	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R1604	VRS-CY1JF152J	J	1.5k 1/16W M-Ox.	AA
R1605	VRS-CY1JF391J	J	390 1/16W M-Ox.	AA
R1606	VRS-CY1JF471J	J	470 1/16W M-Ox.	AA

Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTK9829WEK0 (32L-S400, CL32S40)				
PWB-A: DUNTK9829WEK1 (36L-S400, CL36S40)				
MAIN UNIT (Continued)				
R1607	VRS-CY1JF221J	J	220 1/16W M-Ox.	AA
R1608	VRS-CY1JF681J	J	680 1/16W M-Ox.	AA
R1609	VRS-CY1JF122J	J	1.2k 1/16W M-Ox.	AA
R2001	VRD-RA2BE562J	J	5.6k 1/8W Carbon	AA
R2003	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2004	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
R2006	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2008	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2009	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2010	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R2012	VRS-CY1JF471J	J	470 1/16W M-Ox.	AA
R2020	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R2023	VRD-RA2BE223J	J	22k 1/8W Carbon	AA
R2024	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2025	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2026	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2027	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2028	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2029	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2032	VRD-RA2BE103J	J	10k 1/8W Carbon	AA
R2033	VRD-RA2BE223J	J	22k 1/8W Carbon	AA
R2040	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R2041	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R2042	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2043	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R2044	VRS-CY1JF682J	J	6.8k 1/16W M-Ox.	AA
R2045	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2046	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R2047	VRS-CY1JF221J	J	220 1/16W M-Ox.	AA
R2048	VRS-CY1JF562J	J	5.6k 1/16W M-Ox.	AA
R2060	VRS-CY1JF221J	J	220 1/16W M-Ox.	AA
R2061	VRS-CY1JF562J	J	5.6k 1/16W M-Ox.	AA
R2062	VRD-RA2BE183J	J	18k 1/8W Carbon	AA
R2063	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R2064	VRD-RA2BE332J	J	3.3k 1/8W Carbon	AA
R2069	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R2071	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R2072	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R2073	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R2101	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2102	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2201	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R2202	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2203	VRD-RA2BE184J	J	180k 1/8W Carbon	AA
R2211	VRD-RA2BE222J	J	2.2k 1/8W Carbon	AA
R2212	VRS-CY1JF682J	J	6.8k 1/16W M-Ox.	AA
R2213	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R2401	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2402	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2403	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2404	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2507	VRS-CY1JF823J	J	82k 1/16W M-Ox.	AA
R3001	VRD-RA2BE221J	J	220 1/8W Carbon	AA
R3002	VRD-RA2BE221J	J	220 1/8W Carbon	AA
R3003	VRS-CY1JF105J	J	1.0M 1/16W M-Ox.	AA
R3004	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R3005	VRS-CY1JF623J	J	62k 1/16W M-Ox.	AA
R3007	VRS-CY1JF332J	J	3.3k 1/16W M-Ox.	AA
R3008	VRS-CY1JF302J	J	3.0k 1/16W M-Ox.	AA
R3010	VRS-CY1JF392J	J	3.9k 1/16W M-Ox.	AA
R3011	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R3012	VRS-CY1JF102J	J	1.0k 1/16W M-Ox.	AA
R3017	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R3018	VRD-RA2BE102J	J	1.0k 1/8W Carbon	AA
R3201	VRS-CY1JF225J	J	2.2M 1/16W M-Ox.	AA
R3202	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R3203	VRD-RA2BE103J	J	10k 1/8W Carbon	AA

SWITCH

S502 QSW-B0015CEZZ J Vertical Center AC

Ref. No.	Part No.	★	Description	Code
MISCELLANEOUS PARTS				
△ RY701	RRLYJ0081CEZZ	J	Relay	AL
△ F701	QFS-B5023CEZZ	J	Fuse, 5A 125V	AC
FB601	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB671	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB701	RBLN-0037CEZZ	J	Ferrite Bead	AB
FB702	RBLN-0036CEZZ	J	Ferrite Bead	AB
FB704	RBLN-0037CEZZ	J	Ferrite Bead	AB
FB706	RBLN-0037CEZZ	J	Ferrite Bead	AB
FH701	QFSDH1013CEZZ	J	Fuse Holder	AC
FH702	QFSDH1014CEZZ	J	Fuse Holder	AC
J921	QSODC0430CEZZ	J	Socket, S-Video	AE
P351	QPLGN0461CEZZ	J	Plug 4-pin (S)	AB
P401	QPLGN0561CEZZ	J	Plug 5-pin (GBN)	AB
P601	QPLGN0161FJZZ	M	Plug 6-pin (K)	
P621	QPLGN0461CEZZ	J	Plug 4-pin (YBN)	AB
P651	QPLGN0361CEZZ	J	Plug 3-pin	AB
P701	QPLGN0404CEZZ	J	Plug 4-pin (M)	AB
P703	QPLGN0269GEZZ	J	Plug 2-pin (P)	AB
P901	QPLGN0661CEZZ	J	Plug 6-pin (EJ)	AD
P2002	QPLGN0461CEZZ	J	Plug 4-pin (YR)	AB
P2401	QPLGN0561CEZZ	J	Plug 5-pin	AB
HM601	LX-GZ3001PEZZ	R	Screw	AB
HM602	LX-GZ3001PEZZ	R	Screw	AB
HM603	LX-GZ3001PEZZ	R	Screw	AB
HM604	LX-GZ3001PEZZ	R	Screw	AB
HM605	LX-GZ3001PEZZ	R	Screw	AB
HM606	LX-GZ3001PEZZ	R	Screw	AB
HM607	LX-GZ3002PEZZ	R	Screw	AB
HM609	LX-GZ3002PEZZ	R	Screw	AB
HM611	LX-GZ3002PEZZ	R	Screw	AB
HM613	LX-GZ3001PEZZ	R	Screw	AB
HM614	LX-GZ3001PEZZ	R	Screw	AB
HM615	LX-GZ3001PEZZ	R	Screw	AB
HM616	LX-GZ3001PEZZ	R	Screw	AB
HM621	LX-GZ3001PEZZ	R	Screw	AB
HM623	LX-GZ3001PEZZ	R	Screw	AB
HM624	LX-GZ3002PEZZ	R	Screw	AB
HM625	LX-GZ3002PEZZ	R	Screw	AB
HM626	LX-GZ3001PEZZ	R	Screw	AB
HM627	LX-GZ3001PEZZ	R	Screw	AB
HM628	LX-GZ3001PEZZ	R	Screw	AB
HM630	LX-GZ3002PEZZ	R	Screw	AB
HM631	LX-GZ3002PEZZ	R	Screw	AB
HM632	LX-GZ3002PEZZ	R	Screw	AB
HM633	LX-GZ3002PEZZ	R	Screw	AB
HM634	LX-GZ3002PEZZ	R	Screw	AB
HM635	LX-GZ3001PEZZ	R	Screw	AB
HM636	LX-GZ3001PEZZ	R	Screw	AB
HM701	LX-GZ3001PEZZ	R	Screw	AB
HM702	LX-GZ3001PEZZ	R	Screw	AB
HM703	LX-GZ3001PEZZ	R	Screw	AB
HM706	LX-GZ3001PEZZ	R	Screw	AB
HM707	LX-GZ3001PEZZ	R	Screw	AB
HM708	LX-GZ3001PEZZ	R	Screw	AB
HM709	LX-GZ3001PEZZ	R	Screw	AB
HM720	LX-GZ3001PEZZ	R	Screw	AB
HM721	LX-GZ3001PEZZ	R	Screw	AB
HM724	LX-GZ3001PEZZ	R	Screw	AB
HM725	LX-GZ3001PEZZ	R	Screw	AB
HM727	LX-GZ3001PEZZ	R	Screw	AB
HM728	LX-GZ3001PEZZ	R	Screw	AB
HM729	LX-GZ3001PEZZ	R	Screw	AB
RDA361	PRDAR5006MEFW	M	Heat Sink IC361	AC
RDA501	PRDAR0234PEFW	R	Heat Sink IC501	AH
RDA601	PRDAR0150PEFW	R	Heat Sink Q602	AL
RDA671	PRDAR1007MEFW	M	Heat Sink Q673	AF
RDA701	PRDAR1006MEFW	M	Heat Sink IC701	AF
RDA750	PRDAR5072CEFW	J	Heat Sink IC751	AC
TAN921	QTANJ0523CEZZ	M	AV Terminal	
	LX-BZ3049GEFD	J	Screw	AA
	LX-HZ3007MEFD	M	Screw	

Ref. No.	Part No.	★	Description	Code
PWB-B: DUNTK9303WEK3(32L-S400, CL32S40)				
PWB-B: DUNTK9303WEK4(36L-S400, CL36S40)				
CRT UNIT				

TRANSISTORS

Q850	VS2SC4544LB2E	J	2SC4544	AD
Q851	VS2SC4544LB2E	J	2SC4544	AD
Q852	VS2SC4544LB2E	J	2SC4544	AD
Q853	VS2SC3198-Y-1	J	2SC3198(Y)	AA
Q854	VS2SC3198-Y-1	J	2SC3198(Y)	AA
Q855	VS2SC3198-Y-1	J	2SC3198(Y)	AA
Q894	VS2SA1266-Y-1	J	2SA1266(Y)	AA

DIODES

D850	VHD1SS119//-1	J	Diode	AB
D851	VHD1SS119//-1	J	Diode	AB
D852	VHD1SS119//-1	J	Diode	AB
D894	VHD1SS119//-1	J	Diode	AB
D895	VHD1SS119//-1	J	Diode	AB
D896	RH-EX0616GEZZ	J	Zener Diode	AA
D897	VHD1SS119//-1	J	Diode	AB
D898	VHD1SS119//-1	J	Diode	AB

COILS

L852	VP-MK221K0000	J	Peaking 220μH	AB
L853	VP-MK221K0000	J	Peaking 220μH	AB
L854	VP-MK221K0000	J	Peaking 220μH	AB

CAPACITORS

[EL.... Electrolytic]

C850	VCKYPA1HF103Z	J	0.01 50V	Ceramic	AA
C851	VCEA0A1CW476M	J	47 16V	EL.	AB
C876	VCCSPA1HL561J	J	560p 50V	Ceramic	AA
C877	VCCSPA1HL471J	J	470p 50V	Ceramic	AA
C878	VCCSPA1HL561J	J	560p 50V	Ceramic	AA
C880	RC-KZ0153CEZZ	J	0.01 3kV	Ceramic	AB
C892	VCEA0A1CW106M	J	10 16V	EL.	AB
C893	VCEA0A1CW106M	J	10 16V	EL.	AB
C895	VCEA0A1CW226M	J	22 16V	EL.	AB

RESISTORS

[M-Ox.... Metal Oxide]

R840	VRD-RM2HD104J	J	100k 1/2W	Carbon	AA
(36L-S400, CL36S40)					
R849	VRD-RA2BE151J	J	150 1/8W	Carbon	AA
R850	VRD-RA2BE561J	J	560 1/8W	Carbon	AA
R851	VRD-RA2BE561J	J	560 1/8W	Carbon	AA
R852	VRD-RA2BE561J	J	560 1/8W	Carbon	AA
R854	VRD-RA2BE151J	J	150 1/8W	Carbon	AA
R855	VRD-RA2BE151J	J	150 1/8W	Carbon	AA
R856	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
R857	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
R858	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
⚠ R859	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
⚠ R860	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
⚠ R861	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
⚠ R862	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
⚠ R863	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
⚠ R864	VRS-VV3DB273J	J	27k 2W	M-Ox.	AA
R868	VRD-RM2HD224J	J	220k 1/2W	Carbon	AA
R870	VRD-RA2BE471J	J	470 1/8W	Carbon	AA
R871	VRD-RA2BE471J	J	470 1/8W	Carbon	AA
R872	VRD-RA2BE471J	J	470 1/8W	Carbon	AA
R873	VRD-RA2BE220J	J	22 1/8W	Carbon	AA
R874	VRD-RA2BE220J	J	22 1/8W	Carbon	AA
R875	VRD-RA2BE220J	J	22 1/8W	Carbon	AA
R876	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
R877	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
R878	VRD-RA2BE121J	J	120 1/8W	Carbon	AA
R880	VRC-MA2HG332K	J	3.3k 1/2W	Solid	AA
R881	VRC-MA2HG332K	J	3.3k 1/2W	Solid	AA
R882	VRC-MA2HG332K	J	3.3k 1/2W	Solid	AA
R883	VRD-RA2BE221J	J	220 1/8W	Carbon	AA

Ref. No.	Part No.	★	Description	Code
R884	VRD-RA2BE221J	J 220	1/8W Carbon	AA
R885	VRD-RA2BE221J	J 220	1/8W Carbon	AA
R886	VRD-RA2BE471J	J 470	1/8W Carbon	AA
R887	VRD-RA2BE471J	J 470	1/8W Carbon	AA
R888	VRD-RA2BE471J	J 470	1/8W Carbon	AA
R891	VRD-RA2BE561J	J 560	1/8W Carbon	AA
R892	VRD-RA2BE331J	J 330	1/8W Carbon	AA
R894	VRD-RA2BE152J	J 1.5k	1/8W Carbon	AA
R895	VRD-RA2EE561J	J 560	1/4W Carbon	AA

MISCELLANEOUS PARTS

P860	QPLGN0461CEZZ	J	Plug 4-pin (YBN)	AB
P880	QPLGN0561CEZZ	J	Plug 5-pin (GBN)	AB
SC801	QSOCV1011CEZZ	M	CRT Socket (36L-S400, CL36S40)	AF
SC801	QSOCV0937CEZZ	J	CRT Socket (32L-S400, CL32S40)	

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
PWB-R: DUNTK9511WEK2									
P-IN-P UNIT									
INTEGRATED CIRCUITS									
IC1701	VHiMM1117XF1E	M	MM1117XFBE	AE	C1847	VCKYCY1HB103K	J	0.01 50V	Ceramic AA
IC1781	VHiKA7805Pi-1	R	KA7805PI		C1848	VCKYCY1CB104K	J	0.1 16V	Ceramic AB
IC1801	VHiM65667FP-2	M	M65667FP		C1849	VCEA0A1HW106M	J	10 50V	EL. AB
TRANSISTORS									
You can substitute "VS2SD601AR/-1" for "VS2SC2462-C-1" and "VS2SC2412-C-1".					C1850	VCKYCY1CB104K	J	0.1 16V	Ceramic AB
Q1721	VS2SD601AR/-1	J	2SD601	AC	C1851	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA
Q1741	VS2SB709AR/-1	J	2SB709	AC	C1861	VCKYCY1CB104K	J	0.1 16V	Ceramic AB
Q1742	VS2SB709AR/-1	J	2SB709	AC	C1862	VCKYCY1CB104K	J	0.1 16V	Ceramic AB
Q1761	VS2SB709AR/-1	J	2SB709	AC	C1863	VCCCCY1HH101J	J	100p 50V	Ceramic AA
Q1762	VS2SB709AR/-1	J	2SB709	AC	C1865	RC-QZA154TAYJ	J	0.15 50V	Mylar AC
Q1791	VS2SC1959Y/1E	J	2SC1959	AC	C1866	RC-QZA103TAYJ	J	0.01 50V	Mylar AB
Q1861	VS2SB709AR/-1	J	2SB709	AC	C1867	VCKYCY1CB104K	J	0.1 16V	Ceramic AB
Q1881	VS2SD601AR/-1	J	2SD601	AC	C1868	VCFYSA1HB474J	J	0.47 50V	Mylar AC
Q1882	VS2SD601AR/-1	J	2SD601	AC	C1869	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA
Q1883	VS2SD601AR/-1	J	2SD601	AC	C1870	VCEA0A1HW106M	J	10 50V	EL. AB
DIODES					C1871	VCEA0A1HW106M	J	10 50V	EL. AB
D1791	RH-EX0604GEZZ	J	Zener Diode	AB	C1872	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA
D1801	VHD1SS119//-1	J	Diode	AB	RESISTORS				
D1821	VHD1SS119//-1	J	Diode	AB	[M-Ox.... Metal Oxide]				
CRYSTAL					RJ1	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
X1861	RCRSB0241CEZZ	M	Crystal		RJ2	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
COILS					RJ3	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1721	VP-XF680K0000	J	Peaking 68μH	AB	RJ4	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1801	VP-XF100K0000	J	Peaking 10μH	AB	RJ5	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1821	VP-XF100K0000	J	Peaking 10μH	AB	RJ6	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1861	VP-XF100K0000	J	Peaking 10μH	AB	RJ7	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1862	VP-XF100K0000	J	Peaking 10μH	AB	RJ8	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
L1863	VP-XF100K0000	J	Peaking 10μH	AB	RJ9	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
CAPACITORS					RJ10	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
[EL.... Electrolytic]					RJ11	VRS-CY1JF000J	J	0 1/16W	M-Ox. AA
C1701	VCEA0A1HW475M	J	4.7 50V	EL. AB	R1701	VRS-CY1JF101J	J	100 1/16W	M-Ox. AA
C1702	VCEA0A1HW475M	J	4.7 50V	EL. AB	R1702	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
C1703	VCEA0A1HW475M	J	4.7 50V	EL. AB	R1703	VRS-CY1JF101J	J	100 1/16W	M-Ox. AA
C1721	VCEA0A1HW106M	J	10 50V	EL. AB	R1704	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
C1722	VCCCCY1HH330J	J	33p 50V	Ceramic AA	R1705	VRS-CY1JF101J	J	100 1/16W	M-Ox. AA
C1741	RC-QZA473TAYJ	J	0.047 50V	Mylar AB	R1706	VRS-CY1JF474J	J	470k 1/16W	M-Ox. AA
C1742	VCEA0A1HW105M	J	1.0 50V	EL. AB	R1721	VRS-CY1JF332J	J	3.3k 1/16W	M-Ox. AA
C1743	RC-QZA472TAYJ	J	4700p 50V	Mylar AB	R1722	VRS-CY1JF103J	J	10k 1/16W	M-Ox. AA
C1761	RC-QZA473TAYJ	J	0.047 50V	Mylar AB	R1723	VRS-CY1JF822J	J	8.2k 1/16W	M-Ox. AA
C1762	VCEA0A1HW105M	J	1.0 50V	EL. AB	R1724	VRS-CY1JF222J	J	2.2k 1/16W	M-Ox. AA
C1763	RC-QZA682TAYJ	J	6800p 50V	Mylar AB	R1741	VRD-RA2BE102J	J	1.0k 1/8W	Carbon AA
C1781	VCEA0A1CW476M	J	47 16V	EL. AB	R1742	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
C1791	VCEA0A1AW107M	J	100 10V	EL. AB	R1743	VRS-CY1JF151J	J	150 1/16W	M-Ox. AA
C1792	VCEA0A1AW107M	J	100 10V	EL. AB	R1744	VRS-CY1JF122J	J	1.2k 1/16W	M-Ox. AA
C1801	VCKYCY1CB104K	J	0.1 16V	Ceramic AB	R1745	VRS-CY1JF474J	J	470k 1/16W	M-Ox. AA
C1802	VCKYCY1HB103K	J	0.01 50V	Ceramic AA	R1746	VRS-CY1JF122J	J	1.2k 1/16W	M-Ox. AA
C1803	VCKYCY1HB103K	J	0.01 50V	Ceramic AA	R1747	VRD-RA2BE822J	J	8.2k 1/8W	Carbon AA
C1804	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA	R1761	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
C1805	VCEA0A1HW106M	J	10 50V	EL. AB	R1762	VRS-CY1JF151J	J	150 1/16W	M-Ox. AA
C1806	VCKYCY1CB104K	J	0.1 16V	Ceramic AB	R1763	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
C1807	VCKYCY1HB103K	J	0.01 50V	Ceramic AA	R1764	VRS-CY1JF122J	J	1.2k 1/16W	M-Ox. AA
C1809	VCKYCY1HB103K	J	0.01 50V	Ceramic AA	R1765	VRS-CY1JF474J	J	470k 1/16W	M-Ox. AA
C1810	VCEA0A1CW226M	J	22 16V	EL. AB	R1766	VRS-CY1JF122J	J	1.2k 1/16W	M-Ox. AA
C1811	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA	R1791	VRD-RA2BE151J	J	150 1/8W	Carbon AA
C1812	VCEA0A1HW106M	J	10 50V	EL. AB	R1801	VRS-CY1JF473J	J	47k 1/16W	M-Ox. AA
C1821	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA	R1821	VRS-CY1JF123J	J	12k 1/16W	M-Ox. AA
C1822	VCEA0A1HW106M	J	10 50V	EL. AB	R1822	VRS-CY1JF103J	J	10k 1/16W	M-Ox. AA
C1841	VCEA0A1HW106M	J	10 50V	EL. AB	R1823	VRS-CY1JF183J	J	18k 1/16W	M-Ox. AA
C1842	VCKYCY1HF103Z	J	0.01 50V	Ceramic AA	R1825	VRS-CY1JF183J	J	18k 1/16W	M-Ox. AA
C1843	VCCCCY1HH680J	J	68p 50V	Ceramic AA	R1828	VRS-CY1JF153J	J	15k 1/16W	M-Ox. AA
C1845	VCKYCY1HB103K	J	0.01 50V	Ceramic AA	R1831	VRS-CY1JF332J	J	3.3k 1/16W	M-Ox. AA
C1846	VCCCCY1HH151J	J	150p 50V	Ceramic AA	R1832	VRS-CY1JF682J	J	6.8k 1/16W	M-Ox. AA
					R1833	VRS-CY1JF272J	J	2.7k 1/16W	M-Ox. AA
					R1834	VRS-CY1JF222J	J	2.2k 1/16W	M-Ox. AA
					R1841	VRS-CY1JF153J	J	15k 1/16W	M-Ox. AA
					R1842	VRS-CY1JF471J	J	470 1/16W	M-Ox. AA
					R1843	VRS-CY1JF391J	J	390 1/16W	M-Ox. AA
					R1861	VRS-CY1JF153J	J	15k 1/16W	M-Ox. AA
					R1862	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
					R1863	VRS-CY1JF102J	J	1.0k 1/16W	M-Ox. AA
					R1864	VRS-CY1JF221J	J	220 1/16W	M-Ox. AA
					R1865	VRS-CY1JF474J	J	470k 1/16W	M-Ox. AA
					R1866	VRS-CY1JF104J	J	100k 1/16W	M-Ox. AA
					R1867	VRS-CY1JF202J	J	2.0k 1/16W	M-Ox. AA
					R1868	VRS-CY1JF510J	M	51 1/16W	M-Ox. AA

Ref. No.	Part No.	★	Description	Code
PWB-R: DUNTK9511WEK2				
P-IN-P UNIT (Continued)				
R1881	VRS-CY1JF473J	J	47k 1/16W M-Ox.	AA
R1882	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R1883	VRS-CY1JF123J	J	12k 1/16W M-Ox.	AA
R1884	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R1885	VRS-CY1JF473J	J	47k 1/16W M-Ox.	AA
R1886	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R1887	VRS-CY1JF123J	J	12k 1/16W M-Ox.	AA
R1889	VRD-RA2BE101J	J	100 1/8W Carbon	AB
MISCELLANEOUS PARTS				
P1701	QPLGZ0810CEZZ	J	Plug 8-pin	AD
P1702	QPLGZ0610CEZZ	J	Plug 6-pin	AB
P1703	QPLGZ0810CEZZ	J	Plug 8-pin	AD
SLD1801	PSLDM0012MEFW	M	Shield	AC

Ref. No.	Part No.	★	Description	Code
PWB-F: DUNTK9514WEK0				
CONTROL UNIT				
CAPACITOR				
[EL... Electrolytic]				
C4001	VCEA0A1HW475M	J	4.7 50V EL.	AB
RESISTORS				
R4001	VRD-RA2BE103J	J	10k 1/8W Carbon	AA
R4003	VRD-RA2BE273J	J	27k 1/8W Carbon	AA
R4004	VRD-RA2BE563J	J	56k 1/8W Carbon	AA
R4005	VRD-RA2BE331J	J	330 1/8W Carbon	AA
R4006	VRD-RA2BE563J	J	56k 1/8W Carbon	AA
R4007	VRD-RA2BE123J	J	12k 1/8W Carbon	AA
R4008	VRD-RA2EE750J	J	75 1/4W Carbon	AA
R4009	VRD-RA2BE153J	J	15k 1/8W Carbon	AA
R4010	VRD-RA2BE272J	J	2.7k 1/8W Carbon	AA
SWITCHES				
S4001	QSW-K0079GEZZ	J	Power	AB
S4002	QSW-K0079GEZZ	J	CH-UP	AB
S4003	QSW-K0079GEZZ	J	CH-DOWN	AB
S4004	QSW-K0079GEZZ	J	VOL-UP	AB
S4005	QSW-K0079GEZZ	J	VOL-DOWN	AB
MISCELLANEOUS PARTS				
J4001	QJAKE0179CEZZ	M	Audio In (L)	
J4002	QJAKE0180CEZZ	M	Audio In (R)	
J4003	QJAKE0181CEZZ	M	Video In	
P4001	QPLGN0461CEZZ	J	4-pin (YR)	AB
P4003	QPLGN0661CEZZ	J	6-pin (EJ)	AD
RMC4001	RRMCU0230CEZZ	M	R/C Receiver	
	QCNW-0176MEZZ	M	Connecting Cord	AE
	QCNW-0179MEZZ	M	Connecting Cord	AH

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

MISCELLANEOUS PARTS

△ ACC701	QACCD3065CESA	M	AC Cord	AN
	QCNW-0143MEZZ	M	Connecting Cord	AF
	QCNW-0144MEZZ	M	Connecting Cord	AD
	QCNW-0178MEZZ	M	Connecting Cord (32L-S400, CL32S40)	AD
	QCNW-0145MEZZ	M	Connecting Cord (36L-S400, CL36S40)	AE
SP1	VSP1206PB378E	M	Speaker 6 ohm (L)	
SP2	VSP1206PB378E	M	Speaker 6 ohm (R)	

SUPPLIED ACCESSORIES

TGAN-1006MEZZ	M	Guarantee Card (32L-S400, 36L-S400)	AA
TiNS-6559MEZZ	M	Operation Manual	AD
RRMCG1396CESA	M	Infrared R/C Unit	AW

PACKING PARTS (NOT REPLACEMENT ITEM)

SPAKC0636MEZZ	-	Packing Case (32L-S400, CL32S40)	—
SPAKC0629MEZZ	-	Packing Case (36L-S400, CL36S40)	—
SPAKX0171MEZZ	-	Buffer Material (32L-S400, CL32S40)	—
SPAKX0172MEZZ	-	Buffer Material (36L-S400, CL36S40)	—
SSAKA0004MEZZ	-	Polyethylene Sack	—

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

CABINET PARTS

32L-S400, CL32S40


1	CCABA1300MES1	M	Front Cabinet Ass'y	BL
1-1	Not Available	-	Front Cabinet	—
1-2	GCOVA1039MEKA	M	Cover for R/C	AD
1-3	HBDGB1009MESA	M	Badge, "SHARP"	AD
1-4	JBTN-1105MEKA	M	Button, Power, Vol-up/down, CH-up/down	AE

2	GCABB1134MEKA	M	Rear Cabinet	BF
---	---------------	---	--------------	----


36L-S400, CL36S40

1	CCABA1301MES1	M	Front Cabinet Ass'y	BQ
1-1	Not Available	-	Front Cabinet	—
1-2	GCOVA1039MEKA	M	Cover for R/C	AD
1-3	HBDGB1010MESA	M	Badge, "SHARP"	AD
1-4	JBTN-1105MEKA	M	Button, Power, Vol-up/down, CH-up/down	AE

2	GCABB1137MEKA	M	Rear Cabinet	BK
---	---------------	---	--------------	----

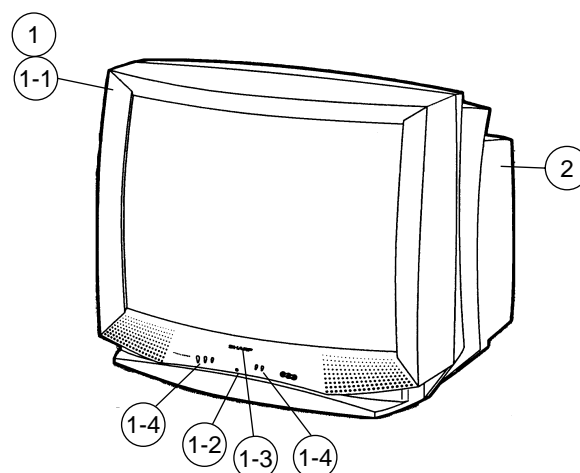

PACKING OF THE SET

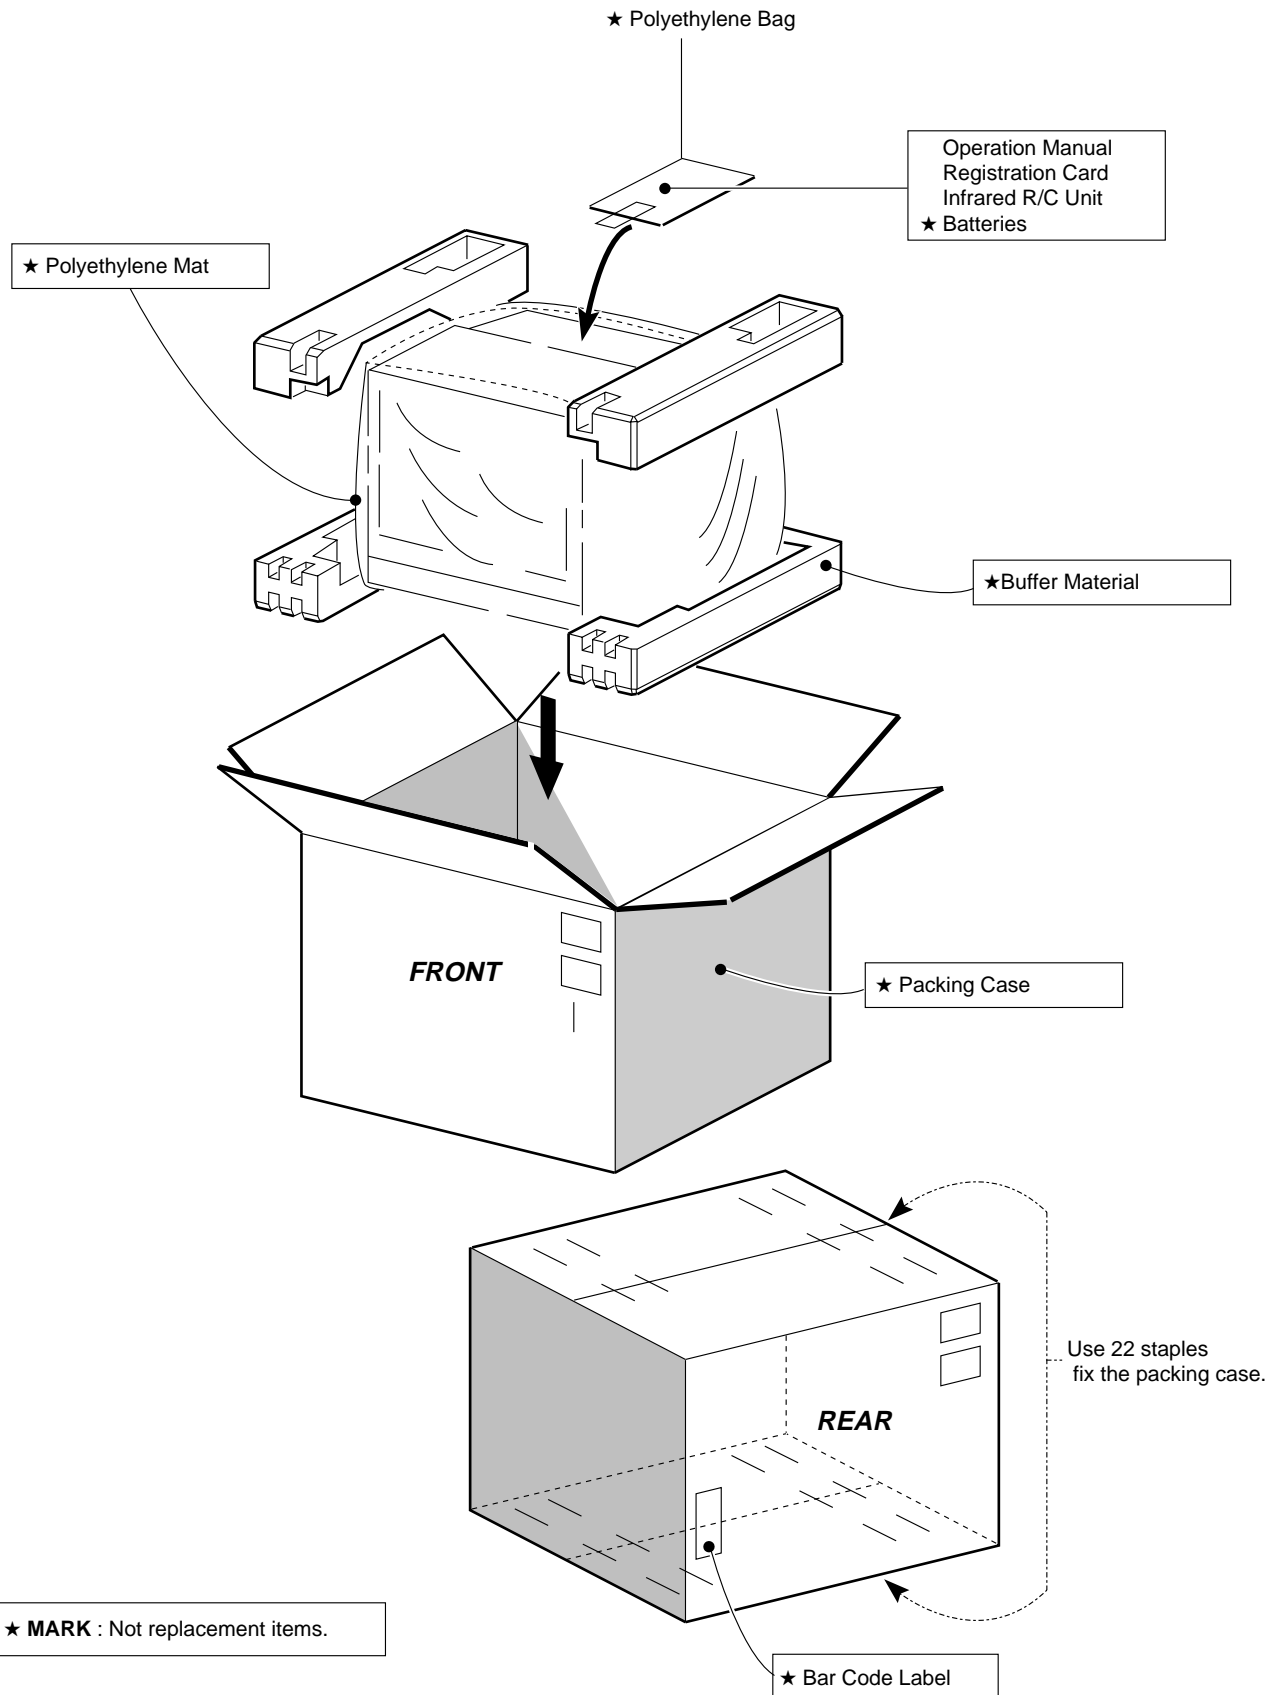

SHARP

COPYRIGHT © 1999 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.