


SERVICE MANUAL

AA-2D CHASSIS


<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
KV-27V26	RM-Y137A	US	SCC-K96L-A
KV-27V36	RM-Y137A	US	SCC-K96N-A
KV-27V36	RM-Y137A	CND	SCC-K97K-A
KV-29V22M	RM-Y135A	E	SCC-K98F-A
KV-29V36C	RM-Y137A	E	SCC-K98K-A
KV-29V66M	RM-Y137A	E	SCC-K98G-A
KV-29V76M	RM-Y137A	E	SCC-K98L-A

Note: Adjustment Manual for this model is published separately


	Adjustment Manual
Part No.	9-965-829-01



RM-Y137A

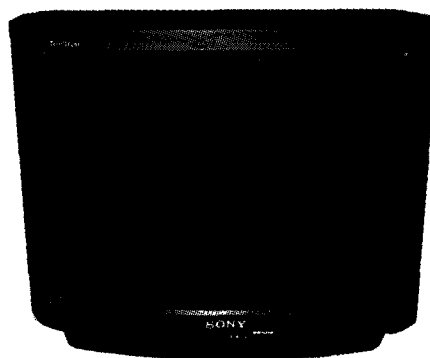

KV-27V36



996583201

TRINITRON® COLOR TV
SONY®

SPECIFICATIONS

For all models:

Television system	American TV standard		
Channel coverage	VHF	:	2-13
	UHF	:	14-69
	CATV	:	1-125
Antenna	75-ohm external antenna terminal for VHF / UHF		
Picture tube	Hi-Black Trinitron® tube		

For specific models:

	KV-27V26	KV-27V36	KV-29V22M	KV-29V36C	KV-29V66M	KV-29V76M
Screen Size (measured diagonally)	27 inch	27 inch	27 inch	27 inch	27 inch	27 inch
Power requirements	120V, 60Hz	120V, 60Hz	120V, 60Hz	220V, 50/60Hz	120V, 60Hz	120V, 60Hz
Number of inputs/outputs						
Video ⁽¹⁾	3	3	2	3	3	3
S video ⁽²⁾	1	1	1	1	1	1
Audio ⁽³⁾	3	3	2	3	3	3
Audio out ⁽⁴⁾	1	1	1	1	1	1
Monitor out ⁽¹⁾	1	1	1	1	1	1
TV out ⁽¹⁾	-	1	-	1	-	1
S-Link	●	●	-	●	●	●
Speaker output (W)	5W x 2	10W x 2	5W x 2	10W x 2	5W x 2	10W x 2
Power consumption (W) When in use (Max.) In Standby	180W 9W	195W 13W	180W 9W	195W 13W	180W 9W	195W 13W
Dimensions (W/H/D) (mm)	690 x 575.4 x503.4mm	690 x 575.4 x503.4mm	690 x 575.4 x503.4 mm	690 x 575.4 x503.4 mm	690 x 575.4 x503.4 mm	690 x 575.4 x503.4 mm
(in.)	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.	27 ^{1/4} x 22 ^{3/4} x19 ^{7/8} in.
Mass (kg) (lb)	43 kg 94 lbs 13oz	43 kg 94 lbs 13oz	43 kg 94 lbs 13oz	43 kg 94 lbs 13oz	43 kg 94 lbs 13oz	43 kg 94 lbs 13oz
Supplied accessories Remote commander (w/ 2 size AA (R6) batteries)	RM-Y137A	RM-Y137A	RM-Y135A	RM-Y137A	RM-Y137A	RM-Y137A

⁽¹⁾ 1 Vp-p, 75 ohms unbalanced, sync negative⁽²⁾ Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms⁽³⁾ 500 mVrms (100% modulation); Impedance: 47 kilohms⁽⁴⁾ More than 408 mVrms at the maximum volume setting (variable)

More than 408mVrms (fix); Impedance: 5 kilohms

**** Design and specifications are subject to change without notice.****Optional accessories**

Connecting cables VMC-810S/820S, VMC-720M,
YC-15V/30V, RK-74A
TV Stand SU-27A
U/V mixer EAC-66

(●)® SRS (SOUND RETRIEVAL SYSTEM)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word "SRS" and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

SAFETY CHECK-OUT (US Model only)

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampere). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63Trd are examples of passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

HOW TO FIND A GOOD EARTH GROUND

A cold-water pipe is guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth-ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms. If a cold-water pipe is not accessible, connect a 60-100 watts trouble light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side of the line, the lamp should light at normal brilliance if the screw is at ground potential. (See Fig. B)

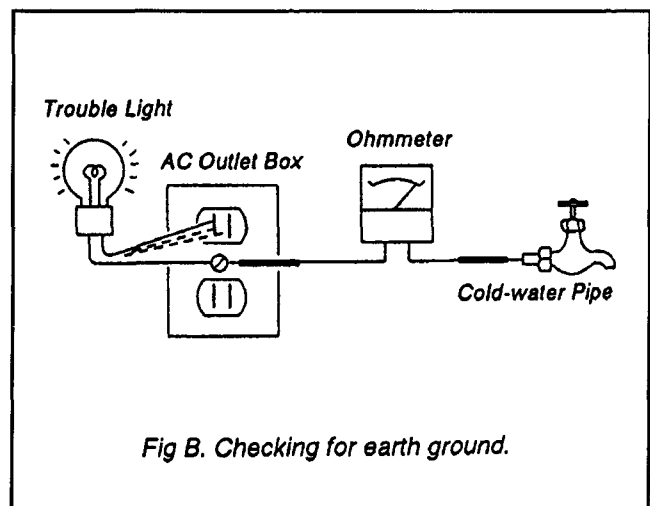
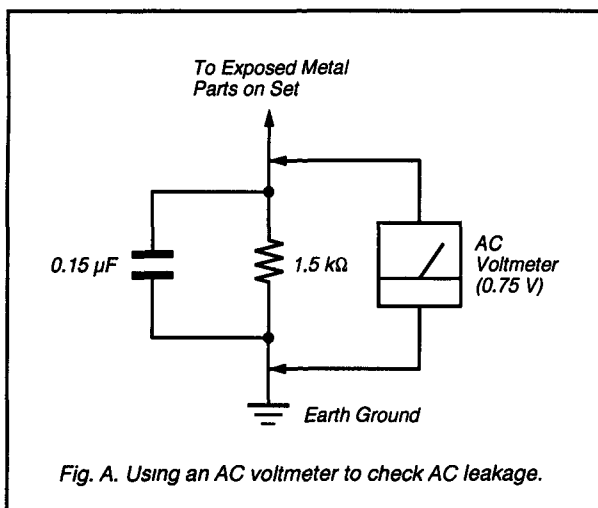


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL			2. DISASSEMBLY		
Welcome!		5	2-1. Rear Cover and Speaker Removal		12
Connecting and Installing the TV		5	2-2. Chassis Assy Removal		12
Connector Types		5	2-3. Service Position		12
Making Connections		5	2-4. Control Switch Removal		12
Basic Set up		7	2-5. Picture Tube Removal		13
Inserting Batteries		7			
Using the remote control/Select buttons		7	3. SAFETY RELATED ADJUSTMENTS		14
Adjusting slides		7	4. DIAGRAMS		
On Line Help/Instructions		7	4-1. Block Diagram		19
Using your New TV		8	4-2. Circuit Boards Location		27
Setting up the TV automatically		8	4-3. Printed Wiring Boards and Schematic Diagrams		27
Watching the TV		8	• P Board (Except KV-29V22M)		28
Watching two programs at one time - PIP		8	• A Board		31
Adjusting your SET UP (menus)		9	• SC Board (Except KV-29V22M)		39
Learning menu selection		9	• UV Board		40
Using the VIDEO menu		9	• C Board		45
Using the AUDIO menu		9	• AV Board (Except KV-29V22M)		47
Using the TIMER menu		10	• G Board		49
Using the SET UP menu		10	• K Boards (KV-27V36/29V36C/29V76M)		51
Operating Video Equipment		10	• WB Board (KV-27V36/29V36C/29V76M)		53
Setting the manufacturer's code		10	• HV Board		55
VCR manufacturer code numbers		10	4-4. Semiconductors		57
MDP manufacturer code numbers		10			
Operating a cable box DBS receiver		11	5. EXPLODED VIEWS		
Troubleshooting		11	5-1. Chassis		59
			5-2. Picture Tube		60
			6. ELECTRICAL PARTS LIST		61

CAUTION!

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

ATTENTION

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURT-CIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.
THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

ATTENTION!!

AFIN D'EVITER TOUT RESQUE D'ELECTROCUTION PROVENANT D'UN CHASSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISE LORS DE TOUT DÉPANNAGE. LE CHASSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

LES COMPOSANTS IDENTIFIES PAR UNE TRAME ET PAR UNE MARQUE Δ SUR LES SCHEMAS DE PRINCIPE, LES VUES EXPLOSEES ET LES LISTES DE PIECES SONT D'UNE IMPORTANCE CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMERO DE PIECE EST INDIQUE DANS LE PRESENT MANUEL OU DANS DES SUPPLEMENTS PUBLIES PAR SONY. LES REGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SECURITE DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRESENT MANUEL. SUIVRE CES PROCEDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT SUSPECTE.

SECTION 1 GENERAL

The instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers shown reflect those of the Operating Instruction Manual.

Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. This manual is written for the models listed below. Before reading, check the model number on the rear of your TV.

Model KV-27S26 is used for illustration purposes. The screens displayed are for model KV-35V36. Differences in operation features are indicated in the text, for example, "KV-27S26 only".

Model Number	Region Code	Light Sensor	Trinitron	Antenna
KV-27S26	1	○	○	○
KV-27S26C	2	○	○	○
KV-27S26D	3	○	○	○
KV-27S26E	4	○	○	○
KV-27S26F	5	○	○	○
KV-27S26G	6	○	○	○
KV-27S26H	7	○	○	○
KV-27S26I	8	○	○	○
KV-27S26J	9	○	○	○
KV-27S26K	10	○	○	○
KV-27S26L	11	○	○	○
KV-27S26M	12	○	○	○
KV-27S26N	13	○	○	○
KV-27S26O	14	○	○	○
KV-27S26P	15	○	○	○
KV-27S26Q	16	○	○	○
KV-27S26R	17	○	○	○
KV-27S26S	18	○	○	○
KV-27S26T	19	○	○	○
KV-27S26U	20	○	○	○

Precautions

Safety

- Operate the TV only on 120 V AC (except KV-29RS26C, 29V36C, 34RS26C, 34V36C).
- Operate the TV only on 220 V AC (except KV-29RS26C, 29V36C, 34RS26C, 34V36C).
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- (except KV-29RS26C, 29V36C, 34RS26C, 34V36C)
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.
- If you will not be using the TV for several days, disconnect power by pulling the plug itself. Never pull on the cord.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS".

Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

Using This Manual

This manual is divided into four major sections. We recommend that you carefully review the contents of each section in the order provided to ensure that you fully understand the operation of your new TV.

- Connecting and installing the TV**
This section will guide you through your initial set up. It will show you how to connect your new components, connect to your antenna or cable, and connect any accessories.
- Basic Set Up**
This section will teach you the basic skills needed to operate your new TV. It will show you how to operate special functions of the remote control.
- Using your New TV**
This section will show you how to begin using your new TV. It will show you how to use the AUTO SET UP feature, and how to use your remote control's features.
- Adjusting your Set Up (menus)**
This section will teach you how to access on-screen menus and adjust your TV's settings.

Instructions in this manual are written for the remote control. Similar controls may be found on the TV console.

Connecting and Installing the TV

Making Connections

For best picture quality, a cable TV system or outdoor antenna is recommended.

Connecting directly to cable or an antenna

The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see A), older homes will probably have 300-ohm twin lead cable (see B), still other homes may contain both (see C).

- A**
- VHF only (Rear of TV)
 - VHF/UHF or UHF only (Rear of TV)
 - Cable (Rear of TV)
- B**
- VHF only (Rear of TV)
 - 300-ohm twin lead cable (Rear of TV)
 - UHF only (Rear of TV)
 - VHF/UHF or UHF only (Rear of TV)
- C**
- 75-ohm coaxial cable (Rear of TV)
 - and
 - UHF (Rear of TV)
 - 300-ohm twin lead cable (not supplied)

Connecting and Installing the TV (continued)

Connecting an antenna/cable TV system with a VCR

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.

Connecting to an S Video equipped VCR (for optimum picture quality)

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using AUDIO connectors, connect AUDIO OUT on your VCR to AUDIO IN on your TV (White-AUDIO Left, Red-AUDIO Right).
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using an S VIDEO connector, connect S VIDEO on your VCR to S VIDEO on your TV.


If you are connecting a nonstandard VCR, connect only the single audio output to the left input on your TV.

Note on DVD Connection

- For the best picture quality, connect the DVD player directly to the TV.
- Refer to your DVD manual for detailed connection information.

Connecting a cable box

Some pay cable TV systems use scrambled or encoded signals that require a cable box* to view all channels.

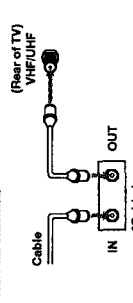

Note: If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature discussed on page 22.


Cable box and cable

- KV-27S26, 27V36, 29V36C, 29V76M, 29S26, 32V36, 34V36C, 35S26, 35V36, 35V76, 37V36M only

Some pay cable TV systems use scrambled or encoded signals requiring a cable box* only for certain channels (e.g. HBO, SHOWTIME, etc.)

Cable or antenna

Most simple connection. Connection is made directly from the cable or antenna to the TV.

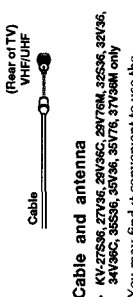

Cable and antenna


- KV-27S26, 27V36, 29V36C, 29V76M, 29S26, 32V36, 34V36C, 35S26, 35V36, 35V76, 37V36M only

You may find it convenient to use the following set up if your cable provider does not feature local channels that you are able to receive using an antenna.



Cable box

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.

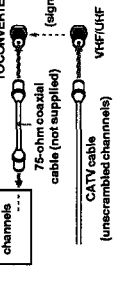

Note: You cannot watch the signal through the "AUX" input as a window picture when using Picture-in-Picture (PIP).

- If you are connecting a cable box through the "AUX" input and would like to switch between the "AUX" and normal (CATV) input, you should consider using the CHANNEL FIX feature discussed on page 22.

Notes

- Your Sony remote control can be programmed to operate your cable box (see page 26).

Connecting and Installing the TV (continued)

Connecting a DBS (Direct Broadcast Satellite) receiver

For the highest picture quality, use S VIDEO instead of the yellow AUDIO/VIDEO cable. See your DBS manual for more information.


- 1 Connect the cable from your satellite antenna to your DBS receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your TV.

Connecting a DBS (Direct Broadcast Satellite) receiver and a VCR

- 1 Connect the cable from your satellite antenna to your DBS receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF-IN on your VCR.
- 3 Using a coaxial connector, connect VHF/UHF-OUT on your VCR to VHF/UHF on your TV.
- 4 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

Notes:

- To view input from the DBS or VCR, select VIDEO 1 by pressing TV/VIDEO on the remote control.

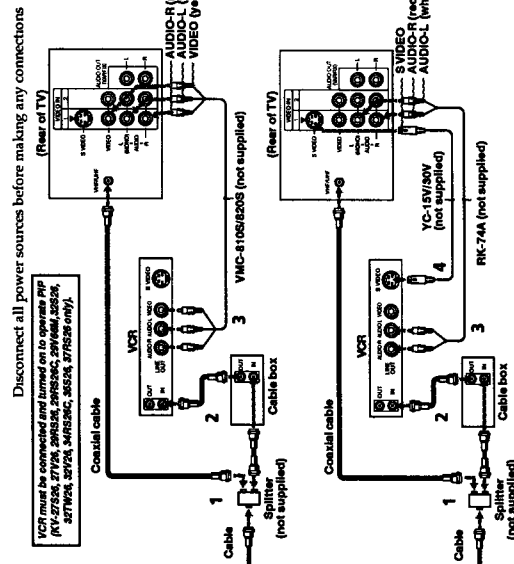

Connecting a VCR and TV with a cable box

- 1 Connect the single (input) jack of the Splitter to your incoming cable connection, and connect the other two (output) jacks (using coaxial cable) to IN on your cable box and VHF/UHF on your TV.
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).

Connecting to an S-Video equipped VCR with a cable box

(for optimum picture quality)

- 1-2 Perform as described above.
- 3 Using AUDIO connectors, connect AUDIO OUT on your VCR to AUDIO IN on your TV (White-AUDIO Left, Red-AUDIO Right).
- 4 Using an S-VIDEO connector, connect S-VIDEO on your VCR to S-VIDEO on your TV.

Notes:

- To view scrambled channels through your cable box, select VIDEO 1 by pressing TV/VIDEO on the remote control.

Connecting an audio system

For greater viewing pleasure, integrate your home stereo into the system.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused Line inputs (e.g. Tape-2, etc.) on your stereo (White-AUDIO Left, Red-AUDIO Right).
- 2 Set your stereo to the chosen Line input and refer to page 20 of this manual for additional audio setup instructions.

Connecting an AV receiver

- KV-27V26, 29V36C, 29V76M, 32V36, 34V36C, 35V36, 35V76, 37V36M only

For greater viewing pleasure, connect your AV receiver.


- 1 Using AUDIO/VIDEO connectors, connect VIDEO IN on your TV to Monitor AUDIO and VIDEO OUT on your AV receiver.
- 2 Using AUDIO/VIDEO connectors, connect TV OUT on your TV to TV AUDIO and VIDEO IN on your AV receiver.

You may want to use CHANNEL FIX to fix your TV's input to the AV receiver (VIDEO 1).

See CHANNEL FIX, page 22.

Connecting and Installing the TV (continued)

Disconnect all power sources before making any connections

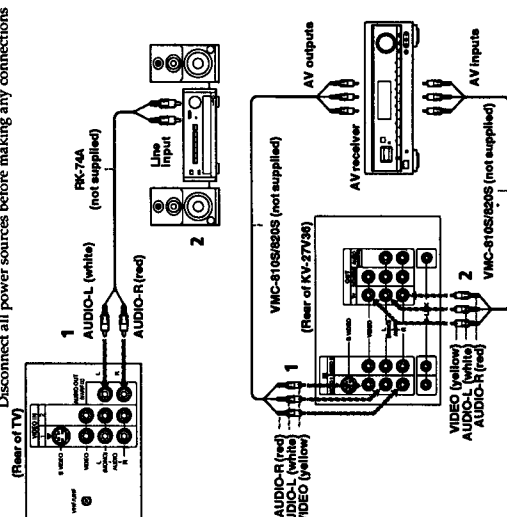


Connecting two VCRs for tape editing using MONITOR OUT

- KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V36, 32V36C, 34V36C, 35V36, 35V76, 37V36M only
- MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the setup instructions on page 4 of this manual.
- 2 Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

Notes:

- Do not change the input signal while editing through MONITOR OUT.
- When connecting a single VCR to the TV, if VCR LINE OUT is connected to TV VIDEO IN, do not connect the TV MONITOR OUT jacks to the VCR LINE INPUT (see right). Doing so will cause program interference and other viewing problems.

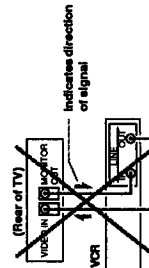

Using the S-Link function

- KV-27V26, 27V36, 29V46, 29V56, 29V66, 29V76M, 32V26, 32V36, 34V36C, 35V36, 35V76, 37V36M only

S-Link is a Sony innovation designed to make your Sony components work together. It allows you to control your Sony TV and VCR with a single remote control. To use S-Link, you must connect your Sony S-Link VCR. It also allows you to turn the VCR and TV off at the same time with the SYSTEM OFF button.

- 1 Connect your VCR using the setup instructions on page 4 of this manual.
- 2 Using an S-Link connector, connect the S-LINK jacks on your VCR and TV. Ensure that both ends are seated firmly and that the TV S-LINK connector is in the same row as the AUDIO/VIDEO connectors.

Connecting a camcorder

- KV-27V26, 27V36, 29V46, 29V56, 29V66, 29V76M, 32V26, 32V36, 34V36C, 35V36, 35V76, 37V36M only


This connection is convenient for viewing a picture directly from your camcorder.

Using AUDIO/VIDEO connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on the front panel of your TV (Yellow-VIDEO, White-AUDIO Left, Red-AUDIO Right).

Note

- If you are connecting a monoaural camcorder, connect only the single audio output to the left input on your TV.

Disconnect all power sources before making any connections.

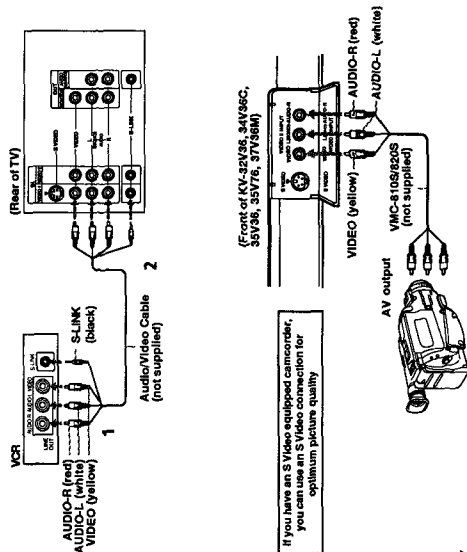

9


Connecting and Installing the TV (continued)

KV-32TW26 and KV-35V76 only

Follow these instructions to install the glass door and adjust the shelf.


Note

- Confirm that all parts are included before beginning assembly. If any parts are missing, contact your dealer.

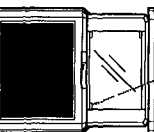

Installing the glass door

- 1 Check that the projection of the screw through the bottom hinge **A** does not interfere with the proper installation of the hinge to the glass door, and then insert the hinge into the hole located at the bottom right side of cabinet.

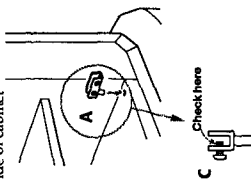

Parts List	
A Bottom hinge	1
B Top hinge	1
C Screw set	4
D Plate pad	1
E Plate	1
F Metal pin	4

10

Basic Set up

Inserting batteries

Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.



Notes


- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment. See page 24.

12

On Line Help/Instructions

Several menu windows will provide prompts and instructions to assist you in navigating through the different functions. When presented, use these to supplement the instructions in this manual.

Using the remote control Select buttons

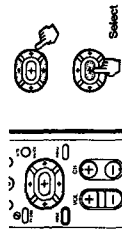


The supplied remote control has select buttons which allow for movement of the on-screen selector in four directions. Pressing on the edge of the select buttons will cause the selector to move in the selected direction. Pressing the center of the select buttons "Select" will activate the selected item.

Adjusting sliders


When menu items present a slider (— or —>), use the select buttons (← or →) to adjust the setting.

Adjusting the shelf


- 1 Press the upper part of the temporary shelf supports and remove the shelf.

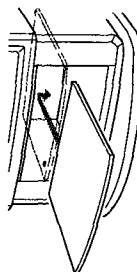

- 2 Insert the metal pin shelf supports (2 each side).

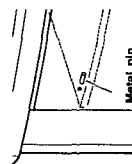

- 3 Push the top glass door hinge into the top right bushing and gently slide the glass door into the bottom hinge. Adjust the glass door until level, and tighten the hinge screws.

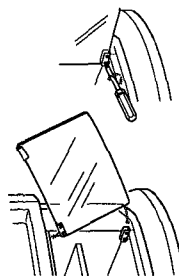

11

Using your New TV

Setting up the TV automatically

The EASY SETUP GUIDE feature will allow you to set the on-screen language and set all receivable channels. The EASY SETUP GUIDE screen will appear every time you turn on the TV until you perform AUTO PROGRAM.

The EASY SETUP GUIDE feature does not apply for installations that use a cable box for all channel selection.

To set up the TV manually, refer to "Using the SET UP menu" on page 22.

Tips


- Perform the function during daylight with the antenna and/or cable properly connected to ensure that all available channels will be found and saved.
- After using EASY SETUP GUIDE, you will still have the option of changing the on-screen language by pressing the **LANGUAGE** button on the TV (page 22).
- The TV must be set to TV input to execute AUTO PROGRAM. Press **ANT** until the channel number appears.
- If your cable or antenna is connected to AUX, then press **AUX** until the channel number appears (KV-27V26, 27V36, 29V22M, 29V36C, 35V36, 35V76, 37V36M, 37V36M only).

Using the buttons on the front of the TV



For KV-27V36, 29V36C, 29V76M, 32V36, 34V36C, 35V36, 35V76 and 37V36M, the control buttons are located on the top of the TV.

- Press **POWER** to turn on the TV. The EASY SETUP GUIDE screen appears.



- Press **POWER** to turn on the TV. The EASY SETUP GUIDE screen appears. Press **CHANNEL +** to select English screens or **CHANNEL -** to select Spanish screens.



- Press **VOLUME -** to continue or **TV/VIDEO** for a DEMO of functions and menus.

Watching the TV



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART.

TV (FUNCTION)	Activates the remote control for use with the TV
TV POWER	Turns the TV on and off. If "VIDEO" appears on the screen, press TV/VIDEO or ANT so that a channel number appears.
	Use for direct channel selection. Press 0-9 to select a channel (for example, to select channel 10, press 1 and 0). The channel will change after 2 seconds, or you can press ENTER for immediate selection.
CH +/-	Press to scan through the channels (+ up or - down).
VOL +/-	Press to adjust the volume (+ up or - down).
JUMP	Press to alternate or jump back and forth between two channels. You can only jump between the last two channels that have been selected with the 0-9 keys.
MUTING	Press to mute the sound ("MUTING" will appear on the screen). Press again or press VOL + to restore sound.
FREEZE	Press to freeze the window picture while in PIP mode. If you are not in PIP mode, pressing FREEZE will cause the main picture to freeze into a window picture. Press for copying down phone numbers, addresses, recipes, etc.




14

Watching two programs at one time — PIP (Except KV-29V22M)


The Picture-in-Picture (PIP) feature allows you to view two channels simultaneously, one in the full size "main" picture and one in a smaller "window" picture. This means that two separate tuners must be available to provide the two signals.

Certain models (KV-27V26, 27V36, 29V36C, 29V66M, 32V36, 32V36C, 35V36, 35V76, 37V36M, 37V36M only) are equipped with a single tuner. This simply means that a VCR must be connected and turned on for PIP to operate.

REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART.

Use the Yellow Labeled Buttons	
PIP 	Press once Press again Press a third
TV/VIDEO 	Press repeatedly TV, Video 1 29V76M, 32 If you use If you use VCR If you is a VCR or
AUDIO 	Press to alternate A J will app

15



Some programs are broadcast with Caption Vision. To display Caption Vision, select CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, or TEXT4 from the menu, then press **DISPLAY** until Caption Vision is displayed.

CC1, CC2, CC3, or CC4 shows you a caption, that is, a printed version of the dialogue or sound effects of a program. (The mode should be set to CC1 for most programs.) TEXT1, TEXT2, TEXT3, or TEXT4 shows you text, that is, information presented using either half or the whole screen. It is not usually related to the program.

Notes

- Poor reception of TV programs can cause errors in Caption Vision and XDS. Captions may appear with a white box or other errors instead of intended text.
- XDS, Caption Vision, and the status display cannot be used at the same time.

SLEEP	Press repeatedly until the TV displays the approximate time in minutes (30, 60, or 90) that you want the TV to shut off automatically. Cancel by pressing until "SLEEP OFF" appears.
DISPLAY	Press repeatedly to step through available displays: Channel number, current time, channel caption (if set), and MTS mode (if SAP is selected) are displayed. SAP indication disappears after three seconds. XDS (Extended Data Service) shows a network name, program name, program type, program length, call letters, and time of the show if the broadcaster offers this service. Caption Vision. Caption Vision will be displayed on the screen if the broadcaster offers this service (see right). To cancel the display, press DISPLAY repeatedly until "DISPLAY OFF" appears. "DISPLAY OFF" disappears after three seconds.
TV/VIDEO	Press repeatedly to step through available video inputs: TV, Video 1 and Video 2 (KV-27V26, 27V36, 29V36C, 29V66M, 32V36, 32V36C, 35V36, 35V76, 37V36M, 37V36M only). TV, Video 1, Video 2 and Video 3 (KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V36, 32V36C, 35V36, 35V76, 37V36M only). Press to change the VHF/UHF input to the AUX input (KV-27V36, 27V36C, 29V36C, 29V66M, 32V36, 32V36C, 35V36, 35V76, 37V36M only). For detailed connection information, see "Cable box and cable" or "Cable and antenna" on page 3.
ANT	KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V36, 32V36C, 34V36C, 35V36, 35V76, 37V36M only. Press to turn off the TV and all other equipment connected with S-Link and return the TV input to either antenna or AUX, whichever was last used.
SYSTEM OFF	Press this button to cycle through the Multi-channel TV Sound (MTS) options. (page 20)

Use the Yellow Labeled Buttons for Pip Operations.


TV/TVTR + CH - CH	Press to change the TV channel in the window picture (+ to increase the channel number and - to decrease). For models KV-27S26, 27V26, 29RS26C, 29V66M, 32S26, 32TW26, 34RS26C, 35S26, and 37RS26, if you are watching the video input in the window picture, you must press VTR (FUNCTION), then use the main CH +/- buttons to change channels.
POSITION [Up/Down Arrow]	Press to move the location of the window picture (counterclockwise) around the main picture.
FREEZE [Freeze Icon]	Press to freeze the window picture. Great for copying down phone numbers, addresses, recipes, etc. If a window picture is displayed, then it will be frozen. If only the main picture is displayed, then it will be frozen and displayed as a window picture. Press FREEZE again to restore the previous screen(s).
SWAP [Swap Icon]	Press to switch the audio and video of the main picture and the window picture. Each time you press SWAP, the picture and sound of the two will be SWAPPED. The channels being received through the AUX jack cannot be displayed as a window picture (KV-27S36, 27V36, 29V36C, 29V76M, 32S36, 32V36, 34V36C, 35V36, 35V76, 37RS26, 37V36M only).

Using the VIDEO menu



For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 18.

To select the VIDEO menu



To restore the factory settings

Press RESET on the remote control while the VIDEO menu is displayed.

MODE	STANDARD
Customized picture viewing	Select to receive a standard picture.
PICTURE	SPORTS Select to receive a finely detailed picture.
Picture Adjustment	Adjust slider left (cursor down) to decrease picture contrast and soften the color.
HUE	Adjust slider right (cursor up) to increase picture contrast and create more vivid color.
Picture Adjustment	Adjust slider left (cursor down) to decrease the green tones.
COLOR	Adjust slider right (cursor up) to increase the green tones.
Picture Adjustment	Adjust slider left (cursor down) to decrease color intensity.
BRIGHTNESS	Adjust slider right (cursor up) to increase color intensity.
Picture Adjustment	Adjust slider left (cursor down) to darken the picture.
SHARPNESS	Adjust slider right (cursor up) to brighten the picture.
Picture Adjustment	Adjust slider left (cursor down) to soften the picture.
LIGHTSENSOR	Adjust slider right (cursor up) to sharpen the picture.
Picture Adjustment	(KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V26, 32V36, 34V36C, 35V36, 35V76, 37V36M only)
	ON TV automatically adjusts the brightness of the picture according to the brightness of the room.
	OFF Brightness remains at preset value.

Adjusting your SET UP (menus)

Learning menu selection

Use the MENU button to access a menu and use the Select buttons to alter settings. Use the following example to learn how to modify settings.


- Press the MENU button. The main menu appears.



- Press the select buttons (▲ or ▼) to highlight the desired menu and press (Enter) to activate it.



- Press the select buttons (▲ or ▼) to select the desired option.



- Press (Enter). Options for your selection will be displayed.




When you are done with changes to the selected menu, choose MENU to return to the main menu. Once you have completed all menu corrections, press MENU on the remote control to exit the menu screens.

Note

- Pressing MENU on the remote control will allow you to exit from the menus.


Adjusting your SET UP (menus) (continued)

Using the AUDIO menu



For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 18.

To select the AUDIO menu



To restore the factory settings


Press RESET on the remote control while the AUDIO menu is displayed.

Tip
Press (Enter) for direct selection of an EFFECT setting.

TREBLE	Sound Adjustment
Adjust slider left (cursor down) to decrease higher pitched sounds.	
Adjust slider right (cursor up) to increase higher pitched sounds.	
BASS	Sound Adjustment
Adjust slider left (cursor down) to decrease low pitched sounds.	
Adjust slider right (cursor up) to increase low pitched sounds.	
BALANCE	Sound Adjustment
Adjust slider left (cursor down) to emphasize left speaker volume.	
Adjust slider right (cursor up) to emphasize right speaker volume.	
EFFECT	Customize sound effect based on the program's audio type
SURROUND- Simulates theater quality sound (only for stereo programs). (KV-27S26, 27S36, 29RS26, 29RS26C, 32S26, 32TW26, 34RS26C, 35S26, 35S36, 37RS26 only)	
SRS- Produces a dynamic three dimensional sound for stereo or encoded audio signals. (KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V26, 32V36, 34V36C, 35V36, 35V76, 37V36M only)	
SIMULATED- Adds a surround-like effect to mono programs. (KV-27V26, 27V36, 29V36C, 29V66M, 29V76M, 32V26, 32V36, 34V36C, 35V36, 35V76, 37V36M only)	
STEREO	Select for stereo reception when viewing a program broadcast in stereo.
SAP- Select to listen to bilingual broadcast (non-SAP programs will be muted when this feature is selected).	
MONO	Select for mono reception (use to reduce noise during stereo broadcasts) when this feature is selected.
Quick MTS access- Press MTS on your remote to cycle through the MTS options as follows: (STEREO → SAP → MONO → STEREO)	
SPEAKER	Custom selection of audio output source
ON- Select to listen to the sound from the TV speakers and a separate stereo system.	
OFF- Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.	
AUDIO OUT	Easy control of volume adjustments
AUDIO OUT can only be set when speakers are set to OFF.	
VARIABLE- Adjust output volume using the TV settings.	
TREBLE and Balance- Adjust the TV's settings. Volume, Bass, Treble, and Balance are held at a fixed level. Volume, Bass, Treble, and Balance are fixed.	
FIXED- Sound output is held at a fixed level. Volume, Bass, Treble, and Balance are fixed to the factory settings. Volume adjustments are made through your stereo.	


Adjusting your SET UP (menus) (continued)

Using the SET UP menu



For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 18.

To select the SET UP menu:



If any menu items are "grayed out", press the ANT button on your remote so that a channel number appears.

Favorite channel feature is not available for the AUX input.

22

DAYLIGHT SAVING Automatically adjusts the time.	Spring* Select YES to compensate for Daylight Saving Time. The current time automatically moves one hour ahead. Fall: Select NO at the end of Daylight Saving Time. The current time moves back one hour.
CURRENT TIME SET Necessary for the TIMER.	CURRENT TIME SET window will appear 1 Press \uparrow or \downarrow on the select buttons until the current day (MON-SUN) is displayed. Press \rightarrow to select. 2 Press \uparrow or \downarrow on the select buttons until the current hour (01-12) and AM/PM is displayed. Press \rightarrow to select. 3 Press \uparrow or \downarrow on the select buttons until the current minute (00-59) is displayed. 4 Press \rightarrow . The clock has now started. Press MENU to exit.
ON/OFF TIMER Wake up or scheduled viewing.	ON/OFF TIMER window will appear 1 Press \uparrow or \downarrow on the select buttons until the desired day (MON-SUN) or range of days (EVERY Sun-Sat or EVERY Mon-Fri) is displayed. Press \rightarrow to select. 2 Indicate the time (hours then minutes) that you want the TV to turn on by pressing \uparrow or \downarrow and then \rightarrow . 3 Set the time duration (maximum of 6 hours) by pressing \uparrow or \downarrow and then \rightarrow . 4 Press \rightarrow . TO CANCEL THE TIMER FUNCTION, PRESS RESET. The timer is now set. The TIMER indicator on your TV will be lit. Press MENU to exit. When you perform AUTO PROGRAM, all TIMER settings will be erased.

21


Using the TIMER menu



After setting the clock you can use the timer to turn the TV on and off.

For detailed information on using the remote to modify menu settings, refer to "Learning menu selection" on page 18.

To select the TIMER menu:



Tip

Set daylight saving time before setting the clock. Any loss of power will cause these settings to be erased.

Operating video equipment

Setting the manufacturer's code

You can use the supplied remote control to operate Sony or non-Sony video equipment that has an infrared sensor.

- 1 Press CODE SET.
- 2 Press VTR (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

VCR manufacturer code numbers

Manufacturer	Code
Sony	301, 302, 303
Avia	301, 338, 344
Admiral (M. Ward)	314, 337
Audio Dynamic	330, 343
Bell & Howell (M. Ward)	319, 317
Brookstone	309, 308
Canon	332
Craig	315, 302, 342
Clifferton	315
Curtis Mathis	304, 338, 309

24

Manufacturer	Code
Danewo	341, 312, 309
DBX	314, 336, 337
Dinacasa	319, 320, 316, 317, 318, 341
Emerson	330, 334, 335, 338
Fisher	329, 304, 309
Futaba	332
General Electric	306, 304, 305, 338
Go Video	309, 305, 304, 330, 314, 335, 337
Goldstar	314, 336, 337
Hitachi	314, 336, 332, 337
Instant Replay	314, 336, 332, 337
JVC	314, 336, 332, 337
Kenwood	314, 336, 332, 337
LXI (Sears)	332, 305, 335, 334, 330, 335, 338
Magnavox	306, 309, 310
Marantz	314, 336, 337
Marta	309, 335
Memorex	305, 304
Mnola	323, 324, 325, 326
MitsubishiMGA	325, 338, 321
Multitech	314, 336, 337
NEC	314, 336, 337
Onkyo	308, 309, 306, 307
Panasonic	308, 309, 306, 307
Pentax	308, 309, 306, 307
Philco	308, 309, 306, 307
Philips	308, 309, 306, 307
Pioneer	308, 309, 306, 307
Quasar	308, 309, 306, 307
RCA/PROSCAN	304, 305, 306, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338

MDP manufacturer code numbers

Manufacturer	Code
Sony	701
Kenwood	707
Magnavox	703
Marantz	702
Mitsubishi	702
Panasonic	704, 710
Philips	703

CHANNEL BLOCK Prevent child access to certain channels.	You will be able to block two channels. With the CHANNEL BLOCK window open: 1 Select 1 or 2 and press \rightarrow . 2 Press \uparrow or \downarrow on the select buttons to display the channel you want to block. 3 Press \rightarrow to activate. When you select the desired channel, "BLOCKED" will appear on the screen. Caption Vision, XDS, and output from the selected channel will also be blocked. To erase your CHANNEL BLOCK settings, press RESET while in the CHANNEL BLOCK window. When you perform AUTO PROGRAM, your CHANNEL BLOCK settings will be erased.
FAVORITE CHANNEL Quick access to favorite channels.	Setting FAVORITE CHANNEL With the FAVORITE CHANNEL window open: 1 Press \rightarrow and then \uparrow or \downarrow on the select buttons to select AUTO or MANUAL, and press \rightarrow again. 2 Press \uparrow or \downarrow on the select buttons to select the last five channels that you chose with the remote control (0-9 buttons to be selected). 3 Press \uparrow or \downarrow on the select buttons to select 1, 2, 3, 4, or 5 and press \rightarrow . 4 For KV-27V36, 27V38, 29V36C, 29V38C, 29V76M, 35V36C, 35V38C, 35V76, 37V36M, 37V38M, 37V66M, 37V76M, 37V86M, 37V96M, 37V98M, 37V98M only, you can use the \rightarrow button to select the desired channel and press \rightarrow . Using FAVORITE CHANNEL: 1 Press \rightarrow and your FAVORITE CHANNEL options appear. 2 Press \uparrow or \downarrow to select the channel you want to watch, and press \rightarrow . 3 For models KV-27V36, 27V38, 29V36C, 29V38C, 29V76M, 35V36C, 35V38C, 35V76, 37V36M, 37V38M, 37V66M, 37V76M, 37V86M, 37V96M, 37V98M only, if PREVIEW is turned on, then a window picture will display your favorite channels as you cycle through the options.
VIDEO LABEL Easy recognition of connected equipment (e.g. VHS, VHS, etc.).	This feature allows you to label each input mode so that you can easily identify the connected equipment (e.g. VHS). 1 Press \uparrow or \downarrow on the select buttons to select the input mode you want to label and press \rightarrow . 2 Press \uparrow or \downarrow on the select buttons to select the label and press \rightarrow . 3 For models KV-27V36, 27V38, 29V36C, 29V38C, 29V76M, 35V36C, 35V38C, 35V76, 37V36M, 37V38M, 37V66M, 37V76M, 37V86M, 37V96M, 37V98M only, Video 1: VHS, 2mm, BETA, LD, GAME, DBS, DVD, WEB, RECEIVER Video 2/3: VHS, 9mm, BETA, LD, GAME, DBS, DVD, WEB
LANGUAGE	(Except Canadian models) Select from available languages to cause all menus to appear in your language of choice.
TILT CORRECTION Adjust your picture.	Use this feature to correct any tilt of the picture KV-35S26, 35S36, 35V36, 35V76, 37V36, 37V66, 37V86, 37V96M only. Press \uparrow or \downarrow on the select buttons to select a correction between +5 and -5 and press \rightarrow .

23

Operating a cable box or DBS receiver

Programming the remote

You can program the supplied remote control to operate a cable box or DBS receiver

- 1 Press CODE SET
- 2 Press DBS/CABLE (FUNCTION)
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart
- 4 Press ENTER

To operate the TV

Press TV (FUNCTION). Then use the TV control buttons to control the TV

For more details on operating the cable box or DBS receiver

Refer to the operating instructions that come with the equipment

Operating an MDP

Buttons on the remote control

- To turn on or off Press VTR (POWER)
- To play Press the ►
- To stop Press ■
- To pause Press II
- To search the picture forward or backward Keep pressing ►► or ◄◄ during playback
- To resume normal playback, release the button
- To search the chapter forward or backward Press CH +/—

Pioneer	702
RCA	702, 709
Sanyo	706
Sharp	705
Yamaha	703, 708

Tips

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- The code numbers for Sony equipment are assigned at the factory as follows

VHS VCR	301 (preset code for the supplied remote control)
8 mm VCR	302
Beta, ED Beta VCRs	303

- When you remove the batteries, the code number may revert to the factory setting

Operating a VCR	Buttons on the remote control
To turn on or off	Press VTR (POWER)
To select a channel directly	Press the 0-9 buttons
To change channels	Press CH +/-
To record	Press ► while pressing ● First release ►, then release ●
To play	Press ►
To stop	Press ■
To fast forward	Press ►►
To rewind the tape	Press ◄◄
To pause	Press II
To search the picture forward or backward	Press ►► or ◄◄ during playback
To change input mode	Press TV/VTR

Troubleshooting

Troubleshooting

Cannot Operate Single-Tuner PIP (KV-27V26, 27V26, 29V36C, 29V66M, 32V36C, 32V76M, 34V36C, 35V36, 37V36M only)

- Check that cable is connected to the VCR, and the VCR is turned on
- Check that the VCR is connected to the TV

No picture (screen not lit), no sound

- Make sure the power cord is plugged in
- Operate with the buttons on the TV and the remote control

Insert the batteries in the remote control with the correct polarity

- Replace the batteries with new ones if they are weak

Check to see if the TV/VIDEO setting is correct when watching TV, set to TV, and when watching video tapes, set to VIDEO1, 2, or 3

Try another channel. It could be station trouble

- Perform AUTO SET UP again using the SET UP button to return to the factory preset condition (page 13)

Troubleshooting (continued)

Cannot receive upper channels (UHF) when using an antenna

- Make sure CABLE is OFF in the SET UP menu (page 22)
- Use AUTO PROGRAM to add receivable channels that are not presently in TV memory (page 22)

Cannot receive any channels when using cable TV

- Make sure CABLE is ON in the SET UP menu (page 22)
- Use AUTO PROGRAM to add receivable channels that are not presently in TV memory (page 22)

Remote control does not operate

- Batteries could be weak. Replace the batteries
- Press TV (FUNCTION) when operating your TV

Make sure the TV's power cord is connected securely to the wall outlet

- Locate the TV at least 3-4 feet away from fluorescent lights
- Make sure the TV's power cord is connected securely to the wall outlet

Check the S-Link connection (page 4.5)

Poor or no picture (screen lit), good sound

- Adjust PICTURE in the VIDEO menu (page 19)
- Adjust BRIGHTNESS in the VIDEO menu (page 19)

Only snow and noise appear on the screen

- Check the CABLE setting in the SET UP menu (page 22)
- Check the antenna/cable connections
- Make sure the channel is broadcasting programs
- Press ANT to change the input mode (page 15)

Dotted lines or stripes

- Adjust the antenna
- Move the TV away from noise sources such as cars, neon signs, or hair-dryers

Double images or ghosts


- Use a highly directional outdoor antenna or a cable (when the problem is caused by reflections from nearby mountains or tall buildings)

Cannot operate menu


- If the item you want to choose appears in gray, you cannot select it. Press TV/VIDEO correctly

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

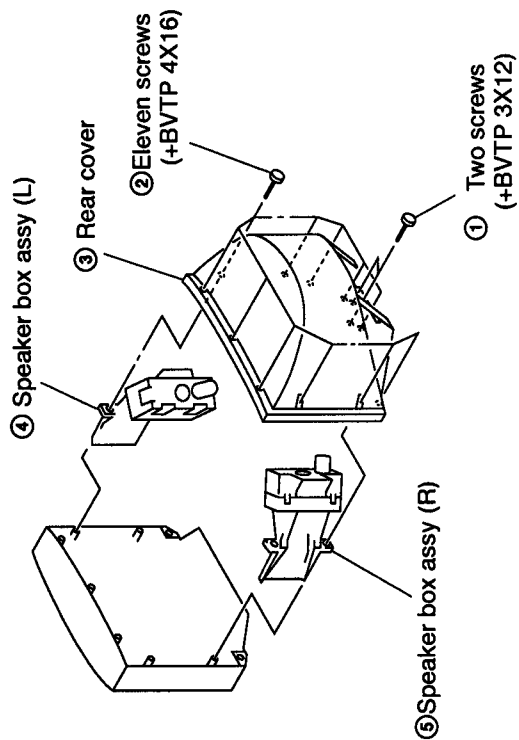


2-2. CHASSIS ASSY REMOVAL

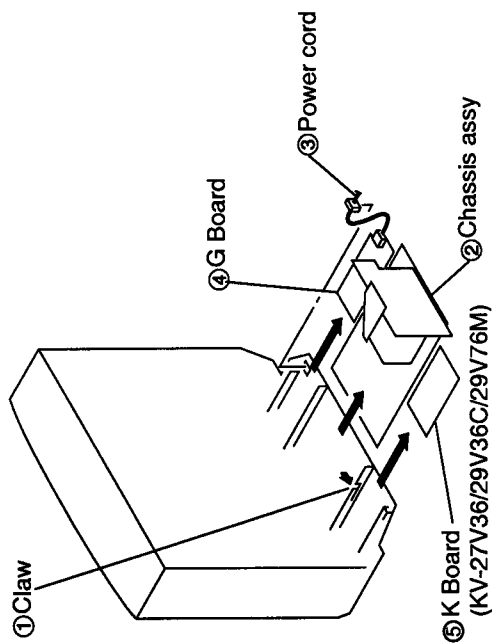

2-3. SERVICE POSITION

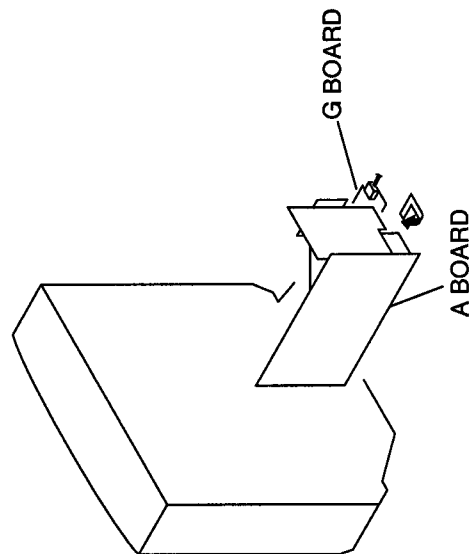


2-4. CONTROL SWITCH REMOVAL (KV-27V36/29V36C/29V76M)

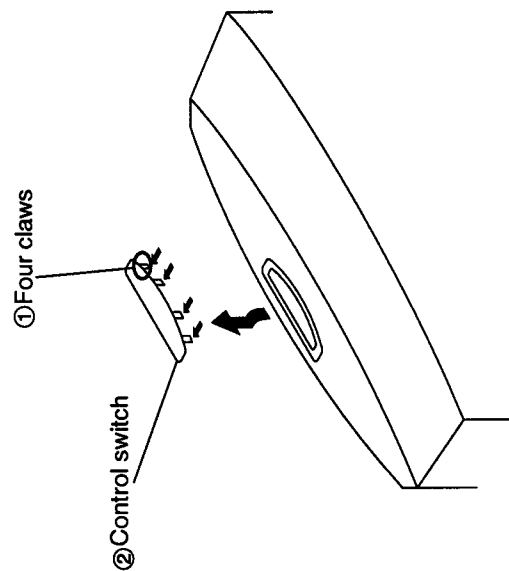


2-5. PICTURE TUBE REMOVAL

WARNING : Before removing anode cap H.V. remains in the CRT even after the power is disconnected.

To avoid electrical shock before attempting to remove the anode cap, discharge CRT: Short between anode and CRT coated earth ground strap.

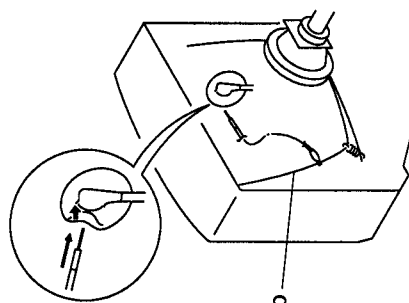

Coated earth ground strap

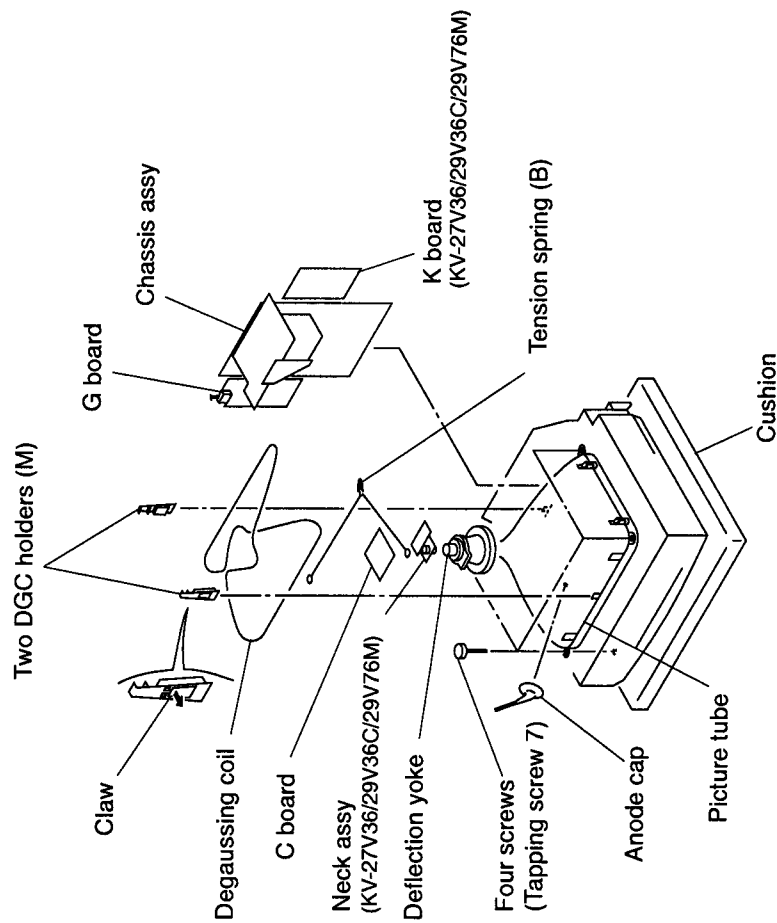


• REMOVAL OF THE ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.


• REMOVAL PROCEDURES



① Turn up one side of the rubber cap in the direction indicated by arrow (a).

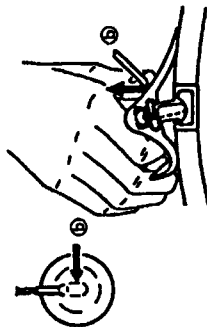


② Use your thumb to pull the rubber cap firmly in the direction indicated by arrow (b).

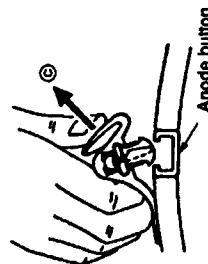


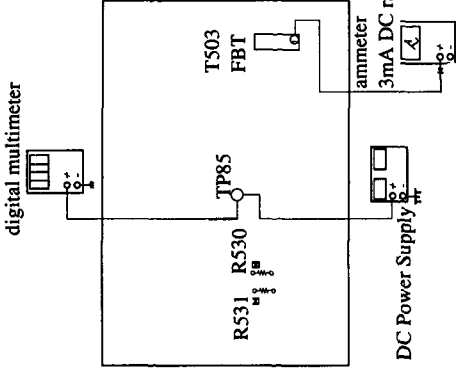
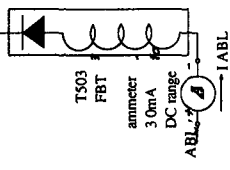
③ When one side of the rubber cap separates from the anode button, the anode-cap can be removed by turning the rubber cap and pulling it in the direction of arrow (c).

• HOW TO HANDLE AN ANODE-CAP

- ① Do not use sharp objects which may cause damage to the surface of the anode-cap.
- ② Do not squeeze the rubber covering too hard to avoid damaging the anode-cap. A material fitting called a shatter-hook terminal is built into the rubber.
- ③ Do not force turn the foot of the rubber cover. This may cause the shatter-hook terminal to protrude and damage the rubber.

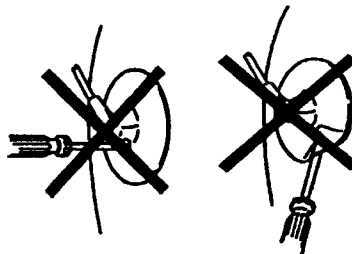

SECTION 3 SAFETY RELATED ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<p>RESISTOR CONFIRMATION METHOD (HOLD-DOWN CONFIRMATION) AND READJUSTMENTS</p> <p>The following adjustments should always be performed when replacing the components marked with  on the A and G Board schematic diagrams. (Hold-down operation confirmation)</p> <p>Step 1</p> <p>Preparation before confirmation:</p> <p>a) Turn the POWER switch ON, input a white signal and set the PICTURE and BRIGHTNESS controls to maximum.</p> <p>b) Confirm that the voltage at the check terminal of TP85 is more than 21.0VDC when the set is operating normally. (120 ± 2.0 VAC) or (220 ± 2.0 VAC for KV-29V36C)</p>		<p><input checked="" type="checkbox"/> marked parts A Board IC351, IC501 D519, D520, D521, C531, C532, R387, R529, R530, R531 R532, R533, R550, T503 G Board IC643, R661</p> <p>TP85 (H. PROT)</p>	<p><input checked="" type="checkbox"/> R530, 531</p>	<p>A BOARD - CONDUCTOR SIDE -</p> 
<p>Step 2</p> <p>Input a white signal and verify that I ABL is within the specified range.</p> <p>Step 3</p> <p>Record the voltage between TP85 and ground.</p>	White Picture		<p>PICTURE BRIGHTNESS maximum</p> 	<p>[Check Condition] Step 2 $1760 \pm 100 \mu A$ $120^{+2.0}_{-0}$ VAC (Power Supply) $220^{+2.0}_{-0}$ VAC (Power Supply) (KV-29V36C only)</p>
<p>Step 4</p> <p>Using an external DC power supply, apply voltage between TP 85 and ground. Increase the voltage gradually and confirm that the hold-down works (raster disappears) at lower than the voltage recorded in Step 3.</p>	White Picture			<p>[Check Condition] Step 4 lower than 26.05 VDC $120^{+2.0}_{-0}$ VAC (Power Supply) $220^{+2.0}_{-0}$ VAC (Power Supply) (KV-29V36C only)</p>
<p>Step 5</p> <p>Confirm that a voltage of more than 21.0VDC appears between TP85 and ground.</p>	White Picture		<p>PICTURE BRIGHTNESS maximum</p>	<p>[Check Condition] Step 5 more than 21.0 VDC $120^{+2.0}_{-0}$ VAC (Power Supply) $220^{+2.0}_{-0}$ VAC (Power Supply) (KV-29V36C only)</p>

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<div style="border: 1px solid black; padding: 5px;">B+ VOLTAGE CONFIRMATION</div> <p>The following adjustments should always be performed when replacing the components marked with ■ on the schematic.</p> <ol style="list-style-type: none"> 1) Supply AC Voltage with a variable auto-transformer. 2) Input an entirely monoscope signal. 3) Set the PICTURE control and the BRIGHTNESS control to initial reset value. 4) Confirm the voltage of the G board CN641 between pin 1 to ground is less than 136.5 VDC. 5) If step 4) is not satisfied, replace the R661 and repeat above steps. 	Variable auto-transformer	G-Board IC643, R661		130 \pm^{+0}_{-0} V AC
	Monoscope		PICTURE, BRIGHTNESS initial reset	220 \pm^{+0}_{-0} V AC (KV-29V36C only)
		G Board CN641 Pin 1 - ground		

NOTES:

[illegible]

NOTES:

[illegible]


NOTES:

This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal black lines across the entire width of the page, typical of standard notebook or primary school writing paper. There are no margins, text, or other markings present.

— 19 —

— 20 —




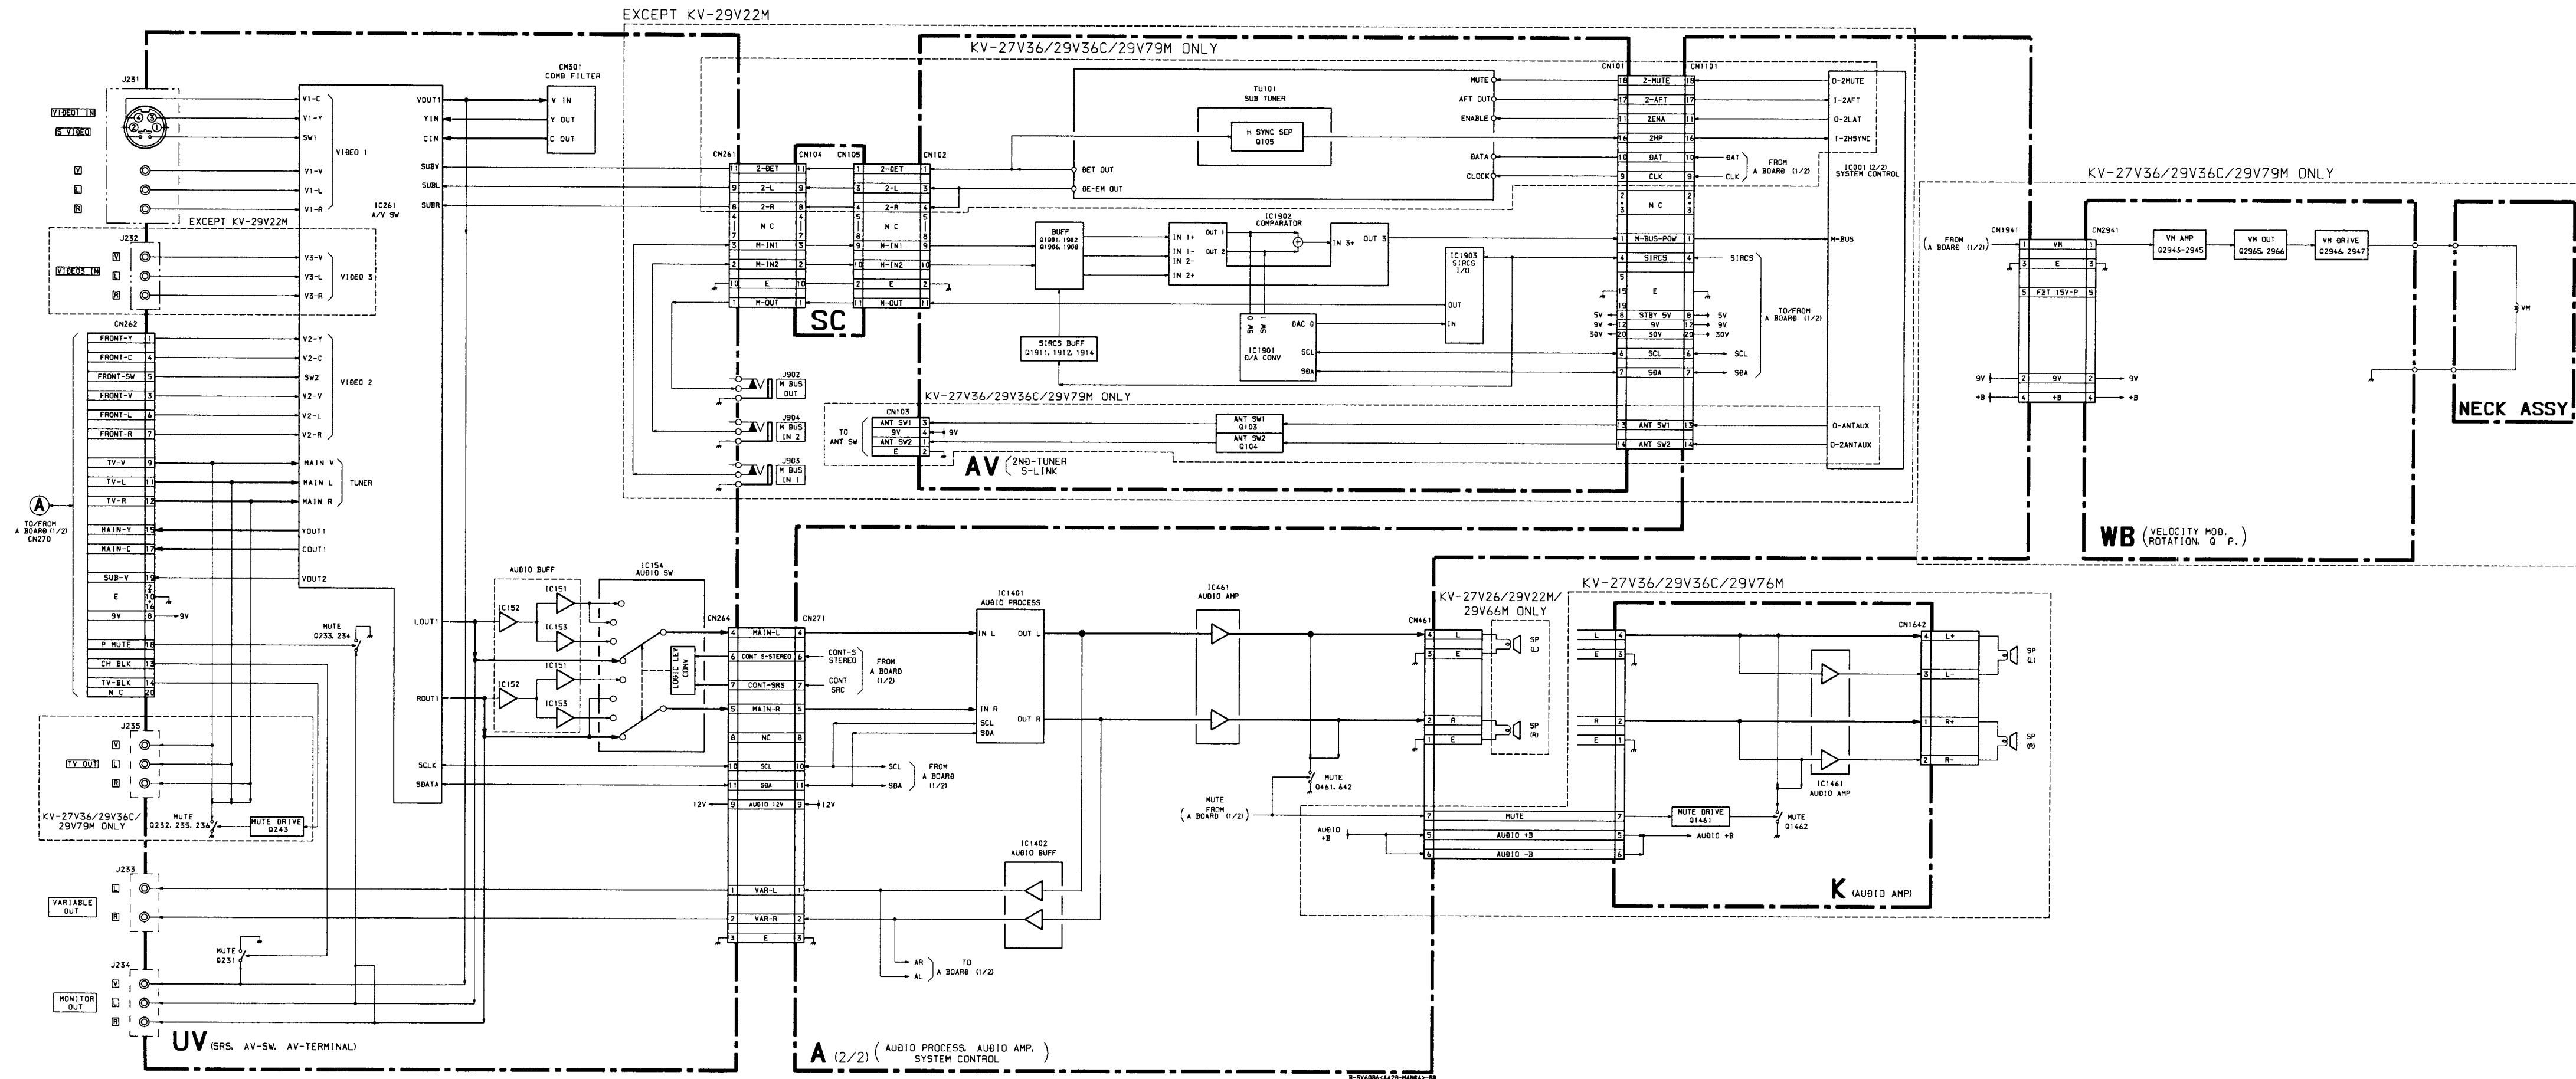

SECTION 4

DIAGRAMS (continued)

4-2. CIRCUIT BOARDS LOCATION

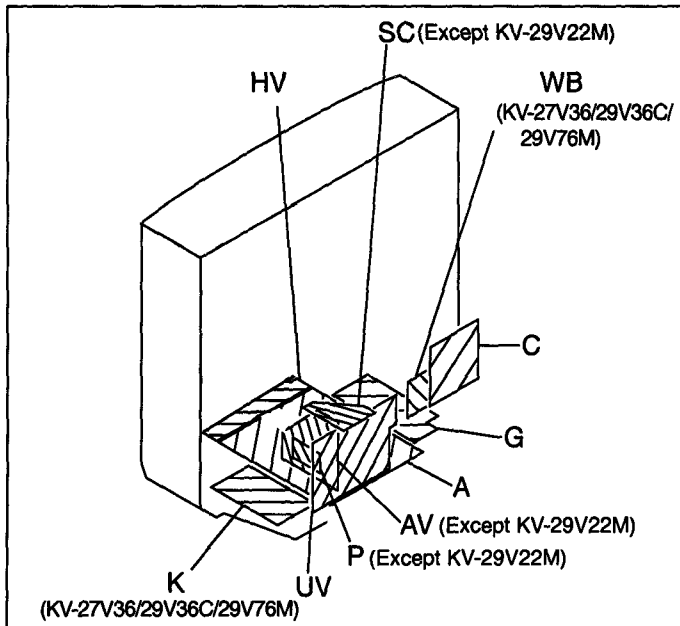

- Readings are taken with a color-bar signal input
- Readings are taken with a 10M Ω digital multimeter
- Voltages are DC with respect to ground unless otherwise noted
- Voltage variations may be noted due to normal production tolerances.
- All voltages are in V
- S Measurement impossibility.
- B+line
- B- line
- (Actual measured value may be different)
- signal path (RF)
- Circled numbers are waveform references

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RW	NONFLAMMABLE WIREWOUND
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: *	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

4-3. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

Note:

- All capacitors are in μ F unless otherwise noted. pF \cdot μ F 50WV or less are not indicated except for electrolytics and tantalums.
- All electrolytics are in 50V unless otherwise specified.
- All resistors are in ohms.
k Ω =1000 Ω , M Ω =1000k Ω
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm

Rating electrical power : $\frac{1}{4}$ W

- $\frac{1}{4}$ W in resistance, $\frac{1}{10}$ W and $\frac{1}{8}$ W in chip resistance.
- : nonflammable resistor.
- : fusible resistor.
- Δ : internal component.
- : panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation.
Should replacement be required, replace only with the value originally used
- When replacing components identified by , make the necessary adjustments indicated. If results do not meet the specified value, change the component identified by and repeat the adjustment until the specified value is achieved.
(Refer to R530 and R531 adjustment on Page 14 – 15.)
- When replacing the part in below table, be sure to perform the related adjustment.

Part replaced()	Adjustment()
IC351, IC501, D519, D520, D521 C531, C532, R387, R529, R530, R531, R532, R333, R550, T503.....A BOARD IC643, R661.....G BOARD	R530, R531

Note:

The symbol display is on the component side.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

The symbol indicate fast operating fuse.
Replace only with fuse of same rating as made.

Note:

Les composants identifiés par un tramé et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Le symbole indique une fusible à action rapide. Doit être remplacée par une fusible de même valeur, comme marqué.

P BOARD IC VOLTAGE LIST

	pin	volt		pin	volt		pin	volt
IC3301	1	GND	IC3302	20	3 0	IC3303	13	NC
	2	NC		21	3 0		14	-3 0
	3	GND		22	4 7		15	GND
	4	4 0		23	GND		16	GND
	5	6 8		24	2 9		17	0 7
	6	GND		IN	9 1		18	0 5
	7	0 2		OUT	5 3		19	0 2
	8	0		1	GND		20	0 3
	9	1 8		2	3 2		21	5 1
	10	0 3		3	2 6		22	5 2
	11	8 2		4	2 3		23	NC
	12	8 2		5	5 1		24	NC
	13	3 9		6	GND		25	GND
	14	3 4		7	0 5		26	NC
	15	0		8	0		27	GND
	16	2 8		9	0 6		28	2 3
	17	NC		10	5 2		29	5 2
	18	2 5		11	2 1		30	2 6
	19	3 5		12	0 3		31	4 2
							32	2 5

All voltages are in V


P BOARD TRANSISTOR VOLTAGE LIST

	B	C	E
Q3301	5 3	9 1	4 7
Q3305	0 5	GND	1 2
Q3306	0 8	GND	1 4
Q3307	0 6	GND	1 3
Q3308	0	GND	2 8
Q3310	0	5 2	GND
Q3312	0	0	0 8
Q3313	0 8	0 4	GND


All voltages are in V

P [P in P]
(except KV-29V22M) — P BOARD —

< COMPONENT SIDE >

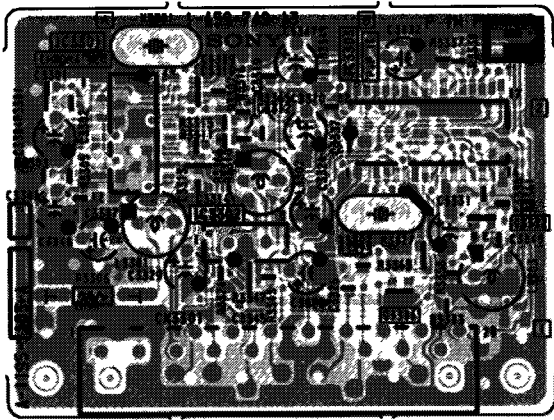



< CONDUCTOR SIDE >

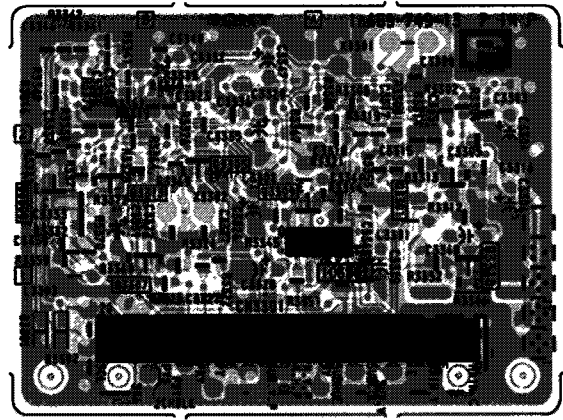

- : Pattern from the side which enables seeing.
- : Pattern of the rear side.

P BOARD WAVEFORMS

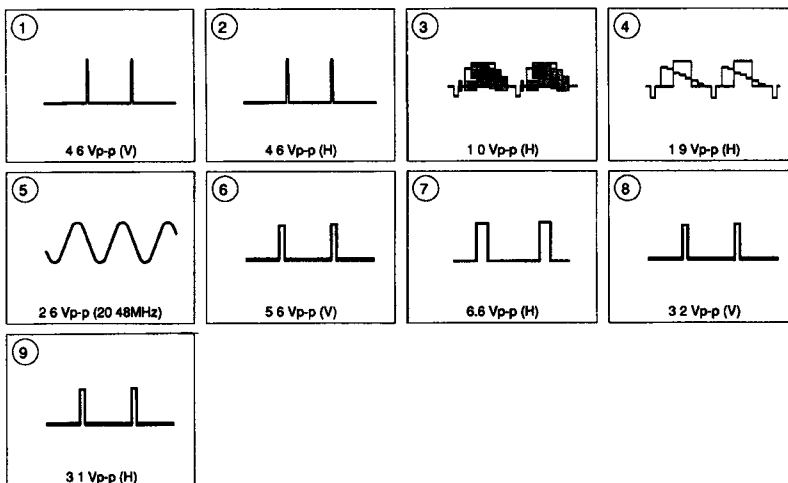




A BOARD LOCATOR LIST


DIODE		IC461	F-5
D001	A-5	IC501	H-3
D002	D-3	IC561	G-7
D003	A-5	IC1001	D-8
D004	C-2	IC1401	D-10
D011	A-5	IC1402	E-11
TRANSISTOR			
D013	C-5	Q001	A-5
D014	D-3	Q002	C-4
D015	C-4	Q003	H-2
D353	D-7	Q004	D-4
D356	E-3	Q010	D-3
D360	E-7	Q011	D-3
D362	E-7	Q012	D-3
D368	C-7	Q013	D-4
D462	F-1	Q014	D-3
D501	H-3	Q015	D-3
D502	H-3	Q016	D-3
D503	H-9	Q017	A-5
D504	I-8	Q301	C-7
D505	H-8	Q302	C-7
D506	H-8	Q303	C-7
D507	I-3	Q354	D-7
D515	H-5	Q356	C-4
D516	H-3	Q357	E-5
D518	I-4	Q358	D-8
D519	F-8	Q461	G-3
D520	G-3	Q462	F-3
D521	G-3	Q501	J-4
D530	F-9	Q502	J-9
D531	E-11	Q511	H-3
D534	F-9	Q512	H-4
D561	F-8	Q551	I-2
D562	G-3	Q552	I-2
D1102	B-10	Q561	F-6
D1103	B-12	Q562	F-6
D1248	E-12	Q563	H-2
D1263	D-5	Q1102	A-11
D1264	E-11	Q1103	A-10
IC			
IC001	B-4	Q1231	E-12
IC002	C-3	Q1232	E-12
IC351	D-5		

Schematic diagrams


← P board A board →

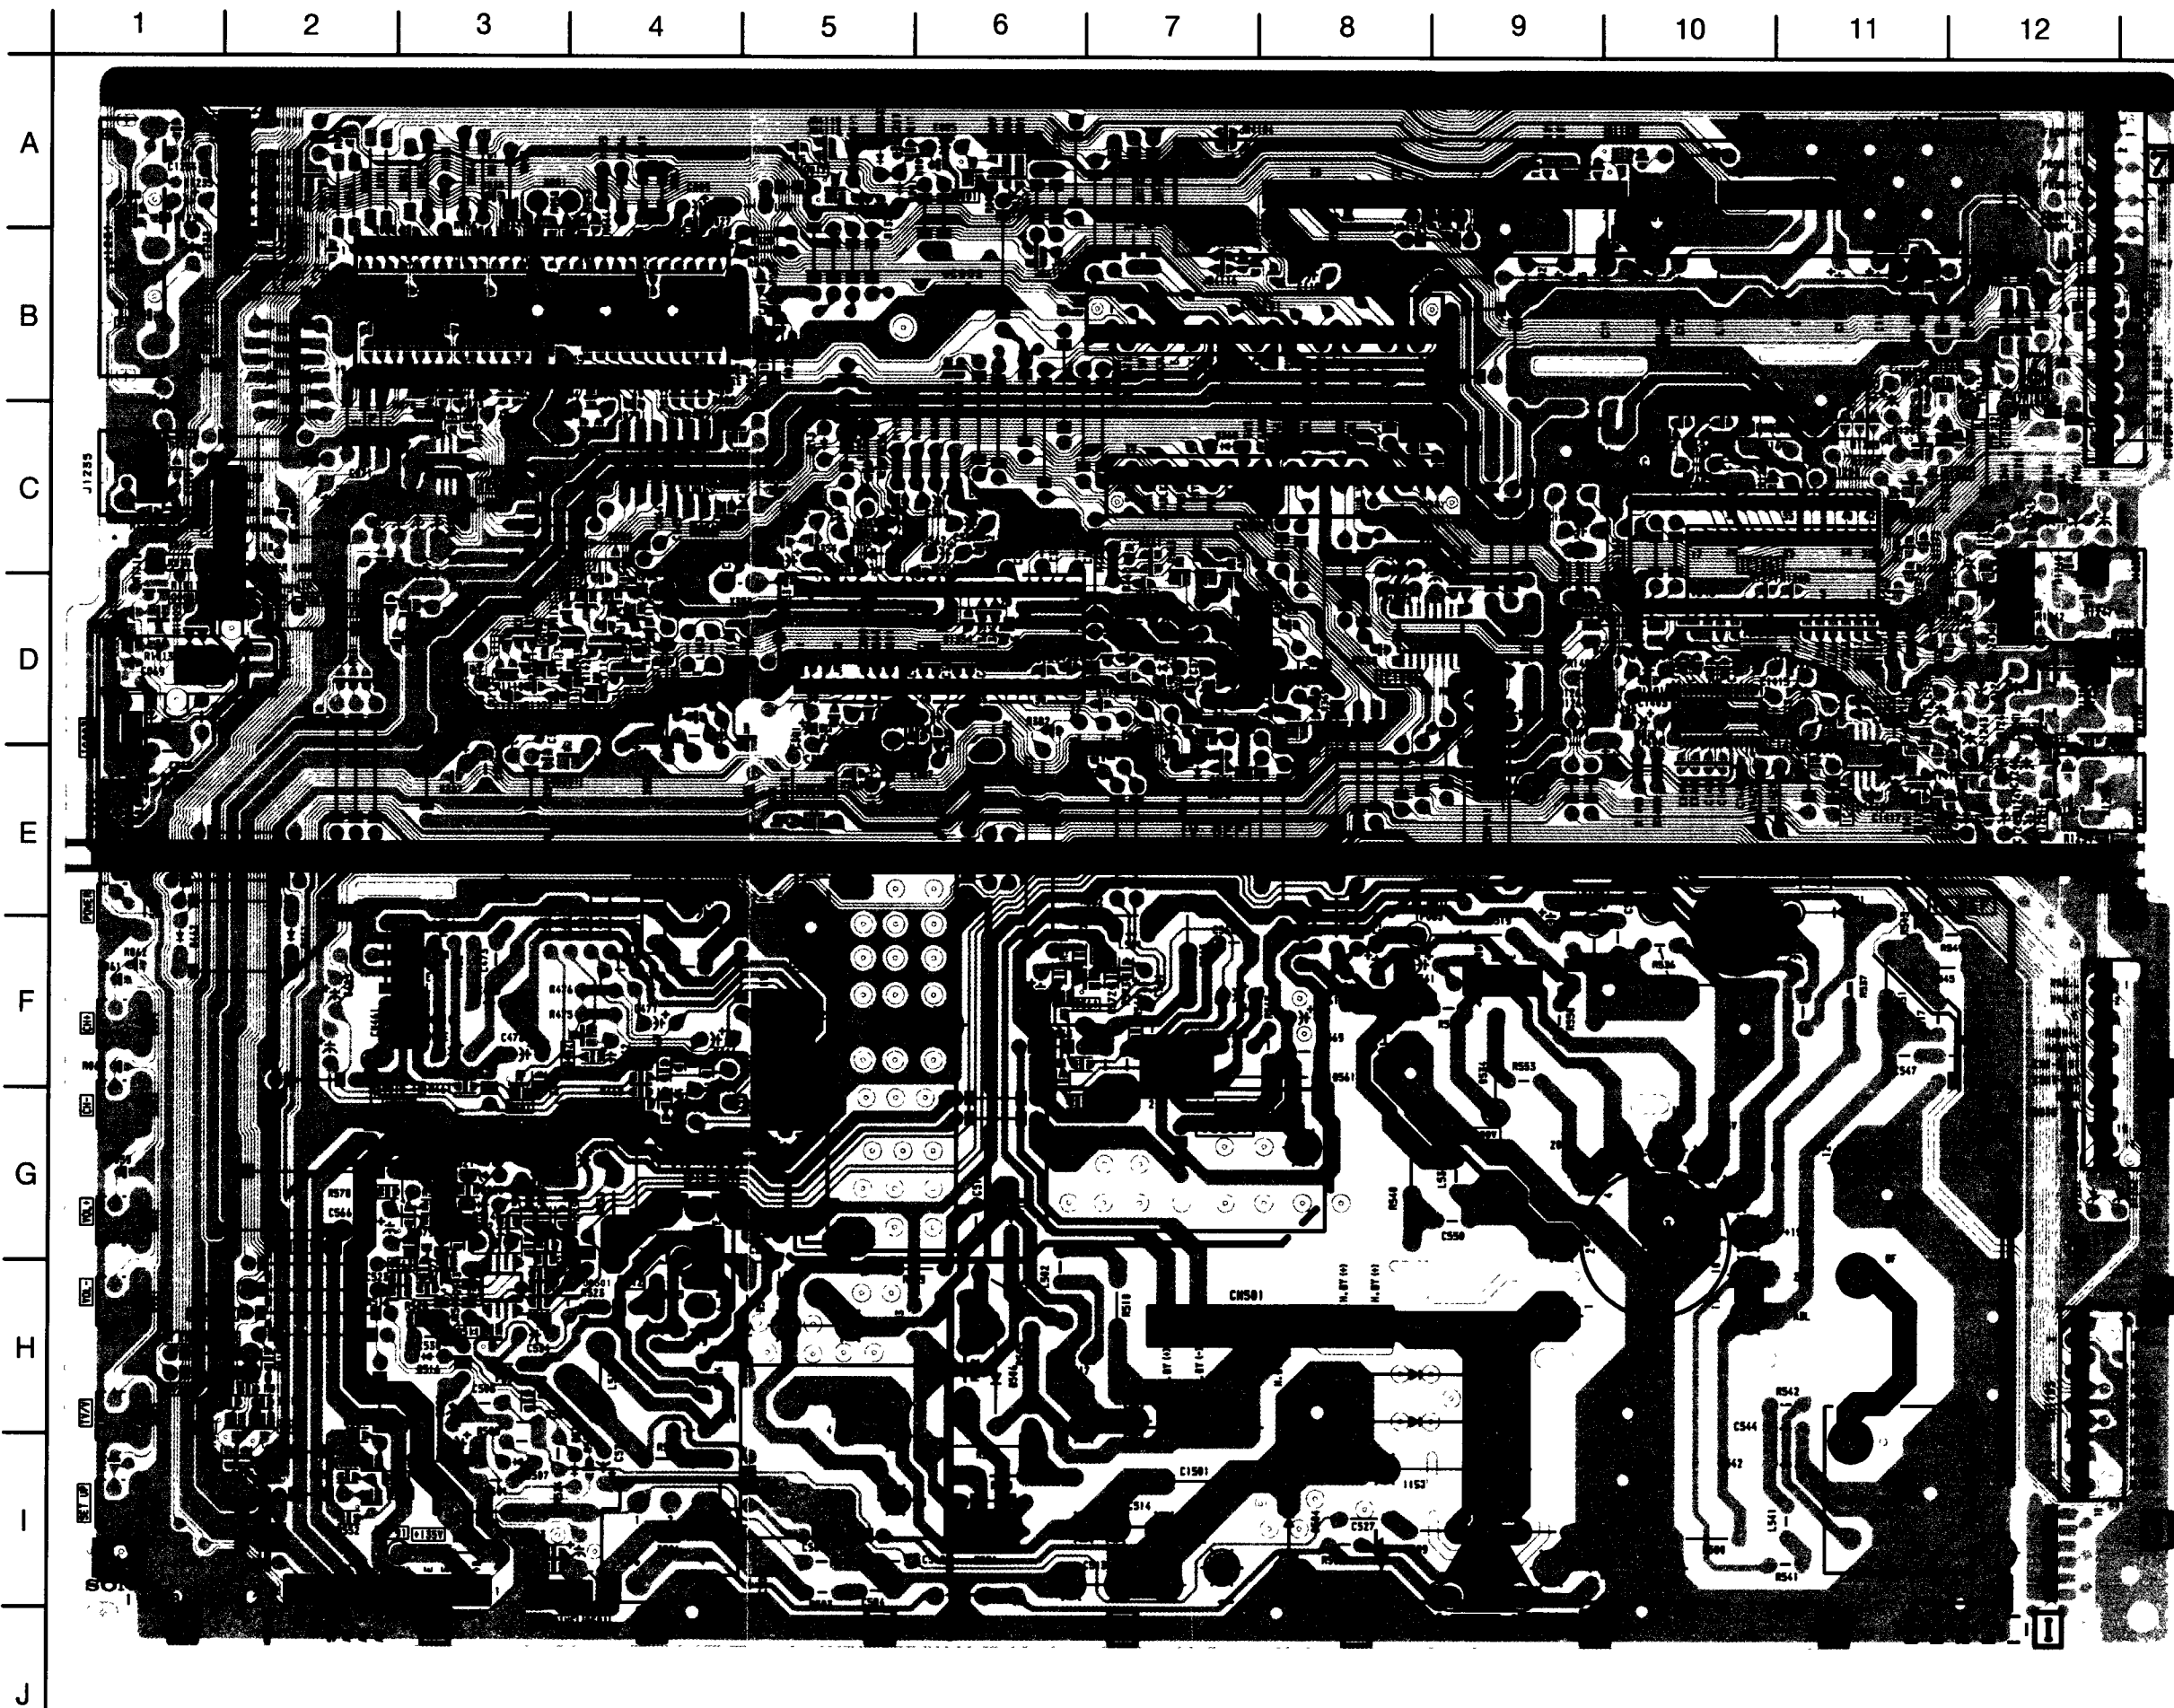


A BOARD: IC1001 CXA1315M

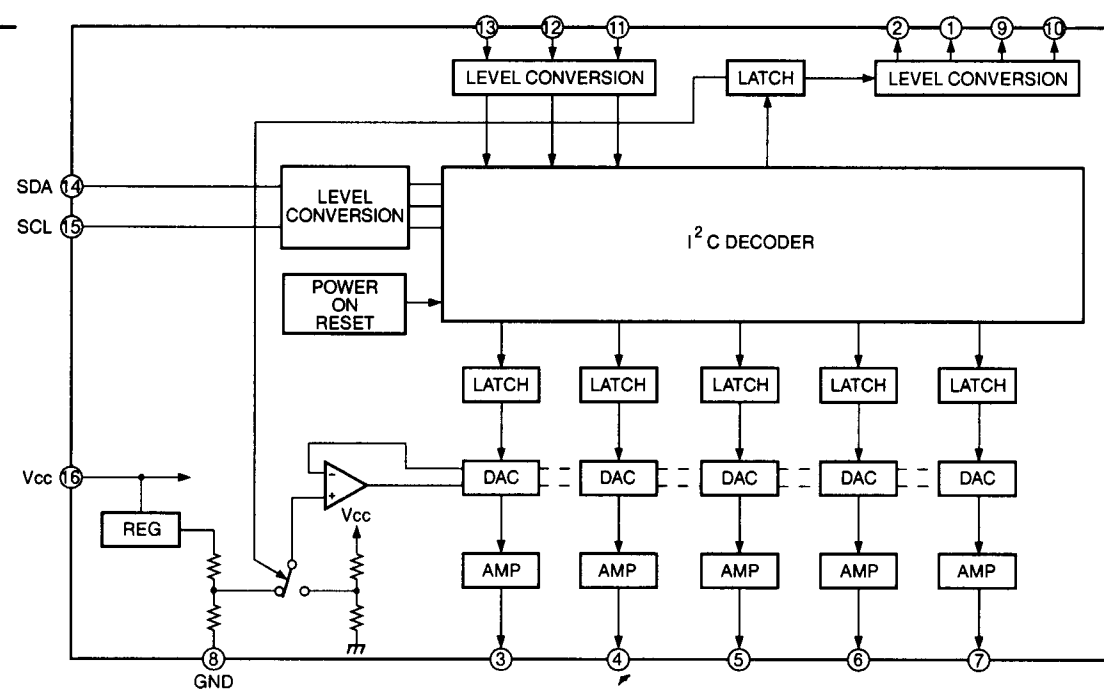


A BOARD: IC1401 BH3856FS

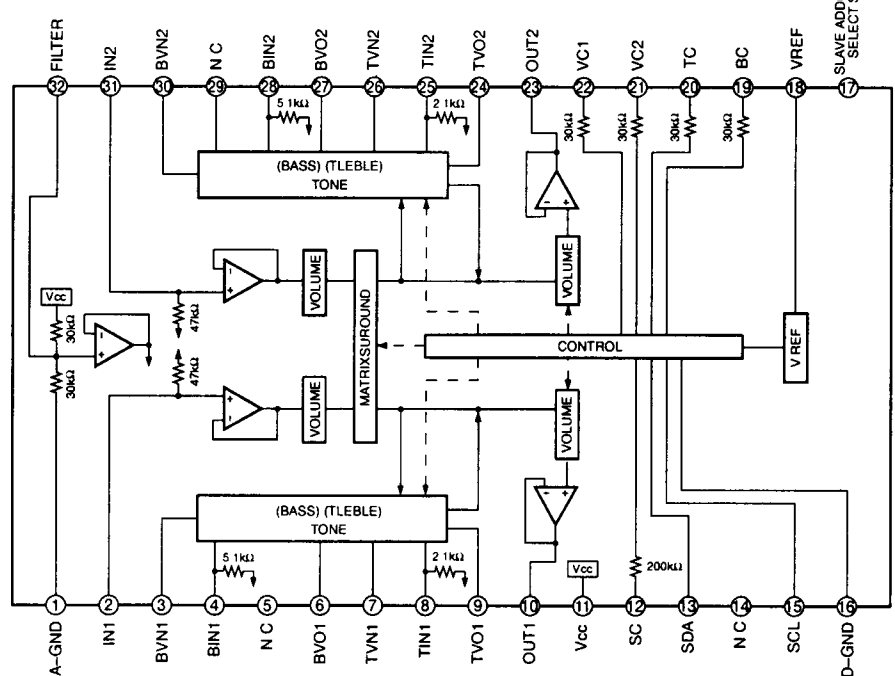

A BOARD:
IC1402 NJM4558M

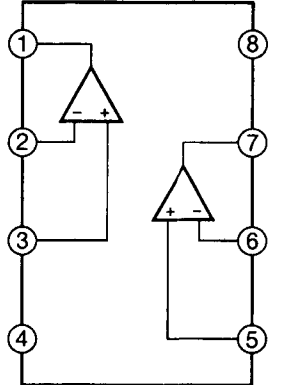

A BOARD: IC461 TDA2009A

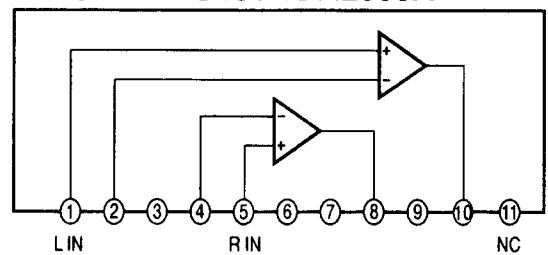


NOTE:
Portions of the circuit marked as shown are high
voltage areas. Use care to prevent electric shocks
during inspection or repair.

A BOARD * MARK LIST


	KV-29V22M	KV-27V26/ 29V66M	KV-27V36/29V36C/ 29V76M
C360	#	JW (5)	JW (5)
C361	#	JW (5)	JW (5)
C362	#	JW (5)	JW (5)
C375	0.1	#	#
C461	22/25V	22/25V	4.7
C476	1000/25V	1000/25V	JW (5)
C477	1000/25V	1000/25V	JW (5)
CN461	4P	4P	7P
CN1101	#	20P	20P
CN1941	#	#	5P
JR351	0	#	#
JR352	0	#	#
JW162	#	7.5	7.5
L461	10uH	10uH	18uH
Q357	#	#	2SD601A
R006	#	220	220
R008	#	220	220
R012	#	220	220
R022	JW (7.5)	10k	10k
R031	#	220	220
R040	#	220	220
R041	#	4.7k	4.7k
R042	#	4.7k	4.7k
R045	#	220	220
R050	#	220	220
R090	#	220	220
R358	#	220	220
R359	#	220	220
R360	#	220	220
R370	#	#	1k
R371	#	#	1.5k
R386	#	1k	1k
R396	#	#	1k
R466	2.2	2.2	1.5
R469	1.8k	1.8k	5.6k
R472	1.8k	1.8k	5.6k
R482	2.2k	2.2k	#
R483	2.2k	2.2k	#

#: NOT MOUNTED

A BOARD: IC561 TDA 8172

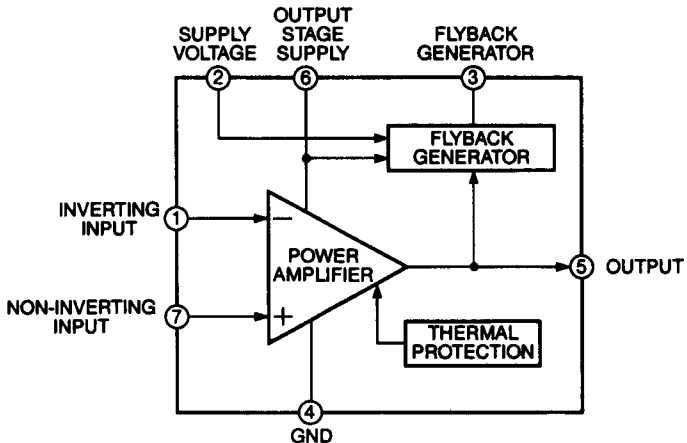




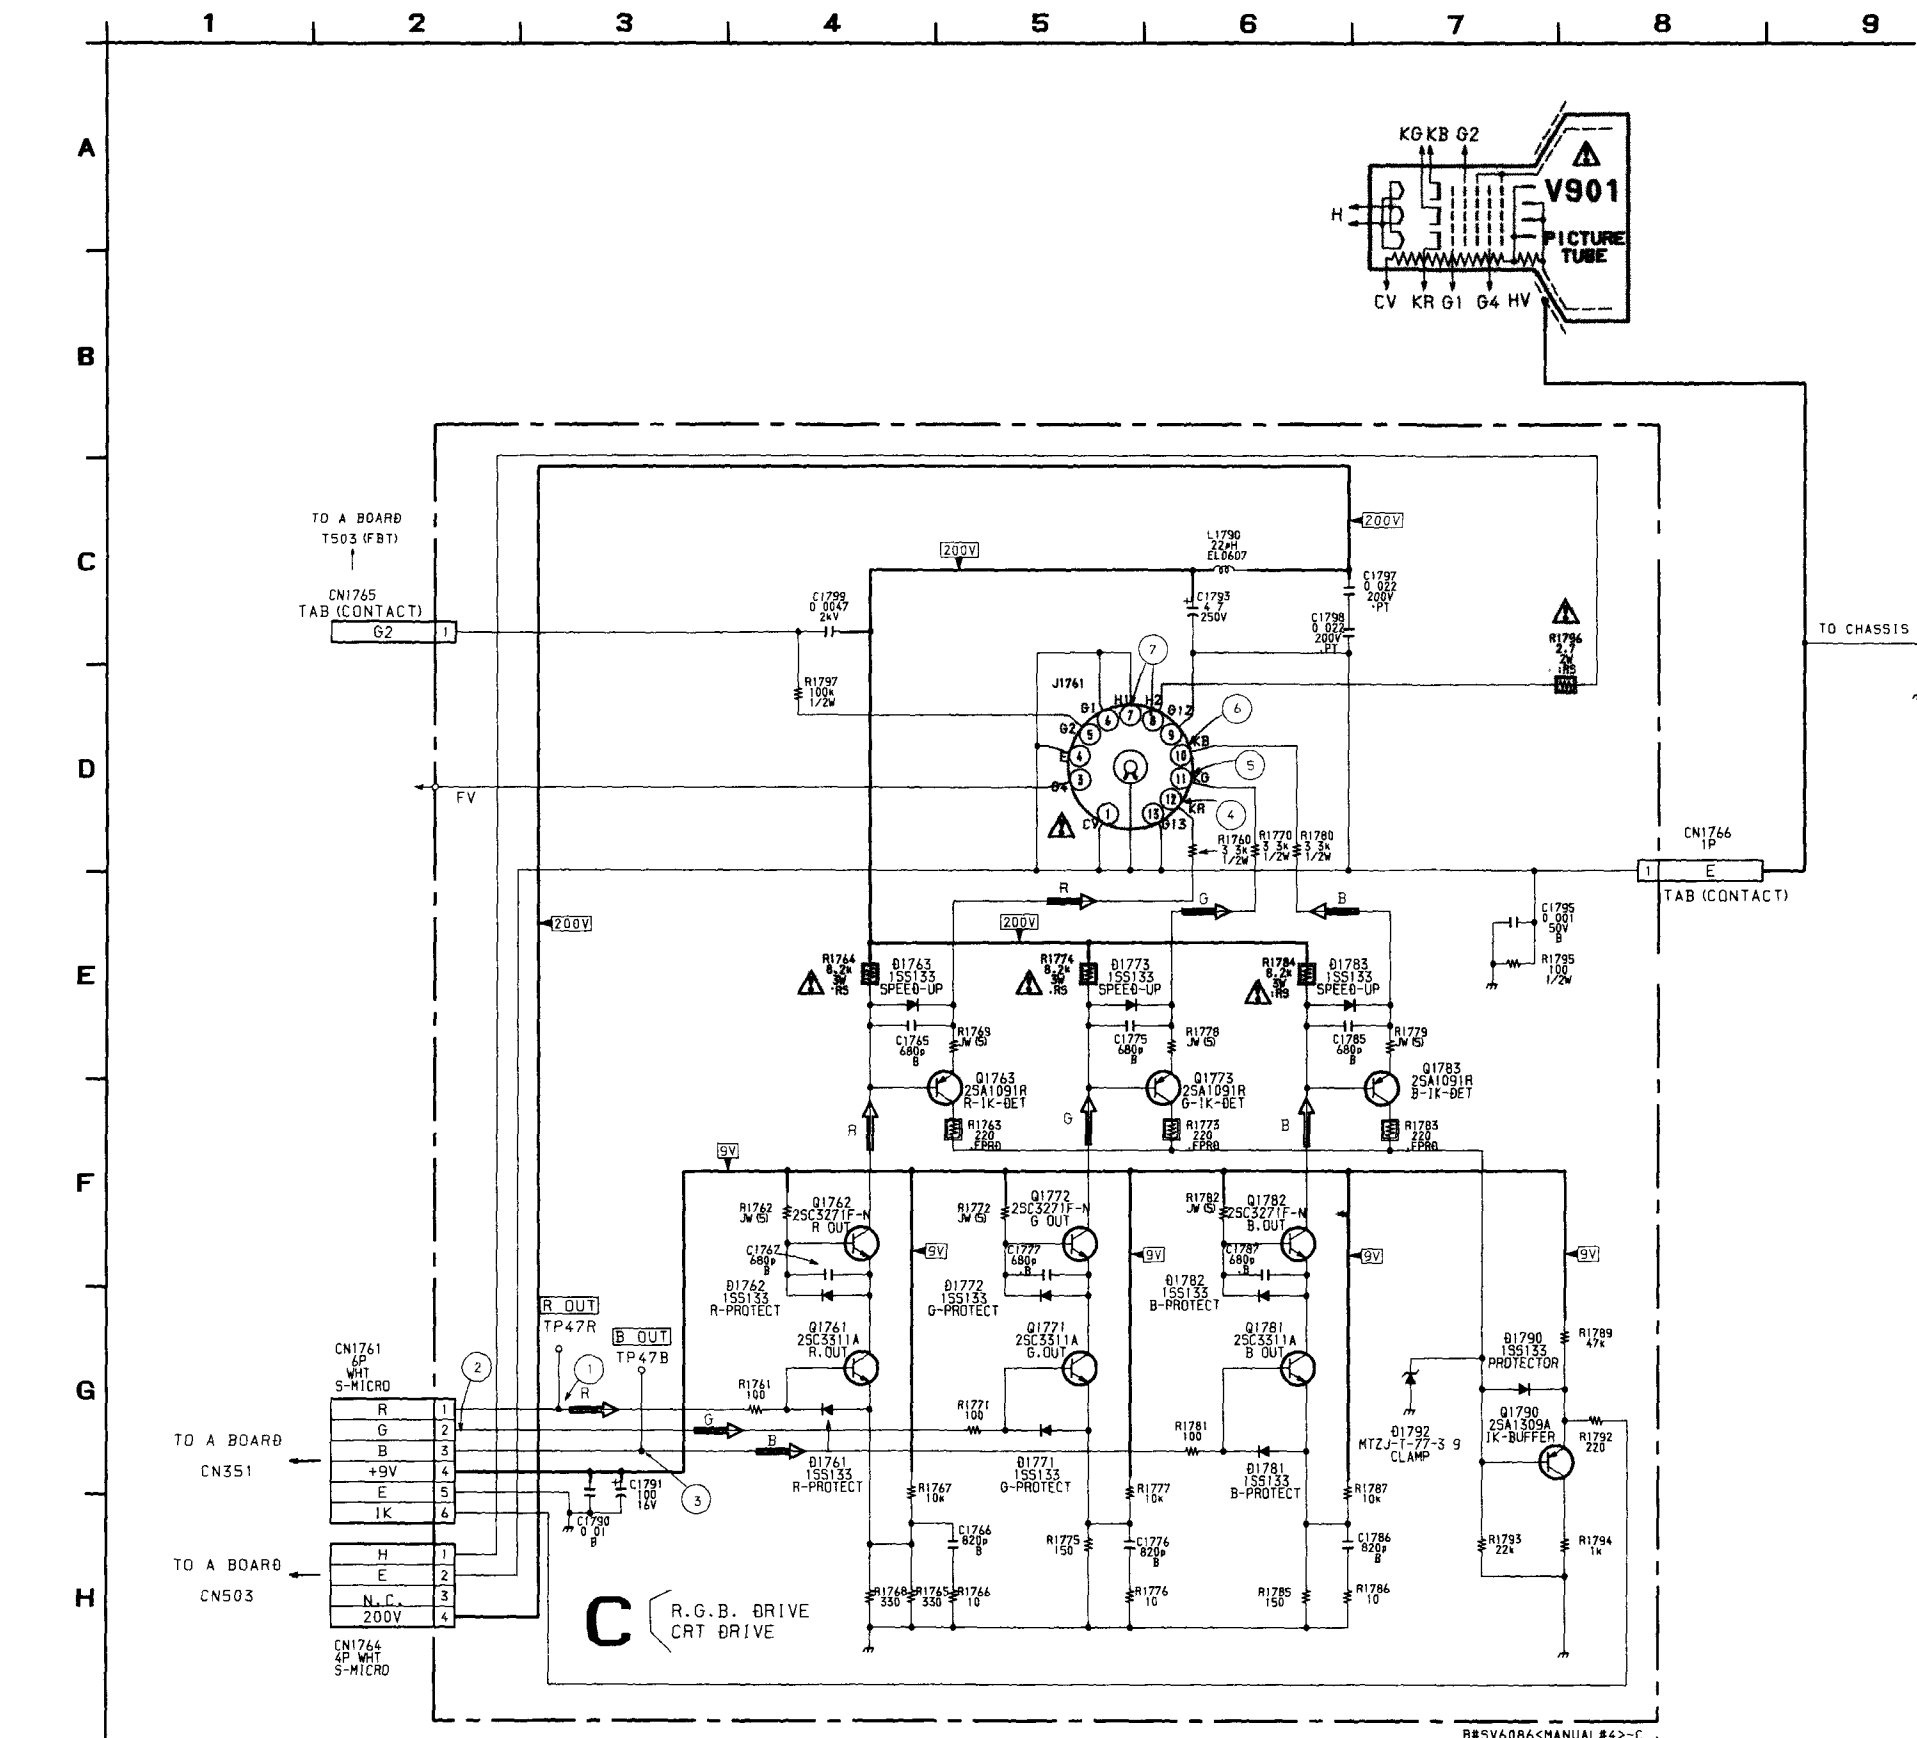

C [R,G,B DRIVE, CRT DRIVE]

— C BOARD —

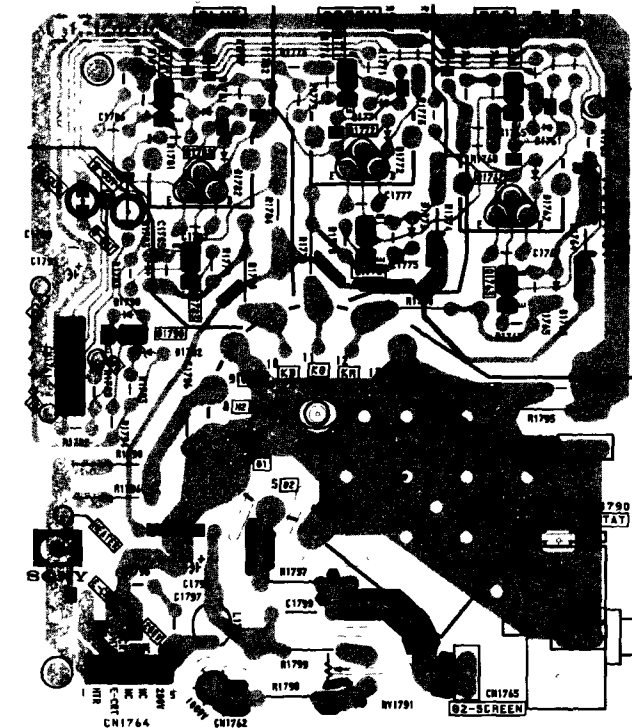


C BOARD TRANSISTOR VOLTAGE LIST

	B	C	E
Q1761	2.2	8.2	1.7
Q1762	8.7	134.1	8.2
Q1763	134.1	2.3	132.0
Q1771	1.8	2.2	1.3
Q1772	8.7	146.4	8.2
Q1773	146.4	2.3	144.1
Q1781	2.1	8.2	1.6
Q1782	8.7	133.7	8.2
Q1783	133.7	2.3	131.5
Q1790	2.2	0.2	2.5


All voltages are in V

C BOARD WAVEFORMS

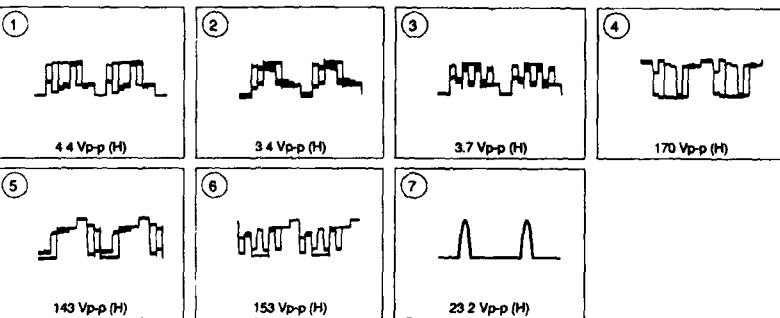

AV [2ND-TUNER, S-LINK]
(except KV-29V22M)

— AV BOARD —

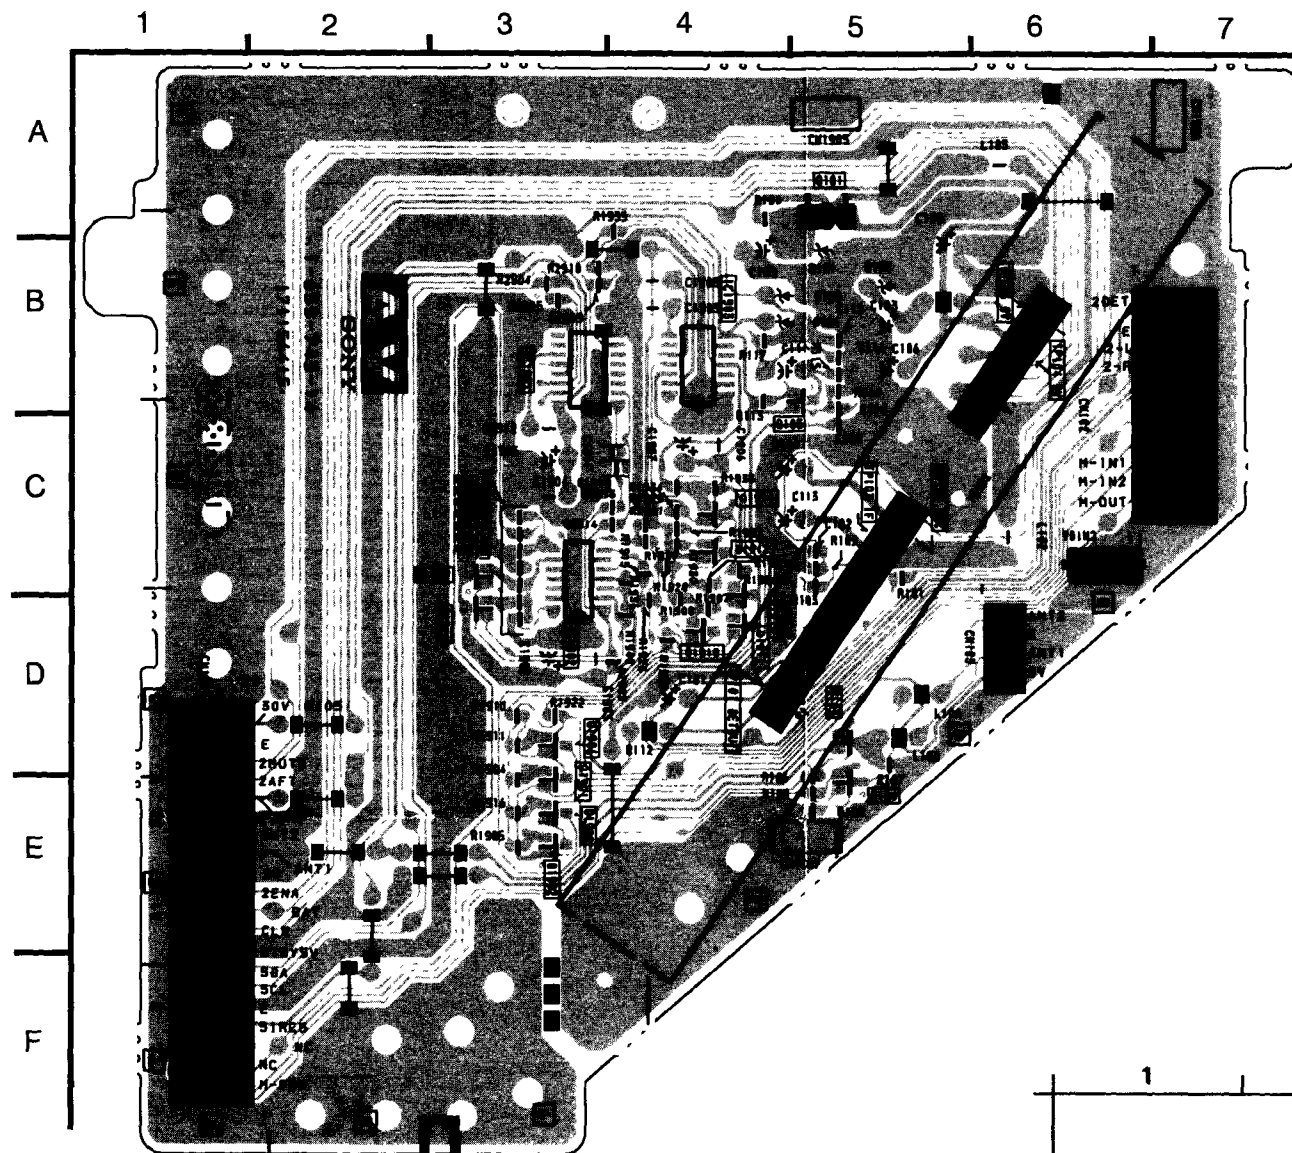

AV BOARD IC VOLTAGE LIST

IC	pin	volt	pin	volt
IC1901	1	0.2	7	0
	2	0.2	8	1.3
	3	NC	9	0
	4	NC	10	GND
	5	NC	11	GND
	6	NC	12	GND
	7	NC	13	GND
	8	GND	14	0.2
	9	NC	15	GND
	10	NC	16	GND
	11	8.7	17	NC
	12	GND	18	4.5
	13	GND	19	NC
	14	4.9	20	0.2
IC1902	1	0.2	11	0
	2	0.2	12	0
	3	5.0	13	5.0
	4	1.3	14	NC
	5	0		
	6	1.3		

All voltages are in V

AV BOARD TRANSISTOR VOLTAGE LIST


Q	B	C	E
Q101	5.8	8.7	5.1
Q103	4.3	4.9	5.0
Q104	5.0	0	5.0
Q105	5.0	0.8	5.0
Q1901	5.0	0	0
Q1902	5.0	0	0
Q1906	5.0	0	0
Q1908	5.0	0	0
Q1911	0	5.0	0
Q1912	0.7	0	GND
Q1914	4.9	0	5.0
Q1916	0.2	5.0	0
Q1917	0.2	5.0	0

All voltages are in V


NOT MOUNTED

AV BOARD	
DIODE	
D101	B-5
D103	B-4
D104	B-4
IC	
IC1901	B-3
IC1902	C-3
IC1903	B-4
TRANSISTOR	
Q101	A-5
Q103	D-5
Q104	D-5
Q105	B-4
Q1901	D-3
Q1902	E-3
Q1906	D-3
Q1908	E-3
Q1911	C-4
Q1912	C-4
Q1914	C-4
Q1916	C-3
Q1917	C-3



AV BOARD WAVEFORMS

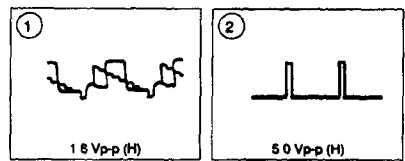


AV BOARD: IC1901 CXA1315M

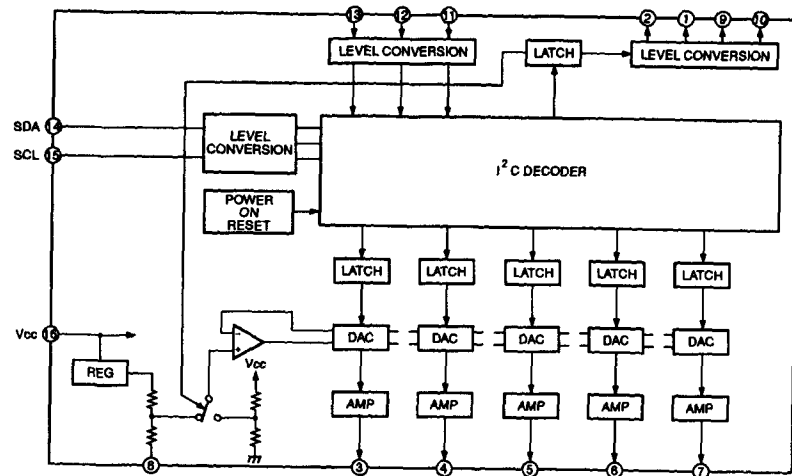


AV BOARD: IC1902 NJM2901M

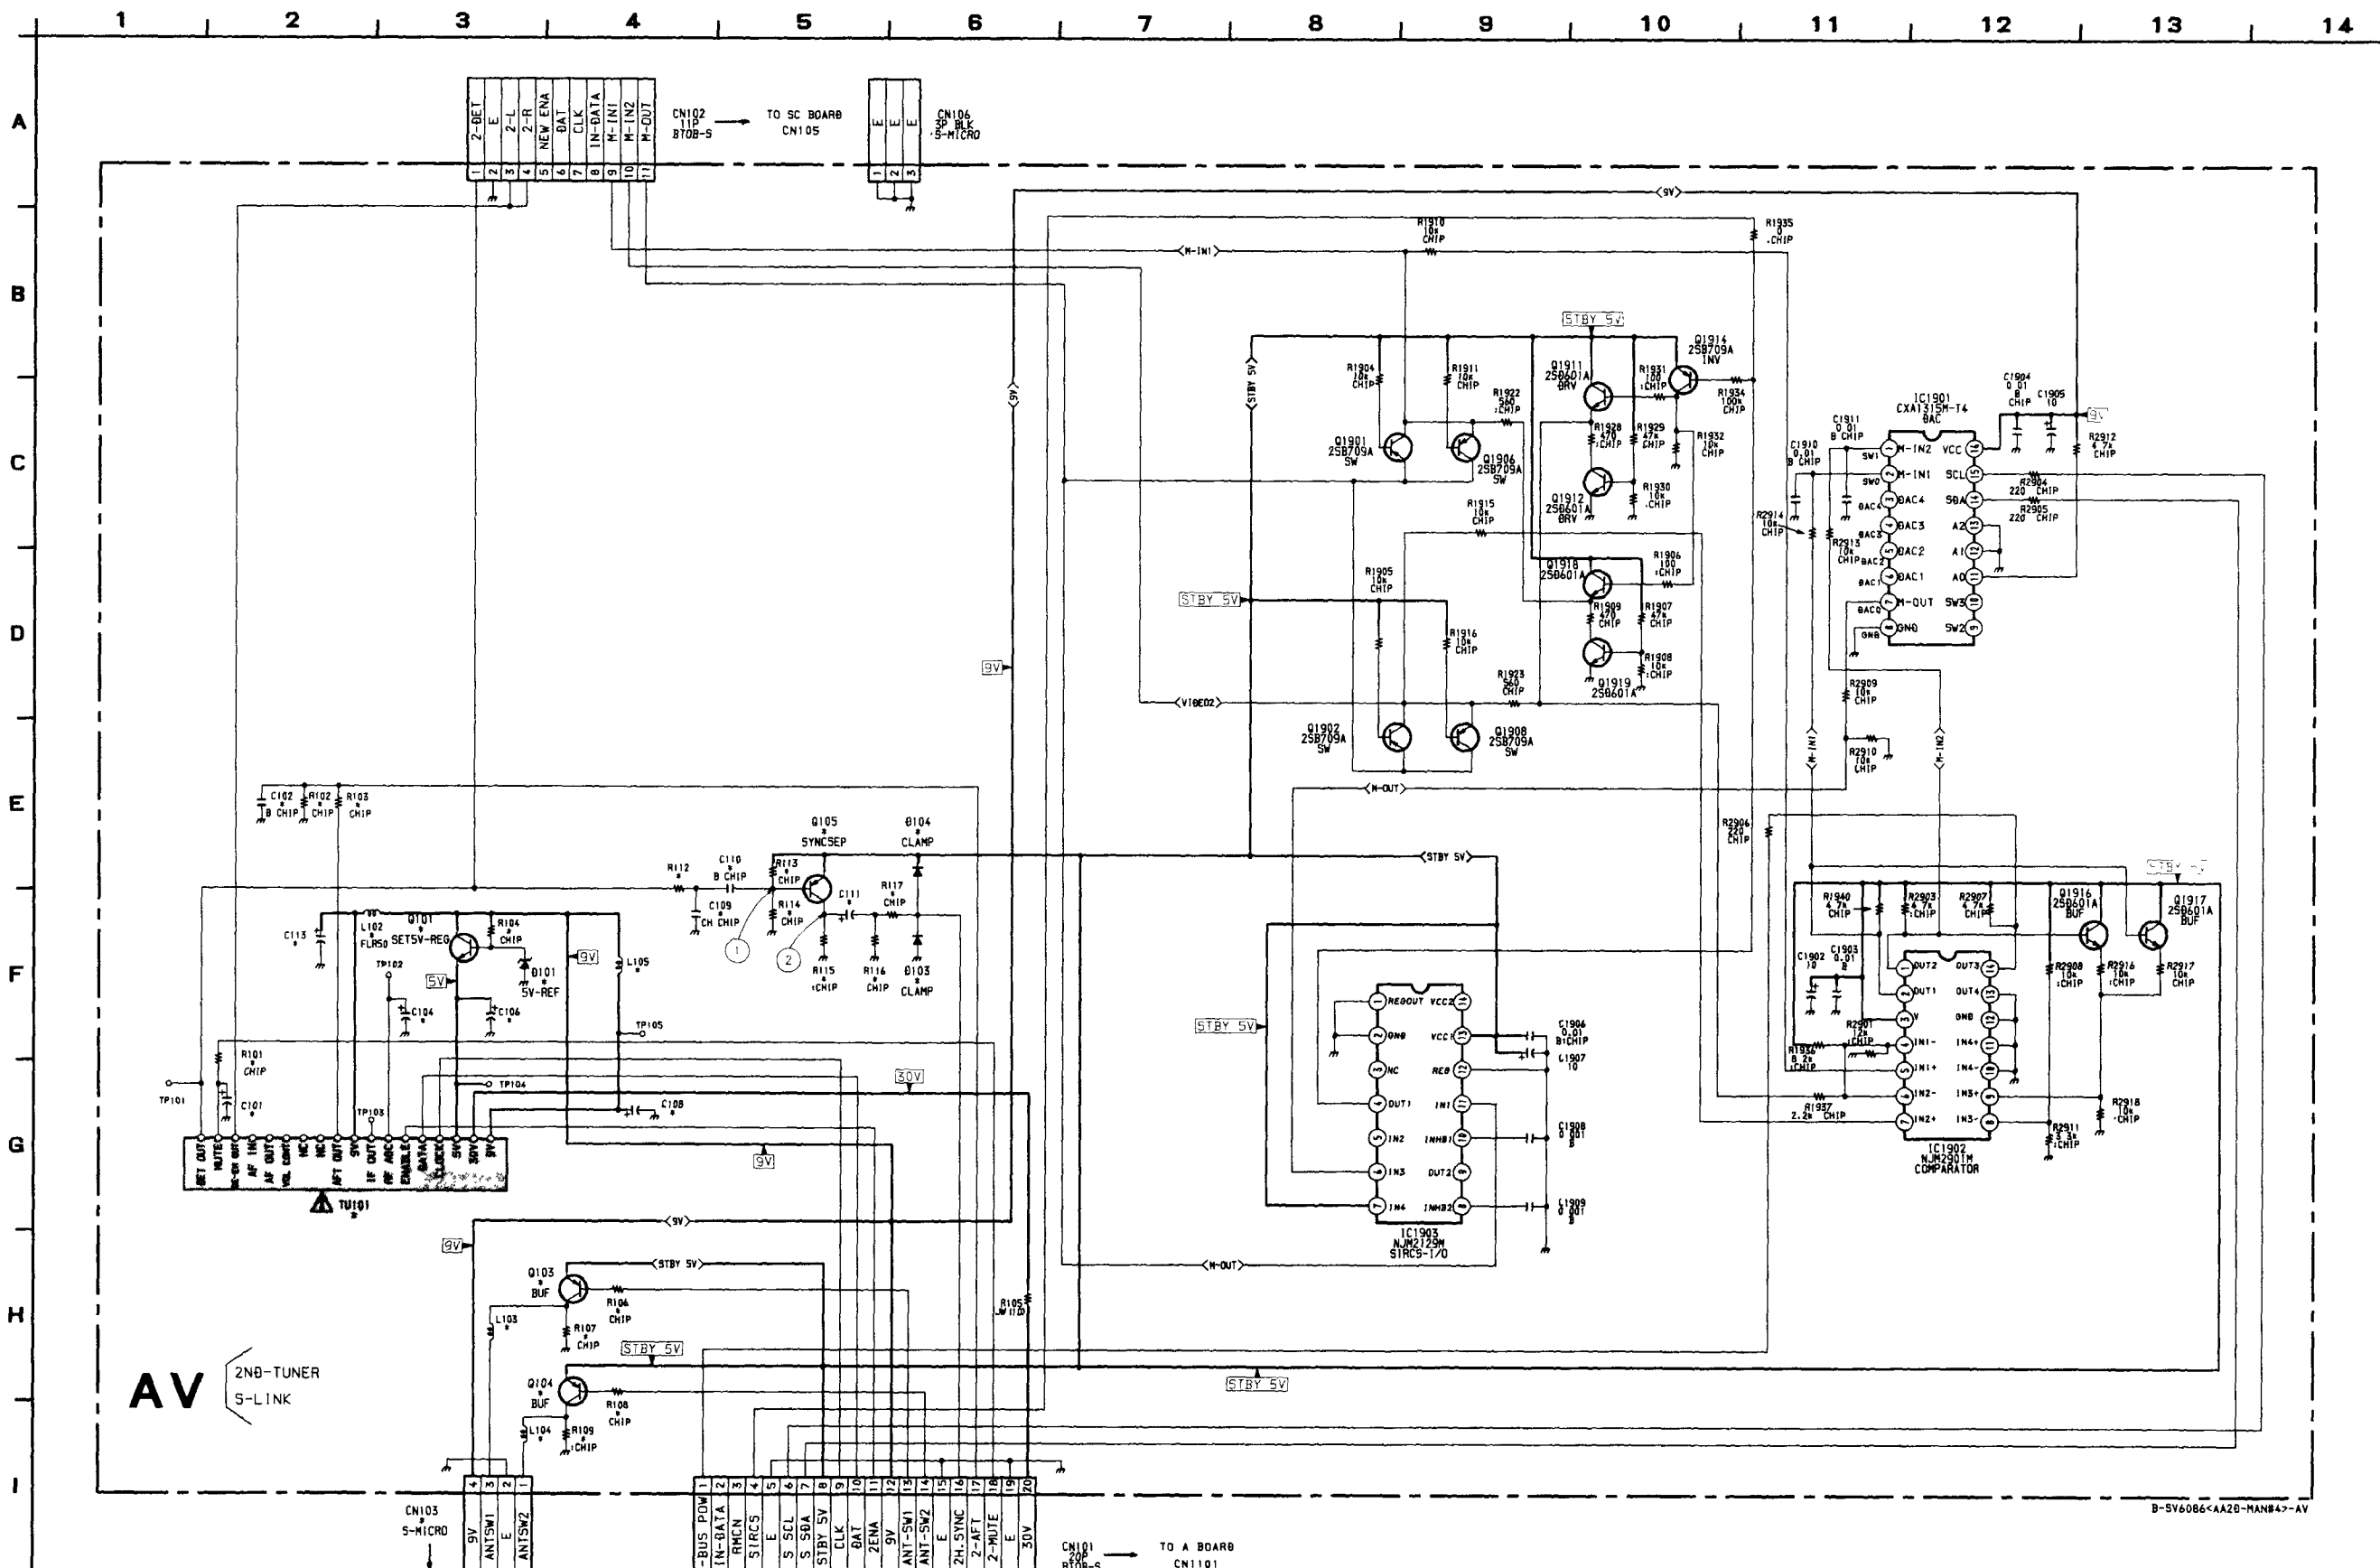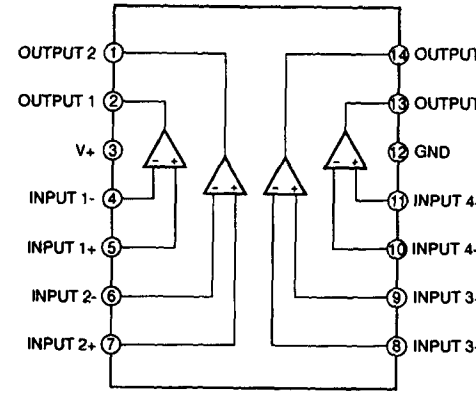

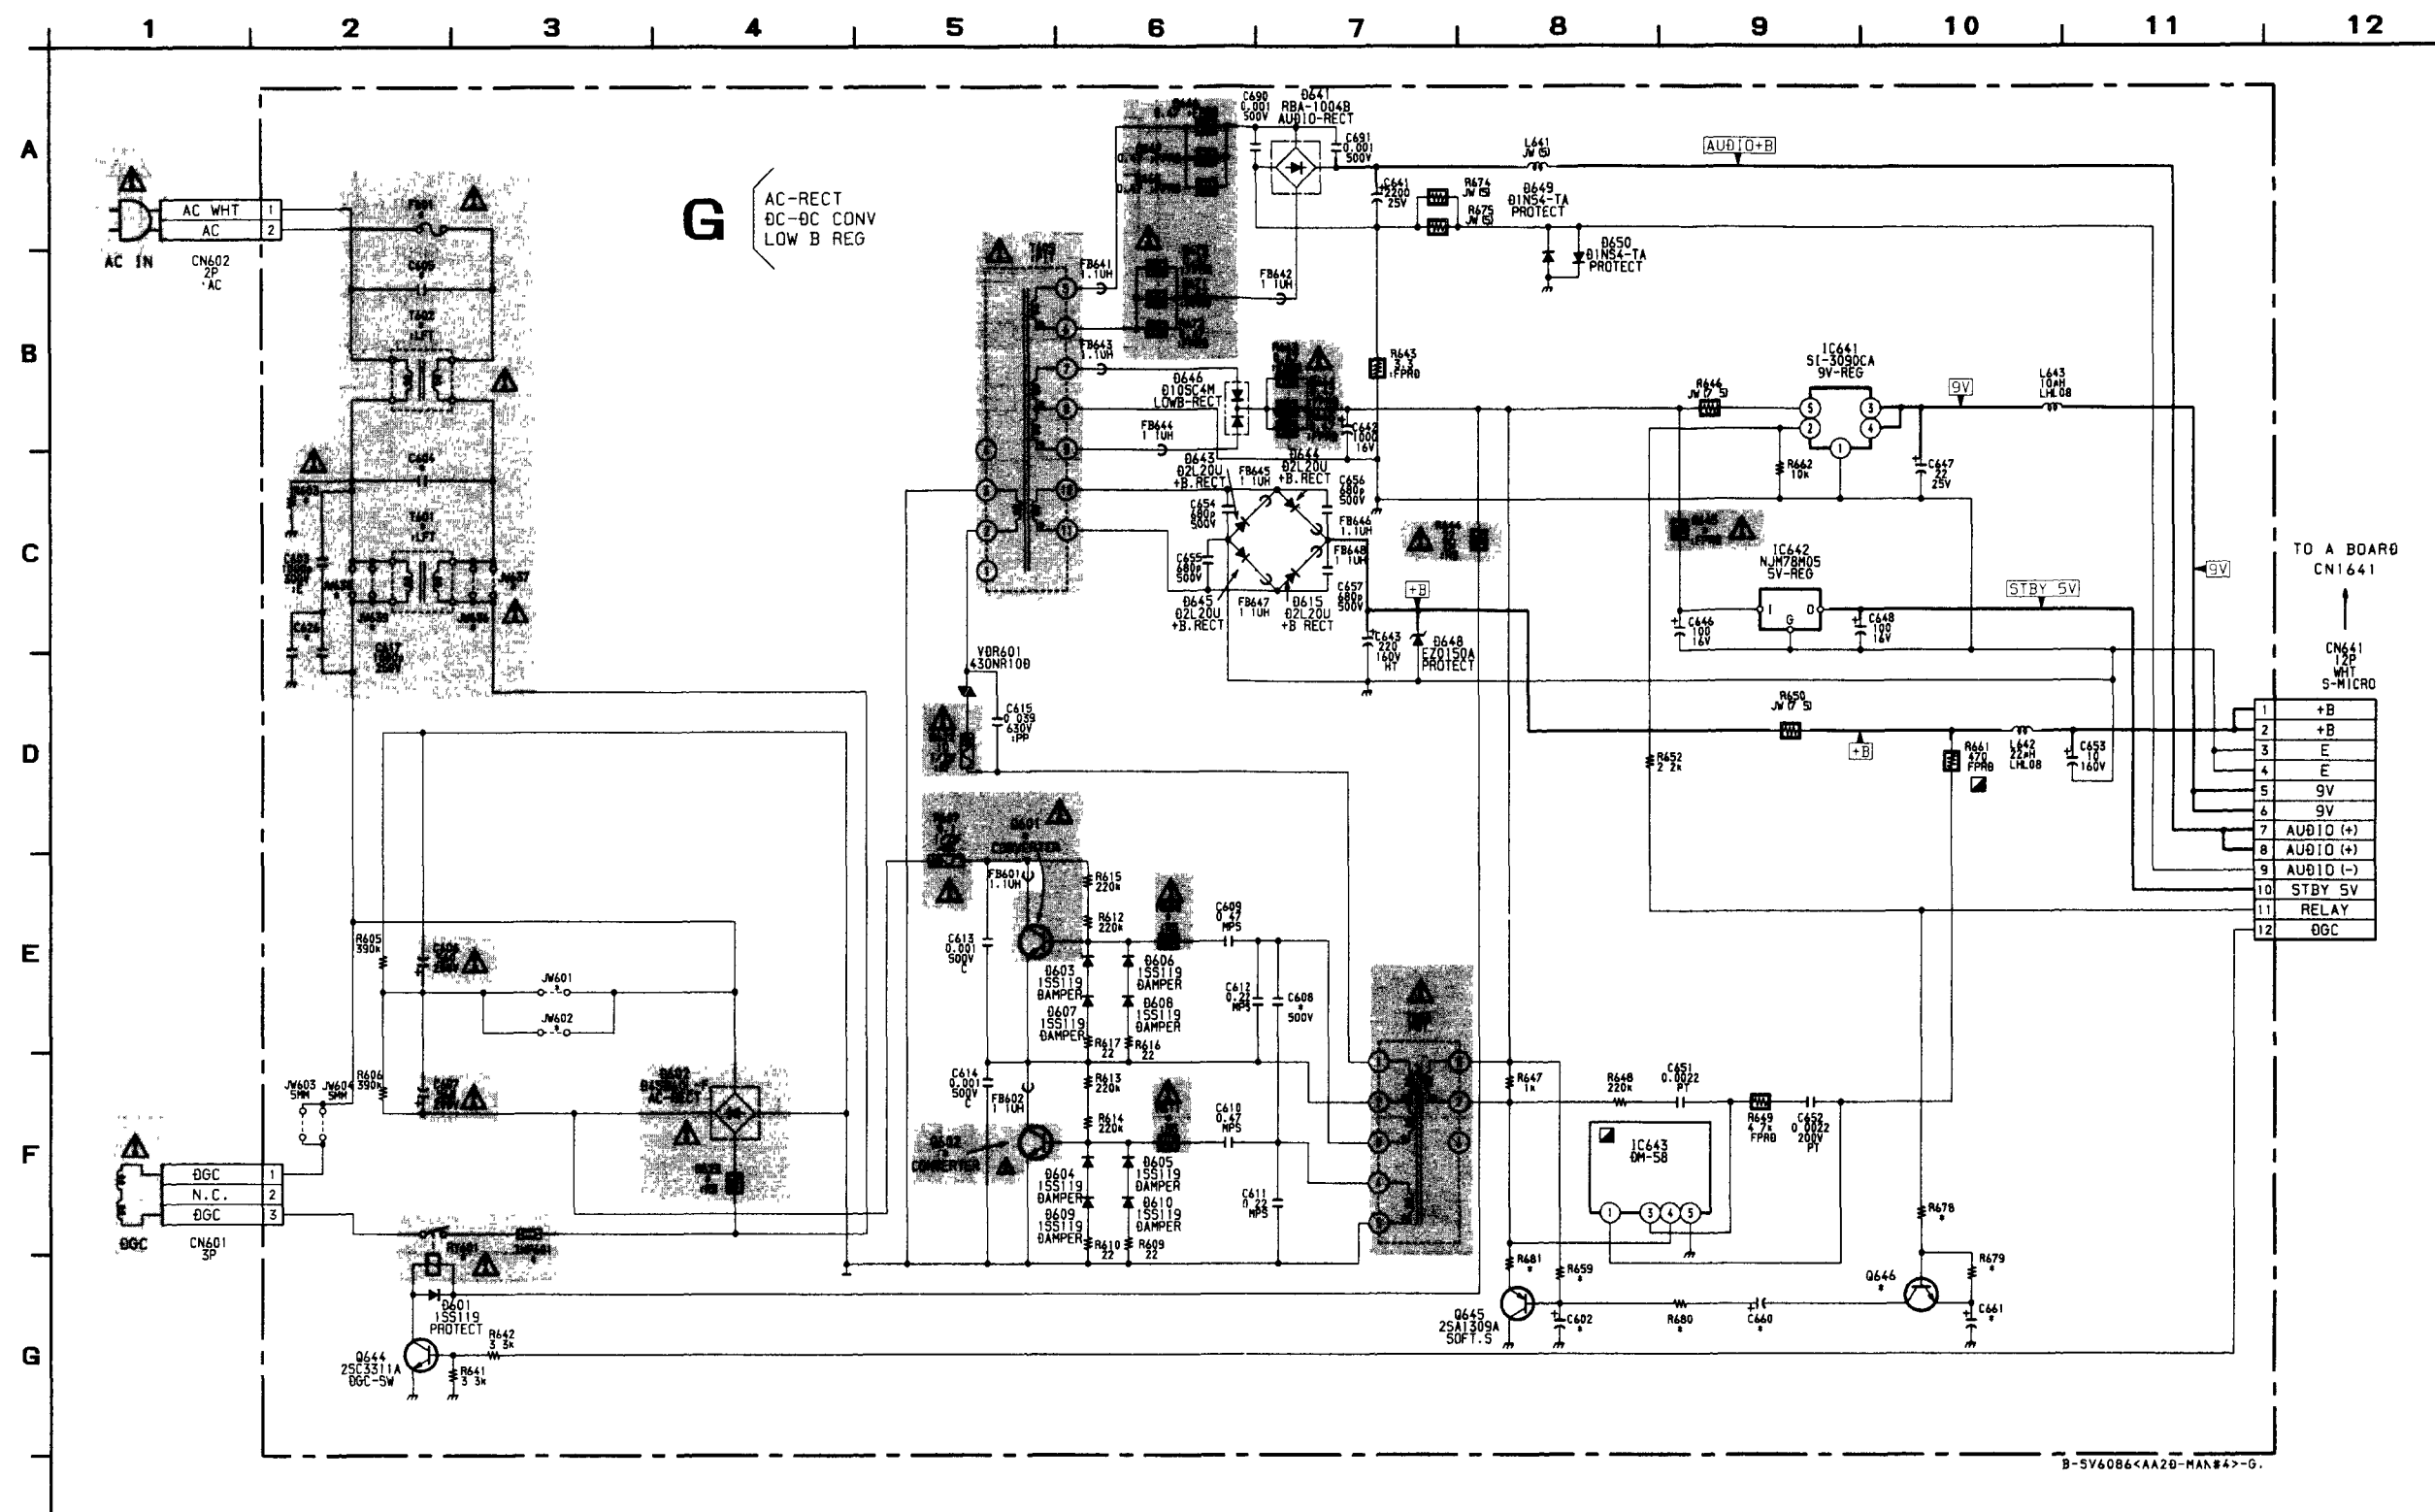

G [AC-RECT, DC-DC CONV., LOW B REG]

— G BOARD —

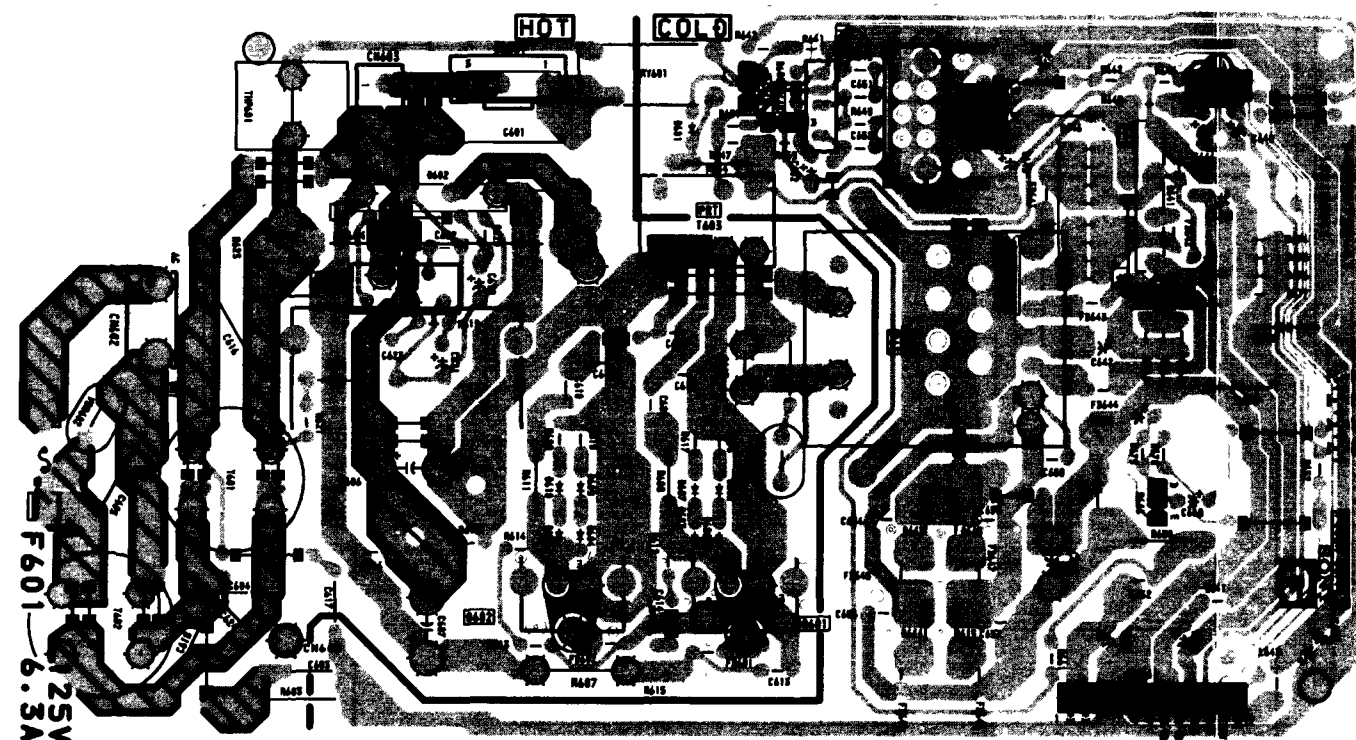

G BOARD IC VOLTAGE LIST

IC	pin	volt
IC641	1	GND
	2	3.9
	3	8.9
	4	8.9
	5	10.5
IC642	IN	9.5
	OUT	5.0
IC643	1	135
	2	NC
	3	2.5
	4	7.8
	5	GND

All voltages are in V

G BOARD TRANSISTOR VOLTAGE LIST

Q	B	C	E
Q601	145.2	294.0	147.5
Q602	-1.7	147.5	GND
Q644	-0.3	10.5	GND
Q645	7.0	GND	7.6
Q646	4.8	7.4	4.8


All voltages are in V

Schematic diagrams

← **C** **AV** boards **G** **K** boards →

	KV-27V26/27V36 29V22M/29V66M/29V76M	KV-29V36C
C602	#	4.7
C604	.22/125V	#
C605	.22/125V	.22/300V
C608	680p/500V	.001/500V
C626	JW(7.5)	100p/250V
C680	JW(5)	#
C681	4.7	#
F601	6.3A/125V	6.3A/250V
JW601	5MM	#
JW602	5MM	#
JW636	#	10MM
JW637	#	10MM
JW638	#	10MM
JW639	#	10MM
Q601	2SC4834MNP	2SC4834NP
Q602	2SC4834MNP	2SC4834NP
Q646	2SC3311A	#
R603	2.2M 1/2W	8.2M/1W
R608	1.8 2W	1 2W
R611	1.8 2W	1 2W
R623	1 20W	3.9 20W
R645	JW(5)	10 1/2W
R659	#	10k
R678	22k	#
R679	22k	#
R680	10k	#
R681	150	JW (5)
RY601	1-755-146-11	1-755-018-11
T601	1-426-717-11	#
T602	1-424-220-11	1-426-717-11
THP601	1-809-539-11	1-809-827-11

K BOARD: IC1461 TDA2009A

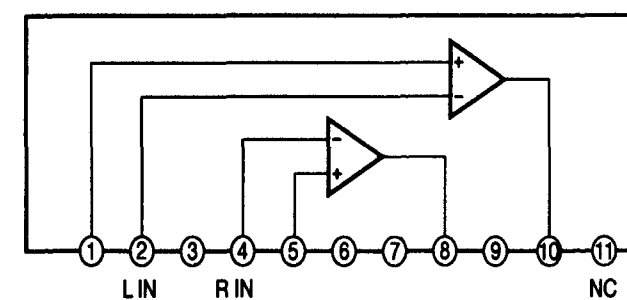


	pin	volt
IC1461	1	1.5
	2	4 2
	3	12.2
	4	4.5
	5	1 5
	6	GND
	7	NC
	8	0.2
	9	22 1
	10	0.2
	11	NC


All voltages are in V

	B	C	E
Q1461	0.7	0	GND
Q1462	20 0	20.7	20 7

All voltages are in V

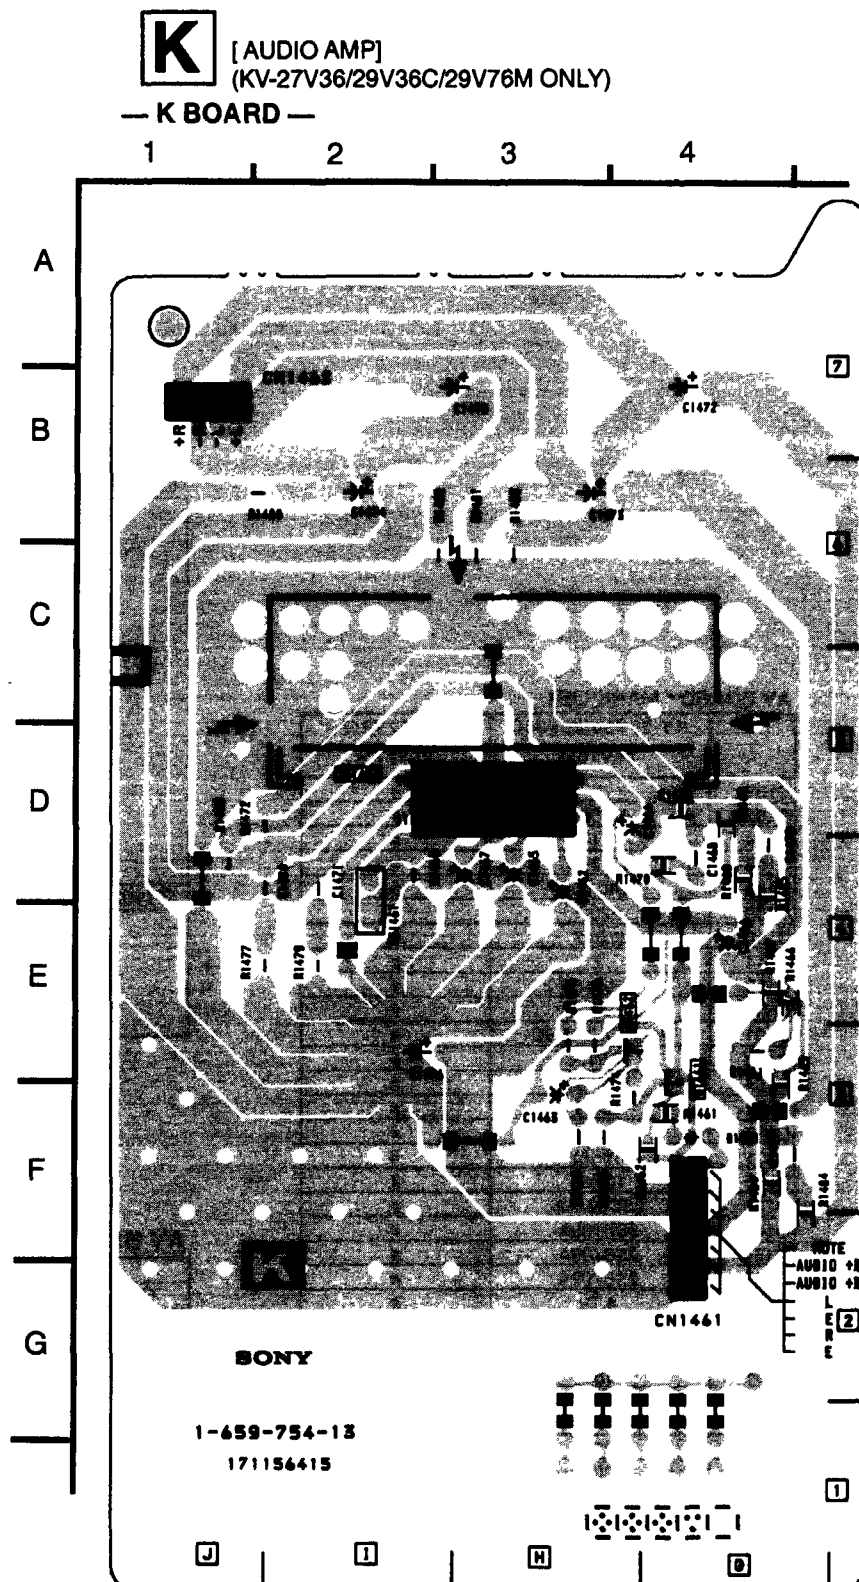

(KV-27V36/29V36C/29V76M ONLY)

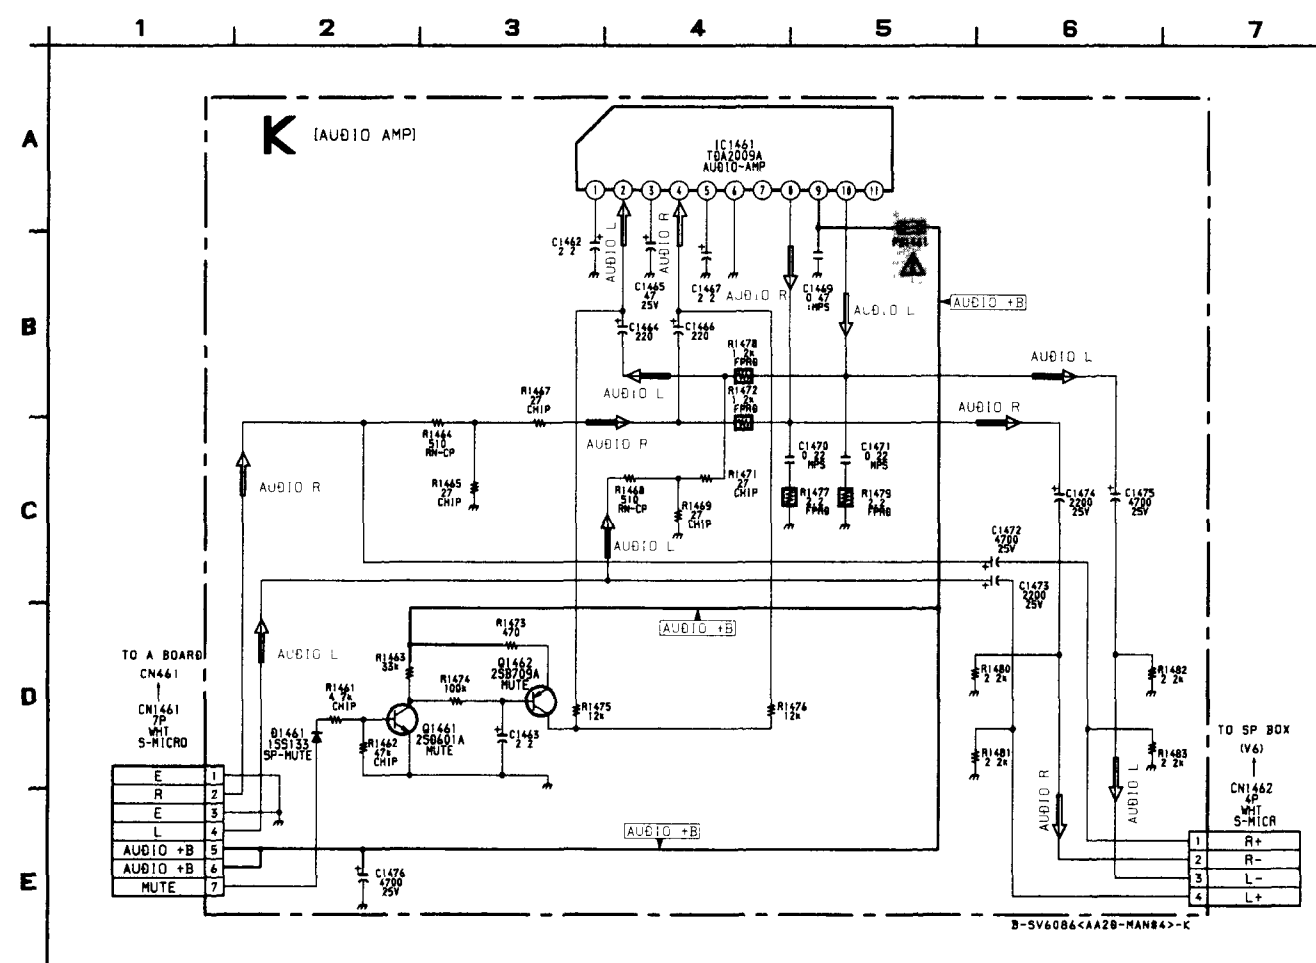


R-SV6006<AA20-MAH84>-1




4-4. SEMICONDUCTORS


BH3856FS-E2

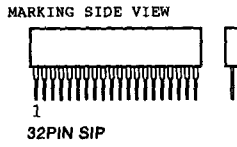


CD4052BCN

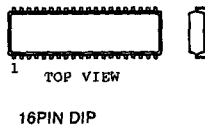


CXA1315M

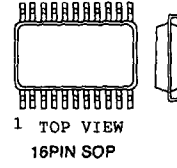


CXA-2019Q-T4

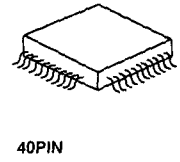


CXA2025AS

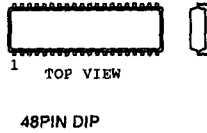


CXP85640-002S

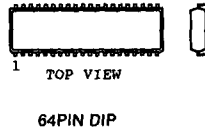


DM-58

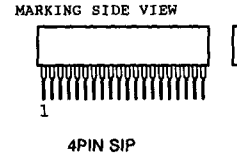

IS474




LM2901M

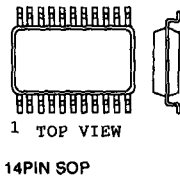


M5216P




MM1313AD

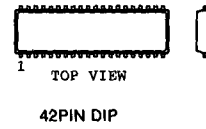


NJM2129M-TE2

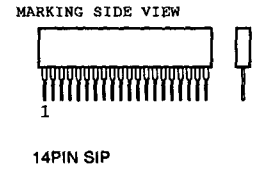

NJM2902M

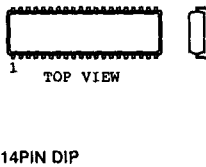

NJM2903M
NJM2904M
ST24CO2FM6TR
UPC4558G2

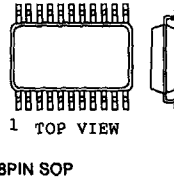


NJM78M05FA
TA7805S




SBX1790-51




SDA9288X

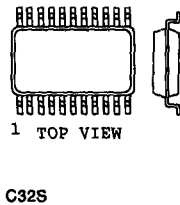


IRF614

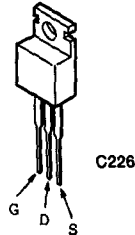


TDA8172

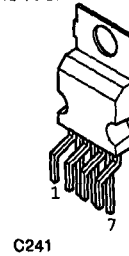

TDA2009A

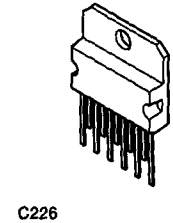


2SA1037AK-T146-R
2SA1162-G
2SA1130-06
2SD601A-Q

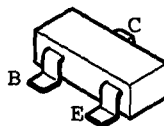

2SA1091-0




2SA1175-HFE
2SC2785-HFE

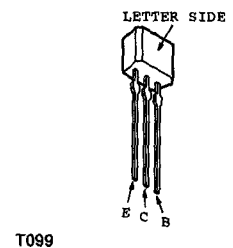

Schematic diagrams


← WB HV boards

2SA1837
2SC4159-E




T046

2SC2611

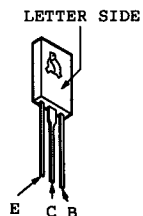

2SC4834M



2SC3209LK




T075

D10SC4M




D216

D1NS4
MTZJ-3.3
MTZJ-33A
MTZJ-6.2B
MTZJ-7.5B
RD10ESB2
RD39ES-B2
RD5.6ESB2
1SS19-25

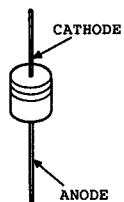


D026

D2L20U
EL1Z
EZ0150AV1
GP08D
MTZJ-T-77-3.9
RGP02-17EL-6433

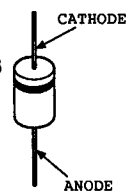


D032

D4SB60L
RBA-1004B




D029

ERC06-15S
ISSI33T-77

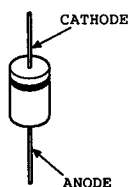


D030

ERD29-08J

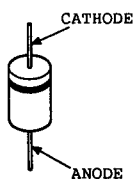

D095

FMGAT148
2SC5418

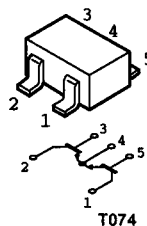

T074

SECTION 5 EXPLODED VIEWS

• Items with no part number and no description are not stocked because they are seldom required for routine service.

• The component parts of an assembly are indicated by the reference numbers in the remarks column.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note:


The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1. CHASSIS

■ 7-685-663-71 SCREW +BVTP 4X16

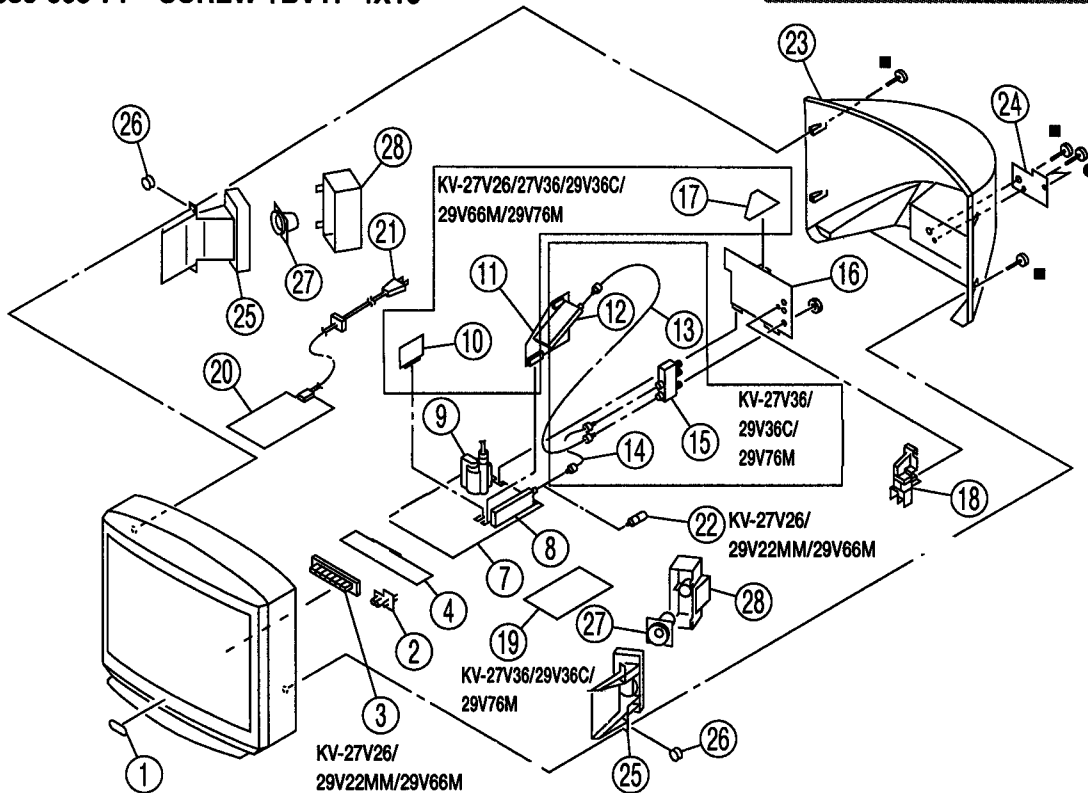

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	4-046-160-01	EMBLEM (NO.9), SONY	
2	* 4-052-897-01	GUIDE, LED	
3	4-052-907-01	BUTTON, MULTI (KV-27V26/29V22M/29V66M)	
4	* A-1372-337-A	HV BOARD, COMPLETE (KV-27V26/29V22M/29V66M)	
4	* A-1372-346-A	HV BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	
7	* A-1298-111-A	A BOARD, COMPLETE (KV-29V22M)	
7	* A-1298-112-A	A BOARD, COMPLETE (KV-27V26/29V66M)	
7	* A-1298-127-A	A BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	
8	Δ 8-598-340-00	TUNER BTF-WA404	
9	Δ 1-453-207-11	TRANSFORMER ASSY, FLYBACK (NX-2609/XX4C)	
10	* A-1195-103-A	P BOARD, COMPLETE (EXCEPT 29V22M)	
11	* A-1297-720-A	AV BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	
11	* A-1297-850-A	AV BOARD, COMPLETE (KV-27V26/29V66M)	
12	Δ 8-598-339-00	TUNER BTF-LA402 (KV-27V36/29V36C/29V76M)	
13	* 1-557-056-31	CABLE, P-P (KV-27V36/29V36C/29V76M)	
14	* 1-556-945-21	CABLE, P-P (KV-27V36/29V36C/29V76M)	
15	8-598-414-00	SWITCH, ANTENNA AS-2F (KV-27V36/29V36C/29V76M)	
16	* A-1394-856-A	UV BOARD, COMPLETE (KV-29V22M)	
16	* A-1394-857-A	UV BOARD, COMPLETE (KV-27V26/29V66M)	
16	* A-1394-858-A	UV BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	

REF.NO.	PART NO.	DESCRIPTION	REMARK
17	* A-1390-585-A	SC BOARD, COMPLETE (except KV-29V22M)	
18	* 4-052-905-01	BRACKET, V5/6 (KV-27V36/29V36C/29V76M)	
19	* A-1380-518-A	K BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	
20	* A-1316-252-A	G BOARD, COMPLETE (KV-29V36C)	
20	* A-1316-261-A	G BOARD, COMPLETE (except KV-29V36C)	
21	Δ 1-751-059-11	CORD POWER (WITH CONNECTOR) (except KV-29V36C)	
21	Δ 1-769-796-41	CORD POWER (WITH CONNECTOR) (KV-29V36C)	
22	1-766-374-11	PLUG, F-PIN (KV-27V26/29V22M/29V66M)	
23	4-053-784-03	COVER, REAR (KV-27V36/29V36C/29V76M)	
23	4-053-784-23	COVER, REAR (KV-27V26/29V22M/29V66M)	
24	4-053-783-01	LABEL, TERMINAL (KV-29V22M)	
24	4-052-898-11	LABEL, TERMINAL (KV-27V36/29V36C/29V76M)	
24	4-052-899-11	LABEL, TERMINAL (KV-27V26/29V66M)	
25	4-043-457-11	BAFFLE, SPEAKER	
26	4-374-745-31	CUSHION (A)	
27	1-504-524-11	SPEAKER (8CM) (KV-27V26/29V22M/29V66M)	
27	1-505-326-11	SPEAKER (8CM) (KV-27V36/29V36C/29V76M)	
28	X-4032-226-1	COVER ASSY, SPEAKER (KV-27V26/29V22M/29V66M)	
28	X-4033-616-1	COVER ASSY, SPEAKER (KV-27V36/29V36C/29V76M)	

Note:


The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-2. PICTURE TUBE

- 7-685-648-79 SCREW +BVTP 3X12

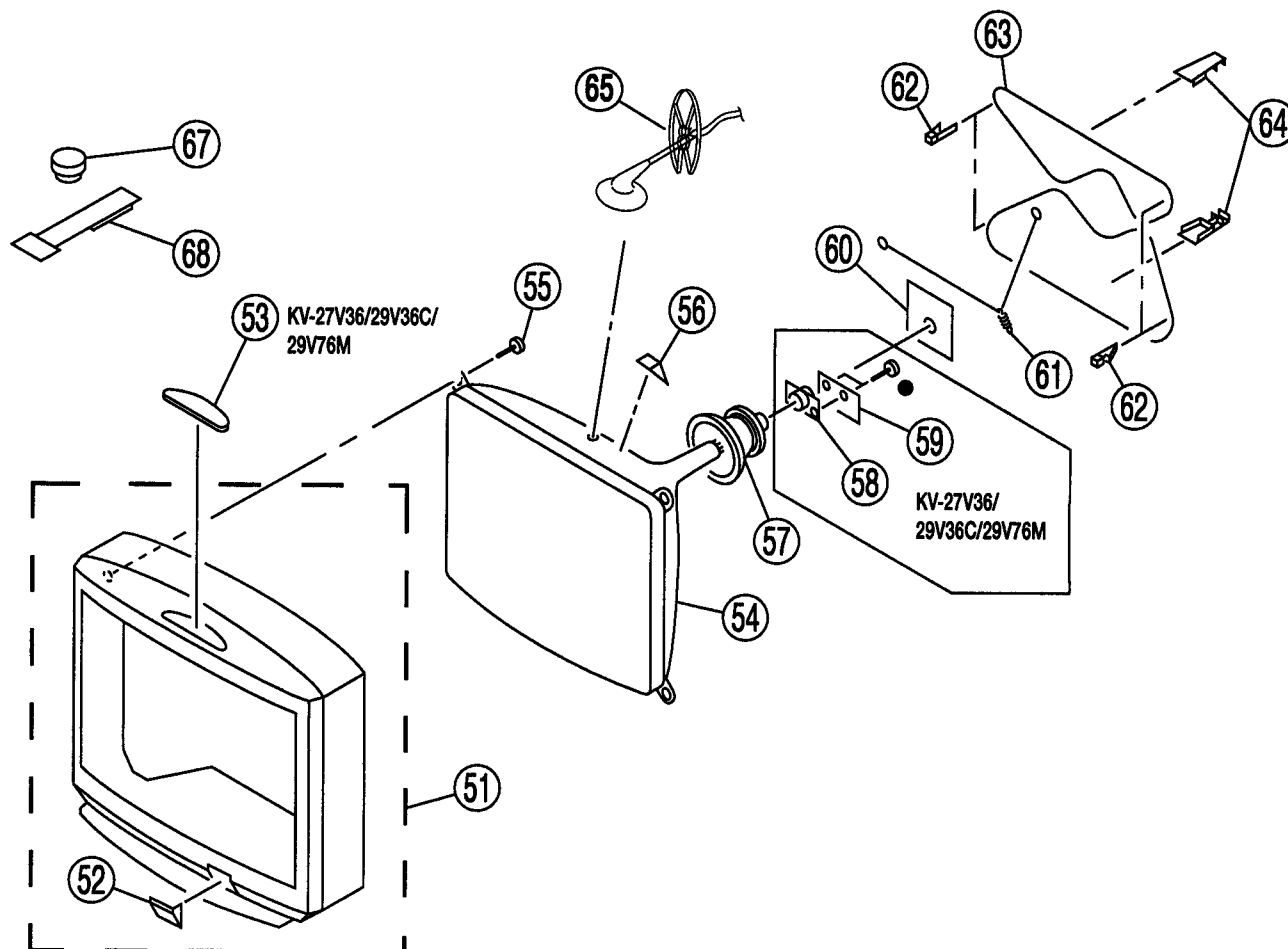

REF.NO.	PART NO.	DESCRIPTION	REMARK
---------	----------	-------------	--------

51	X-4034-593-1	BEZNET ASSY (KV-29V22M)	52
51	X-4033-594-1	BEZNET ASSY (KV-27V26/29V66M)	52
51	X-4033-595-1	BEZNET ASSY (KV-27V36/29V36C/29V76M)	52
52	4-052-906-21	DOOR, CONTROL (KV-29V22M)	
52	4-052-906-31	DOOR, CONTROL (KV-27V26/29V66M)	
52	4-052-906-51	DOOR, CONTROL (KV-27V36/29V36C/29V76M)	

53	1-473-549-11	SWITCH BLOCK, CONTROL	
		(KV-27V36/29V36C/29V76M)	

54	Δ 8-733-848-05	CRT29PXD (SD-268/ECR) A68KZJ50X	
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	

54	Δ 8-733-849-05	CRT20PXD (SD-268) A68KZJ50X (KV-29V36C)	
----	-----------------------	---	--

55	4-041-268-01	SCREW (7), TAPPING	
----	--------------	--------------------	--

56	4-053-005-01	SPACER, DEFLECTION YOKE	
----	--------------	-------------------------	--

57	Δ 8-451-275-42	DEFLECTION YOKE (Y28PFA)	
----	-----------------------	--------------------------	--

REF.NO.	PART NO.	DESCRIPTION	REMARK
---------	----------	-------------	--------

58	Δ 1-452-509-41	NECK ASSY, CRT (KV-27V36/29V36C/29V76M)	
59	*	A-1372-225-A WB BOARD, COMPLETE (KV-27V36/29V36C/29V76M)	
60	*	A-1331-549-A C BOARD, COMPLETE	
61	4-036-329-01	SPRING (B), TENSION	
62	4-040-388-01	HOLDER DGC, (S)	

63	Δ 1-406-728-81	COIL DEMAGNETIC (KV-29V36C)	
----	-----------------------	-----------------------------	--

63	Δ 1-411-899-11	COIL DEMAGNETIC (except KV-29V36C)	
----	-----------------------	------------------------------------	--

64	4-040-387-01	HOLDER DGC, (M)	
----	--------------	-----------------	--

65	3-704-372-31	HOLDER, HV CABLE	
----	--------------	------------------	--

67	1-452-032-00	MAGNET, DISC	
----	--------------	--------------	--

68	X-4306-312-0	PERMALLOY, CONVERGENCE	
----	--------------	------------------------	--

SECTION 7

ELECTRICAL PARTS LIST

**Note:**

The components identified by shading and mark **Δ** are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque **Δ** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by **Δ** in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- Items marked "Δ" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted

RESISTORS

- All resistors are in ohms
- F : nonflammable

CAPACITORS

- MF = μ F

INDUCTORS

UH = μ H
MMH = mH

When indicating parts by reference number, please include the board name.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<div style="border: 1px solid black; padding: 5px; display: inline-block; font-size: 2em; font-weight: bold; margin-right: 10px;">P</div> <p style="margin: 0;">* A-1195-103-A P BOARD, COMPLETE (KV-27V26/27V36/29V66M/29V36C/29V76M)</p> <p style="margin: 10px 0 0 20px;"><u>CAPACITOR</u></p>				C3338	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
				C3340	1-163-031-11	CERAMIC CHIP	0.01MF 50V
				C3346	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
				C3347	1-126-960-11	ELECT	1MF 20% 50V
				C3348	1-126-967-11	ELECT	47MF 20% 16V
				C3349	1-163-121-00	CERAMIC CHIP	150PF 5% 50V
				C3350	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V
				C3351	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
				<u>CONNECTOR</u>			
				CN3301*	1-764-816-11	CONNECTOR, BOARD TO BOARD 20P	
				<u>IC</u>			
				IC3301	8-759-366-24	IC TDA8315T/N3A-T	
				IC3302	8-759-231-53	IC TA7805S	
				IC3303	8-759-438-61	IC SDA9288X-A141	
				<u>COIL</u>			
				L3301	1-408-413-00	INDUCTOR	22UH
				L3302	1-410-473-11	INDUCTOR	18UH
				L3303	1-408-418-00	INDUCTOR	56UH
				<u>TRANSISTOR</u>			
				Q3301	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3305	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3306	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3307	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3308	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3310	8-729-422-27	TRANSISTOR 2SD601A-Q	
				Q3312	8-729-216-22	TRANSISTOR 2SA1162-G	
				Q3313	8-729-422-27	TRANSISTOR 2SD601A-Q	
				<u>RESISTOR</u>			
				R3301	1-216-075-00	METAL GLAZE	12K 5% 1/10W
				R3302	1-216-043-91	METAL GLAZE	560 5% 1/10W
				R3303	1-216-295-91	CONDUCTOR, CHIP (2012)	
				R3304	1-216-043-91	METAL GLAZE	560 5% 1/10W
				R3306	1-215-882-00	METAL OXIDE	22 5% 2W F
				R3307	1-216-097-91	METAL GLAZE	100K 5% 1/10W
C3301	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V				
C3302	1-164-346-11	CERAMIC CHIP	1MF 16V				
C3303	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3304	1-126-960-11	ELECT	1MF 20% 50V				
C3305	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3306	1-126-967-11	ELECT	47MF 20% 16V				
C3307	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3308	1-163-231-11	CERAMIC CHIP	15PF 5% 50V				
C3309	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V				
C3310	1-164-004-11	CERAMIC CHIP	0.1MF 10% 25V				
C3313	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3314	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3315	1-164-346-11	CERAMIC CHIP	1MF 16V				
C3319	1-163-031-11	CERAMIC CHIP	0.01MF 50V				
C3320	1-126-960-11	ELECT	1MF 20% 50V				
C3321	1-163-239-11	CERAMIC CHIP	33PF 5% 50V				
C3322	1-163-239-11	CERAMIC CHIP	33PF 5% 50V				
C3323	1-163-031-11	CERAMIC CHIP	0.01MF 50V				
C3324	1-126-967-11	ELECT	47MF 20% 16V				
C3325	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3326	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3327	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3328	1-126-967-11	ELECT	47MF 20% 16V				
C3329	1-126-967-11	ELECT	47MF 20% 16V				
C3330	1-163-031-11	CERAMIC CHIP	0.01MF 50V				
C3331	1-126-967-11	ELECT	47MF 20% 16V				
C3332	1-104-664-11	ELECT	47MF 20% 25V				
C3333	1-164-695-11	CERAMIC CHIP	0.0022MF 5% 50V				
C3334	1-163-031-11	CERAMIC CHIP	0.01MF 50V				
C3335	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3336	1-163-038-91	CERAMIC CHIP	0.1MF 25V				
C3337	1-164-005-11	CERAMIC CHIP	0.47MF 25V				



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R3308	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
R3309	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
R3310	1-216-689-11	METAL GLAZE	39K 5% 1/10W
R3311	1-216-689-11	METAL GLAZE	39K 5% 1/10W
R3312	1-216-037-00	METAL GLAZE	330 5% 1/10W
R3313	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3314	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3315	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3316	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R3319	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R3321	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R3322	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R3323	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R3324	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R3326	1-216-037-00	METAL GLAZE	330 5% 1/10W
R3327	1-216-031-00	METAL GLAZE	180 5% 1/10W
R3328	1-216-037-00	METAL GLAZE	330 5% 1/10W
R3329	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R3330	1-216-035-00	METAL GLAZE	270 5% 1/10W
R3331	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R3332	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3337	1-216-033-00	METAL GLAZE	220 5% 1/10W
R3338	1-216-033-00	METAL GLAZE	220 5% 1/10W
R3339	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3340	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3341	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R3342	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R3343	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R3346	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R3351	1-216-295-91	CONDUCTOR, CHIP (2012)	
R3352	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R3358	1-216-047-91	METAL GLAZE	820 5% 1/10W
R3359	1-216-047-91	METAL GLAZE	820 5% 1/10W
R3360	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R3361	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W
R3362	1-216-029-00	METAL GLAZE	150 5% 1/10W
R3363	1-216-031-00	METAL GLAZE	180 5% 1/10W
R3364	1-216-035-00	METAL GLAZE	270 5% 1/10W
R3365	1-216-105-91	METAL GLAZE	220K 5% 1/10W
R3366	1-216-105-91	METAL GLAZE	220K 5% 1/10W
R3367	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R3368	1-216-103-00	METAL GLAZE	180K 5% 1/10W
R3369	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R3370	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3371	1-216-095-00	METAL GLAZE	82K 5% 1/10W
R3372	1-216-041-00	METAL GLAZE	470 5% 1/10W
R3373	1-216-035-00	METAL GLAZE	270 5% 1/10W

REF.NO. PART NO. DESCRIPTION REMARK

CRYSTAL

X3301 1-567-505-11 OSCILLATOR, CRYSTAL
X3302 1-760-095-21 VIBRATOR, CRYSTAL



* A-1297-720-A AV BOARD, COMPLETE
(KV-27V36/29V36C/29V76M)
* A-1297-850-A AV BOARD, COMPLETE
(KV-27V26/29V66M)

CAPACITOR

C101 1-126-960-11 ELECT 1MF 20% 50V
(KV-27V36/29V36C/29V76M)
C102 1-164-161-11 CERAMIC CHIP 0.0022MF 10% 50V
(KV-27V36/29V36C/29V76M)
C104 1-126-964-11 ELECT 10MF 20% 50V
(KV-27V36/29V36C/29V76M)
C106 1-104-664-11 ELECT 47MF 20% 25V
(KV-27V36/29V36C/29V76M)
C108 1-126-933-11 ELECT 100MF 20% 16V
(KV-27V36/29V36C/29V76M)
C109 1-163-259-91 CERAMIC CHIP 220PF 5% 50V
(KV-27V36/29V36C/29V76M)
C110 1-104-760-11 CERAMIC CHIP 0.047MF 10% 50V
(KV-27V36/29V36C/29V76M)
C111 1-126-960-11 ELECT 1MF 20% 50V
(KV-27V36/29V36C/29V76M)
C113 1-126-934-11 ELECT 220MF 20% 16V
(KV-27V36/29V36C/29V76M)
C1902 1-126-964-11 ELECT 10MF 20% 50V
C1903 1-102-129-00 CERAMIC 0.01MF 10% 50V
C1904 1-102-129-00 CERAMIC 0.01MF 10% 50V
C1905 1-126-964-11 ELECT 10MF 20% 50V
C1906 1-102-129-00 CERAMIC 0.01MF 10% 50V
C1907 1-126-964-11 ELECT 10MF 20% 50V
C1908 1-102-074-00 CERAMIC 0.001MF 10% 50V
C1909 1-102-074-00 CERAMIC 0.001MF 10% 50V
C1910 1-164-232-11 CERAMIC CHIP 0.01MF 10% 50V
C1911 1-164-232-11 CERAMIC CHIP 0.01MF 10% 50V

CONNECTOR

CN101 1-573-301-21 CONNECTOR, BOARD TO BOARD 20P
CN102 1-573-979-21 CONNECTOR, BOARD TO BOARD 11P
CN103 * 1-564-507-11 PLUG, CONNECTOR 4P
(KV-27V36/29V36C/29V76M)
CN106 * 1-564-506-11 PLUG, CONNECTOR 3P

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

AV

REF.NO.	PART NO.	DESCRIPTION	REMARK
<u>DIODE</u>			
D101	8-719-109-89	DIODE RD5.6ESB2 (KV-27V36/29V36C/29V76M)	
D103	8-719-991-33	DIODE 1SS133T-77 (KV-27V36/29V36C/29V76M)	
D104	8-719-991-33	DIODE 1SS133T-77 (KV-27V36/29V36C/29V76M)	
<u>IC</u>			
IC1901	8-752-058-68	IC CXA1315M	
IC1902	8-759-981-61	IC LM2901M	
IC1903	8-759-356-27	IC NJM2129M-TE2	
<u>COIL</u>			
L102	1-410-470-11	INDUCTOR 10UH (KV-27V36/29V36C/29V76M)	
L105	1-408-421-00	INDUCTOR 100UH (KV-27V36/29V36C/29V76M)	
<u>TRANSISTOR</u>			
Q101	8-729-119-78	TRANSISTOR 2SC2785-HFE (KV-27V36/29V36C/29V76M)	
Q103	8-729-216-22	TRANSISTOR 2SA1162-G (KV-27V36/29V36C/29V76M)	
Q104	8-729-216-22	TRANSISTOR 2SA1162-G (KV-27V36/29V36C/29V76M)	
Q105	8-729-216-22	TRANSISTOR 2SA1162-G (KV-27V36/29V36C/29V76M)	
Q1901	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1902	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1906	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1908	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1911	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1912	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1914	8-729-216-22	TRANSISTOR 2SA1162-G	
Q1916	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1917	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1918	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1919	8-729-422-27	TRANSISTOR 2SD601A-Q	
<u>RESISTOR</u>			
R101	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R102	1-216-083-00	METAL GLAZE 27K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R103	1-216-689-11	METAL GLAZE 39K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R104	1-216-045-00	METAL GLAZE 680 5% 1/10W (KV-27V36/29V36C/29V76M)	
R106	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R107	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R108	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-27V36/29V36C/29V76M)	

REF.NO.	PART NO.	DESCRIPTION	REMARK
R109	1-216-081-00	METAL GLAZE 22K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R112	1-249-421-11	CARBON 2.2K 5% 1/4W (KV-27V36/29V36C/29V76M)	
R113	1-216-097-91	METAL GLAZE 100K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R114	1-216-121-91	METAL GLAZE 1M 5% 1/10W (KV-27V36/29V36C/29V76M)	
R115	1-216-073-00	METAL GLAZE 10K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R116	1-216-073-00	METAL GLAZE 10K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R117	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W (KV-27V36/29V36C/29V76M)	
R1904	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1905	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1906	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R1907	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R1908	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1909	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R1910	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1911	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1915	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1916	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1922	1-216-043-91	METAL GLAZE 560 5% 1/10W	
R1923	1-216-043-91	METAL GLAZE 560 5% 1/10W	
R1928	1-216-041-00	METAL GLAZE 470 5% 1/10W	
R1929	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R1930	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1931	1-216-025-91	METAL GLAZE 100 5% 1/10W	
R1932	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1934	1-216-097-91	METAL GLAZE 100K 5% 1/10W	
R1935	1-216-295-91	CONDUCTOR, CHIP (2012)	
R1936	1-208-804-11	METAL GLAZE 8.2K 0.50% 1/10W	
R1937	1-208-790-11	METAL GLAZE 2.2K 0.50% 1/10W	
R1940	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R2901	1-208-808-11	METAL GLAZE 12K 0.50% 1/10W	
R2903	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R2904	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R2905	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R2906	1-216-033-00	METAL GLAZE 220 5% 1/10W	
R2907	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R2908	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R2909	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R2910	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R2911	1-216-061-00	METAL GLAZE 3.3K 5% 1/10W	
R2912	1-249-425-11	CARBON 4.7K 5% 1/4W	
R2913	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R2914	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R2916	1-216-073-00	METAL GLAZE 10K 5% 1/10W	



Note:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R2917	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R2918	1-216-073-00	METAL GLAZE	10K 5% 1/10W

TUNERTU101 Δ 8-598-339-00 TUNER, FSS BTF-LA402 (KV-27V36/29V36C/29V76M)

- * A-1298-111-A A BOARD, COMPLETE (KV-29V22M)
- * A-1298-112-A A BOARD, COMPLETE (KV-27V26/29V66M)
- * A-1298-127-A A BOARD, COMPLETE (KV-27V36/29V36C/29V76M)

- * 4-051-927-01 CASE, SHIELD
- 4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C001	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
C003	1-104-760-11	CERAMIC CHIP	0.047MF 10% 50V
C005	1-126-960-11	ELECT	1MF 20% 50V
C009	1-126-967-11	ELECT	47MF 20% 50V
C010	1-163-033-91	CERAMIC CHIP	0.022MF 50V
C012	1-216-033-00	METAL GLAZE	220 5% 1/10W
C013	1-216-121-91	METAL GLAZE	1M 5% 1/10W
C014	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C023	1-163-259-91	CERAMIC CHIP	220PF 5% 50V
C028	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C029	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C030	1-163-009-11	CERAMIC CHIP	0.001MF 10% 50V
C035	1-163-237-11	CERAMIC CHIP	27PF 5% 50V
C036	1-163-231-11	CERAMIC CHIP	15PF 5% 50V
C037	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C038	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C039	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C040	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C051	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C053	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C056	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C061	1-163-033-91	CERAMIC CHIP	0.022MF 50V
C062	1-163-033-91	CERAMIC CHIP	0.022MF 50V
C063	1-126-935-11	ELECT	470MF 20% 16V
C071	1-164-096-11	CERAMIC	0.01MF 50V
C072	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C075	1-107-823-11	CERAMIC CHIP	0.47MF 10% 16V
C353	1-163-231-11	CERAMIC CHIP	15PF 5% 50V
C354	1-163-133-00	CERAMIC CHIP	470PF 5% 50V
C355	1-126-959-11	ELECT	0.47MF 20% 50V
C356	1-126-963-11	ELECT	4.7MF 20% 50V
C357	1-126-959-11	ELECT	0.47MF 20% 50V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C358	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C359	1-126-933-11	ELECT	100MF 20% 16V
C363	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C364	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C365	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C366	1-137-399-11	FILM	0.1MF 5% 50V
C367	1-137-399-11	FILM	0.1MF 5% 50V
C368	1-137-399-11	FILM	0.1MF 5% 50V
C369	1-163-243-11	CERAMIC CHIP	47PF 5% 50V
C370	1-163-037-11	CERAMIC CHIP	0.022MF 10% 50V
C371	1-163-141-00	CERAMIC CHIP	0.001MF 5% 50V
C372	1-126-959-11	ELECT	0.47MF 20% 50V
C373	1-126-960-11	ELECT	1MF 20% 50V
C375	1-165-319-11	CERAMIC CHIP	0.1MF 50V (KV-29V22M)
C376	1-126-964-11	ELECT	10MF 20% 50V
C377	1-137-399-11	FILM	0.1MF 5% 50V
C378	1-136-244-11	FILM	0.1MF 5% 50V
C379	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C380	1-126-935-11	ELECT	470MF 20% 16V
C381	1-163-003-11	CERAMIC CHIP	330PF 10% 50V
C383	1-137-399-11	FILM	0.1MF 5% 50V
C385	1-164-182-11	CERAMIC CHIP	0.0033MF 10% 50V
C386	1-164-232-11	CERAMIC CHIP	0.01MF 10% 50V
C387	1-126-961-11	ELECT	2.2MF 20% 50V
C388	1-126-959-11	ELECT	0.47MF 20% 50V
C390	1-126-960-11	ELECT	1MF 20% 50V
C391	1-163-017-00	CERAMIC CHIP	0.0047MF 10% 50V
C392	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C461	1-126-963-11	ELECT	4.7MF 20% 50V (KV-27V36/29V36C/29V76M)
C461	1-128-551-11	ELECT	22MF 20% 25V (KV-27V26/29V22M/29V66M)
C462	1-126-961-11	ELECT	2.2MF 20% 50V
C463	1-126-961-11	ELECT	2.2MF 20% 50V
C466	1-104-666-11	ELECT	220MF 20% 25V
C468	1-104-664-11	ELECT	47MF 20% 25V
C470	1-126-961-11	ELECT	2.2MF 20% 50V
C471	1-104-666-11	ELECT	220MF 20% 25V
C472	1-136-173-00	FILM	0.47MF 5% 50V
C473	1-136-169-00	FILM	0.22MF 5% 50V
C474	1-126-942-61	ELECT	1000MF 20% 25V
C475	1-136-169-00	FILM	0.22MF 5% 50V
C476	1-126-942-61	ELECT	1000MF 20% 25V (KV-27V26/29V22M/29V66M)
C477	1-126-942-61	ELECT	1000MF 20% 25V (KV-27V26/29V22M/29V66M)
C501	1-102-110-00	CERAMIC	220PF 10% 50V
C502	1-126-959-11	ELECT	0.47MF 20% 50V
C503	1-163-003-11	CERAMIC CHIP	330PF 10% 50V

Note:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK
C504	1-102-212-00	CERAMIC	820PF 10% 500V
C505	1-102-002-00	CERAMIC	680PF 10% 500V
C506	1-106-383-00	MYLAR	0.047MF 10% 200V
C507 Δ	1-162-116-00	CERAMIC	680PF 10% 2KV
C508	1-102-244-00	CERAMIC	220PF 10% 500V
C509	1-162-116-00	CERAMIC	680PF 10% 2KV
C510	1-137-150-11	MYLAR	0.01MF 10% 100V
C511 Δ	1-115-460-11	FILM	0.022MF 3% 1.2KV
C513 Δ	1-130-895-00	FILM	0.056MF 5% 400V
C514 Δ	1-104-844-11	FILM	0.62MF 5% 200V
C515	1-106-343-00	MYLAR	0.001MF 10% 100V
C516	1-115-461-11	FILM	2MF 5% 200V
C517	1-107-649-11	ELECT	2.2MF 20% 250V
C518	1-106-395-00	MYLAR	0.15MF 10% 200V
C519	1-162-815-11	CERAMIC	47PF 5% 500V
C520	1-164-646-11	CERAMIC	2200PF 10% 500V
C521	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C522	1-126-960-11	ELECT	1MF 20% 50V
C525	1-102-244-00	CERAMIC	220PF 10% 500V
C526	1-107-662-11	ELECT	22MF 20% 250V
C527	1-162-116-00	CERAMIC	680PF 10% 2KV
C528	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C529	1-128-551-11	ELECT	22MF 20% 25V
C530	1-137-366-11	FILM	0.0022MF 5% 50V
C531	1-126-965-11	ELECT	22MF 20% 50V
C532	1-126-965-11	ELECT	22MF 20% 50V
C537	1-126-941-11	ELECT	470MF 20% 25V
C539 Δ	1-126-935-11	ELECT	470MF 20% 16V
C540	1-123-024-21	ELECT	33MF 160V
C541	1-128-560-11	ELECT	22MF 20% 100V
C545	1-106-387-00	MYLAR	0.068MF 10% 200V
C546	1-106-343-00	MYLAR	0.001MF 10% 100V
C547	1-106-343-00	MYLAR	0.001MF 10% 100V
C551	1-163-037-11	CERAMIC CHIP	0.022MF 10% 50V
C561	1-126-967-11	ELECT	47MF 20% 50V
C563	1-126-923-11	ELECT	220MF 20% 10V
C564	1-126-960-11	ELECT	1MF 20% 50V
C565	1-126-969-11	ELECT	220MF 20% 50V
C566	1-126-964-11	ELECT	10MF 20% 50V
C568	1-136-169-00	FILM	0.22MF 5% 50V
C571	1-104-664-11	ELECT	47MF 20% 25V
C1002	1-126-964-11	ELECT	10MF 20% 50V
C1101	1-126-768-11	ELECT	2200MF 20% 16V
C1103	1-126-965-11	ELECT	22MF 20% 50V
C1104	1-126-967-11	ELECT	47MF 20% 16V
C1105	1-126-967-11	ELECT	47MF 20% 16V
C1106	1-126-964-11	ELECT	10MF 20% 50V
C1107	1-163-037-11	CERAMIC CHIP	0.022MF 10% 50V
C1108	1-126-960-11	ELECT	1MF 20% 50V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C1109	1-126-964-11	ELECT	10MF 20% 50V
C1110	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C1111	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C1112	1-163-227-11	CERAMIC CHIP	10PF 0.5PF 50V
C1244	1-126-959-11	ELECT	0.47MF 20% 50V
C1245	1-126-959-11	ELECT	0.47MF 20% 50V
C1351	1-163-251-11	CERAMIC CHIP	100PF 5% 50V
C1352	1-126-933-11	ELECT	100MF 20% 16V
C1353	1-163-037-11	CERAMIC CHIP	0.022MF 10% 50V
C1354	1-216-295-91	CONDUCTOR, CHIP	(2012)
C1401	1-126-959-11	ELECT	0.47MF 20% 50V
C1402	1-126-964-11	ELECT	10MF 20% 50V
C1403	1-126-959-11	ELECT	0.47MF 20% 50V
C1404	1-165-319-11	CERAMIC CHIP	0.1MF 50V
C1405	1-165-319-11	CERAMIC CHIP	0.1MF 50V
C1406	1-165-319-11	CERAMIC CHIP	0.1MF 50V
C1407	1-165-319-11	CERAMIC CHIP	0.1MF 50V
C1408	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C1409	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C1410	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C1411	1-164-161-11	CERAMIC CHIP	0.0022MF 10% 50V
C1412	1-126-961-11	ELECT	2.2MF 20% 50V
C1413	1-126-961-11	ELECT	2.2MF 20% 50V
C1414	1-164-489-11	CERAMIC CHIP	0.22MF 10% 16V
C1415	1-126-965-11	ELECT	22MF 20% 50V
C1416	1-126-933-11	ELECT	100MF 20% 16V
C1417	1-126-767-11	ELECT	1000MF 20% 16V
C1420	1-164-005-11	CERAMIC CHIP	0.47MF 25V

CONNECTOR

CN270	1-573-298-11	CONNECTOR, BOARD TO BOARD 20P
CN271	1-573-978-21	CONNECTOR, BOARD TO BOARD 11P
CN351 *	1-564-509-11	PLUG, CONNECTOR 6P
CN461 *	1-564-507-11	PLUG, CONNECTOR 4P (KV-27V26/29V22M/29V66M)
CN461 *	1-564-510-11	PLUG, CONNECTOR 7P (KV-27V36/29V36C/29V76M)
CN501 *	1-580-798-11	CONNECTOR PIN (DY) 6P
CN503 *	1-564-507-11	PLUG, CONNECTOR 4P
CN1001*	1-564-512-11	PLUG, CONNECTOR 9P
CN1101	1-573-298-11	CONNECTOR, BOARD TO BOARD 20P (except KV-29V22M)
CN1103	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P
CN1231	1-564-511-11	PLUG, CONNECTOR 8P
CN1641*	1-564-515-11	PLUG, CONNECTOR 12P
CN1941*	1-564-508-11	PLUG, CONNECTOR 5P (KV-27V36/29V36C/29V76M)
CN3001	1-573-298-11	CONNECTOR, BOARD TO BOARD 20P

DIODE

D001	8-719-991-33	DIODE 1SS133T-77
D002	8-719-109-89	DIODE RD5.6ESB2
D003	8-719-991-33	DIODE 1SS133T-77



Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO. PART NO. DESCRIPTION REMARK

D004 8-719-110-17 DIODE RD10ESB2
D011 8-719-983-14 DIODE MTZJ-T-77-3.9
D013 8-719-991-33 DIODE 1SS133T-77
D014 8-719-991-33 DIODE 1SS133T-77
D015 8-719-991-33 DIODE 1SS133T-77

D353 8-719-991-33 DIODE 1SS133T-77
D356 8-719-991-33 DIODE 1SS133T-77
D360 8-719-110-17 DIODE RD10ESB2
D362 8-719-991-33 DIODE 1SS133T-77
D368 8-719-991-33 DIODE 1SS133T-77

D462 8-719-991-33 DIODE 1SS133T-77
D501 8-719-109-89 DIODE RD5.6ESB2
D502 8-719-945-80 DIODE ERC06-15S
D503 8-719-945-80 DIODE ERC06-15S
D504 8-719-900-26 DIODE ERD29-08J

D505 8-719-908-03 DIODE GP08D
D506 8-719-908-03 DIODE GP08D
D507 8-719-991-33 DIODE 1SS133T-77
D515 8-719-302-43 DIODE EL1Z
D516 8-719-991-33 DIODE 1SS133T-77

D518 8-719-991-33 DIODE 1SS133T-77
D519 **A** 8-719-302-43 DIODE EL1Z
D520 8-719-991-33 DIODE 1SS133T-77
D521 8-719-059-78 DIODE MTZJ-T-77-7.5X
D530 8-719-979-85 DIODE EGP20G

D531 8-719-979-85 DIODE EGP20G
D534 8-719-302-43 DIODE EL1Z
D561 8-719-908-03 DIODE GP08D
D562 8-719-991-33 DIODE 1SS133T-77
D1102 8-719-982-24 DIODE MTZJ-33A

D1103 8-719-109-89 DIODE RD5.6ESB2
D1248 8-719-981-99 DIODE MTZJ-T-77-3.3
D1263 8-719-110-17 DIODE RD10ESB2
D1264 8-719-110-17 DIODE RD10ESB2

FERRITE BEAD

FB501 1-410-396-41 FERRITE BEAD INDUCTOR 0.45UH
FB502 1-410-397-21 FERRITE BEAD INDUCTOR 1.1UH
FB503 1-410-397-21 FERRITE BEAD INDUCTOR 1.1UH

IC

IC001 8-752-880-88 IC CXP85840-002S
IC002 8-759-354-28 IC ST24C02FM6TR
IC351 8-752-076-76 IC CXA2025AS
IC461 8-759-980-43 IC TDA2009A
IC501 8-759-700-07 IC NJM2903M

IC561 8-759-980-58 IC TDA8172
IC1001 8-752-058-68 IC CXA1315M
IC1401 8-759-369-39 IC BH3856FS-E2
IC1402 8-759-100-96 IC UPC4558G2

REF.NO. PART NO. DESCRIPTION REMARK

CHIP CONDUCTOR

JR001 1-216-295-91 CONDUCTOR, CHIP (2012)
JR163 1-216-295-91 CONDUCTOR, CHIP (2012)
JR240 1-216-295-91 CONDUCTOR, CHIP (2012)
JR351 1-216-295-91 CONDUCTOR, CHIP (2012) (KV-29V22M)
JR352 1-216-295-91 CONDUCTOR, CHIP (2012) (KV-29V22M)

JR501 1-216-295-91 CONDUCTOR, CHIP (2012)
JR1351 1-216-295-91 CONDUCTOR, CHIP (2012)
JR1352 1-216-295-91 CONDUCTOR, CHIP (2012)
JR4101 1-216-295-91 CONDUCTOR, CHIP (2012)
JR4108 1-216-295-91 CONDUCTOR, CHIP (2012)

JR4110 1-216-295-91 CONDUCTOR, CHIP (2012)
JR4114 1-216-295-91 CONDUCTOR, CHIP (2012)
JR4116 1-216-295-91 CONDUCTOR, CHIP (2012)
JR4120 1-216-295-91 CONDUCTOR, CHIP (2012)

COIL

L001 1-408-421-00 INDUCTOR 100UH
L002 1-408-421-00 INDUCTOR 100UH
L003 1-410-470-11 INDUCTOR 10UH
L004 1-410-470-11 INDUCTOR 10UH
L352 1-412-537-31 INDUCTOR 100UH

L461 1-410-470-11 INDUCTOR 10UH
(KV-27V26/29V22M/29V66M)

L461 1-410-473-11 INDUCTOR 18UH
(KV-27V36/29V36C/29V76M)

L501 **A** 1-409-861-11 COIL, HORIZONTAL LINEARITY
L502 1-412-552-11 INDUCTOR 2.2MMH
L503 1-406-677-11 COIL, CHOKE 10MMH

L511 1-406-607-11 COIL, CHOKE 15MMH
L517 1-412-552-11 INDUCTOR 2.2MMH
L1101 1-408-421-00 INDUCTOR 100UH
L1102 1-410-470-11 INDUCTOR 10UH
L1401 1-410-494-11 INDUCTOR 1MMH

IC LINK

PS461 **A** 1-532-984-11 LINK, IC 2A/90V

TRANSISTOR

Q001 8-729-216-22 TRANSISTOR 2SA1162-G
Q002 8-729-422-27 TRANSISTOR 2SD601A-Q
Q003 8-729-422-27 TRANSISTOR 2SD601A-Q
Q004 8-729-216-22 TRANSISTOR 2SA1162-G
Q010 8-729-422-27 TRANSISTOR 2SD601A-Q

Q011 8-729-422-27 TRANSISTOR 2SD601A-Q
Q012 8-729-422-27 TRANSISTOR 2SD601A-Q
Q013 8-729-422-27 TRANSISTOR 2SD601A-Q
Q014 8-729-422-27 TRANSISTOR 2SD601A-Q
Q015 8-729-422-27 TRANSISTOR 2SD601A-Q

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK
Q016	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q017	8-729-216-22	TRANSISTOR 2SA1162-G	
Q301	8-729-216-22	TRANSISTOR 2SA1162-G	
Q302	8-729-216-22	TRANSISTOR 2SA1162-G	
Q303	8-729-216-22	TRANSISTOR 2SA1162-G	
Q354	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q356	8-729-216-22	TRANSISTOR 2SA1162-G	
Q357	8-729-422-27	TRANSISTOR 2SD601A-Q	(KV-27V36/29V36C/29V76M)
Q358	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q461	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q462	8-729-216-22	TRANSISTOR 2SA1162-G	
Q501	8-729-140-50	TRANSISTOR 2SC3209LK	
Q502 Δ	8-729-016-32	TRANSISTOR 2SC4927-01	
Q511 Δ	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q512 Δ	8-729-809-29	TRANSISTOR 2SC4159-E	
Q551	8-729-216-22	TRANSISTOR 2SA1162-G	
Q552	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q561	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q562	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q563	8-729-105-08	TRANSISTOR 2SA1330-06	
Q1102	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1103	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1231	8-729-422-27	TRANSISTOR 2SD601A-Q	
Q1232	8-729-422-27	TRANSISTOR 2SD601A-Q	
RESISTOR			
R001	1-216-045-00	METAL GLAZE	680 5% 1/10W
R002	1-247-815-91	CARBON	220 5% 1/4W
R003	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R004	1-216-121-91	METAL GLAZE	1M 5% 1/10W
R005	1-247-815-91	CARBON	220 5% 1/4W
R006	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R007	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R008	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R009	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R010	1-216-037-00	METAL GLAZE	330 5% 1/10W
R011	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R012	1-216-033-00	METAL GLAZE	220 5% 1/10W (except KV-29V22M)
R013	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R014	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R015	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R016	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R019	1-249-425-11	CARBON	4.7K 5% 1/4W
R020	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R022	1-249-429-11	CARBON	10K 5% 1/4W (except KV-29V22M)

REF.NO.	PART NO.	DESCRIPTION	REMARK
R023	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R025	1-163-010-11	CERAMIC CHIP	0.0012MF 10% 50V
R026	1-163-038-91	CERAMIC CHIP	0.1MF 25V
R028	1-249-417-11	CARBON	1K 5% 1/4W
R029	1-216-025-91	METAL GLAZE	100 5% 1/10W
R030	1-249-425-11	CARBON	4.7K 5% 1/4W
R031	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R032	1-247-815-91	CARBON	220 5% 1/4W
R034	1-247-815-91	CARBON	220 5% 1/4W
R035	1-247-815-91	CARBON	220 5% 1/4W
R036	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R037	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R038	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R039	1-247-807-31	CARBON	100 5% 1/4W
R040	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R041	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (except KV-29V22M)
R042	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (except KV-29V22M)
R043	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R044	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R045	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R046	1-247-815-91	CARBON	220 5% 1/4W
R047	1-249-417-11	CARBON	1K 5% 1/4W
R048	1-249-417-11	CARBON	1K 5% 1/4W
R049	1-249-417-11	CARBON	1K 5% 1/4W
R050	1-247-815-91	CARBON	220 5% 1/4W (except KV-29V22M)
R051	1-247-815-91	CARBON	220 5% 1/4W
R052	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R053	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R054	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R055	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R056	1-216-033-00	METAL GLAZE	220 5% 1/10W
R057	1-249-417-11	CARBON	1K 5% 1/4W
R058	1-216-033-00	METAL GLAZE	220 5% 1/10W
R064	1-247-815-91	CARBON	220 5% 1/4W
R065	1-247-815-91	CARBON	220 5% 1/4W
R066	1-247-815-91	CARBON	220 5% 1/4W
R067	1-249-413-11	CARBON	470 5% 1/4W
R068	1-247-815-91	CARBON	220 5% 1/4W
R069	1-247-815-91	CARBON	220 5% 1/4W
R070	1-247-815-91	CARBON	220 5% 1/4W
R071	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R072	1-216-033-00	METAL GLAZE	220 5% 1/10W
R073	1-216-033-00	METAL GLAZE	220 5% 1/10W
R074	1-216-033-00	METAL GLAZE	220 5% 1/10W



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R075	1-216-033-00	METAL GLAZE	220 5% 1/10W	R380	1-247-815-91	CARBON	220 5% 1/4W
R076	1-216-033-00	METAL GLAZE	220 5% 1/10W	R381	1-247-815-91	CARBON	220 5% 1/4W
R077	1-216-033-00	METAL GLAZE	220 5% 1/10W	R382	1-216-033-00	METAL GLAZE	220 5% 1/10W
R078	1-249-417-11	CARBON	1K 5% 1/4W	R383	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R079	1-216-033-00	METAL GLAZE	220 5% 1/10W	R384	1-216-109-00	METAL GLAZE	330K 5% 1/10W
R080	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R385	1-249-422-11	CARBON	2.7K 5% 1/4W
R081	1-216-025-91	METAL GLAZE	100 5% 1/10W	R386	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R082	1-216-025-91	METAL GLAZE	100 5% 1/10W				(except KV-29V22M)
R083	1-249-429-11	CARBON	10K 5% 1/4W	R387	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R084	1-216-049-91	METAL GLAZE	1K 5% 1/10W	R388	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R087	1-247-815-91	CARBON	220 5% 1/4W	R389	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
R090	1-216-033-00	METAL GLAZE	220 5% 1/10W	R390	1-216-035-00	METAL GLAZE	270 5% 1/10W
			(except KV-29V22M)	R391	1-208-810-11	METAL GLAZE	15K 0.50% 1/10W
R092	1-249-429-11	CARBON	10K 5% 1/4W	R392	1-216-025-91	METAL GLAZE	100 5% 1/10W
R097	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R393	1-216-043-91	METAL GLAZE	560 5% 1/10W
R099	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W	R394	1-216-059-00	METAL GLAZE	2.7K 5% 1/10W
R131	1-216-035-00	METAL GLAZE	270 5% 1/10W	R395	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R132	1-216-115-00	METAL GLAZE	560K 5% 1/10W	R396	1-249-417-11	CARBON	1K 5% 1/4W
R133	1-216-039-00	METAL GLAZE	390 5% 1/10W				(KV-27V36/29V36C/29V76M)
R135	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R397	1-249-425-11	CARBON	4.7K 5% 1/4W
R136	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R461	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R137	1-216-033-00	METAL GLAZE	220 5% 1/10W	R462	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R353	1-208-786-11	METAL GLAZE	1.5K 0.50% 1/10W	R463	1-249-435-11	CARBON	33K 5% 1/4W
R354	1-216-077-00	METAL GLAZE	15K 5% 1/10W	R464	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R355	1-216-033-00	METAL GLAZE	220 5% 1/10W	R465	1-249-413-11	CARBON	470 5% 1/4W
R356	1-216-033-00	METAL GLAZE	220 5% 1/10W	R466	1-249-383-11	CARBON	1.5 5% 1/4W F
R358	1-247-815-91	CARBON	220 5% 1/4W				(KV-27V36/29V36C/29V76M)
			(except KV-29V22M)	R466	1-249-385-11	CARBON	2.2 5% 1/4W F
R359	1-247-815-91	CARBON	220 5% 1/4W				(KV-27V26/29V22M/29V66M)
			(except KV-29V22M)	R467	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R360	1-247-815-91	CARBON	220 5% 1/4W	R469	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
			(except KV-29V22M)				(KV-27V36/29V36C/29V76M)
R361	1-216-025-91	METAL GLAZE	100 5% 1/10W	R469	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
R362	1-216-025-91	METAL GLAZE	100 5% 1/10W				(KV-27V26/29V22M/29V66M)
R363	1-216-025-91	METAL GLAZE	100 5% 1/10W	R471	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R364	1-216-101-00	METAL GLAZE	150K 5% 1/10W	R472	1-216-067-00	METAL GLAZE	5.6K 5% 1/10W
R365	1-216-101-00	METAL GLAZE	150K 5% 1/10W				(KV-27V36/29V36C/29V76M)
R366	1-216-089-91	METAL GLAZE	47K 5% 1/10W	R472	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
R367	1-216-097-91	METAL GLAZE	100K 5% 1/10W				(KV-27V26/29V22M/29V66M)
R368	1-249-441-11	CARBON	100K 5% 1/4W	R473	1-249-398-11	CARBON	27 5% 1/4W
R369	1-216-097-91	METAL GLAZE	100K 5% 1/10W	R475	1-249-430-11	CARBON	12K 5% 1/4W
R370	1-249-417-11	CARBON	1K 5% 1/4W				
			(V-27V36/29V36C/29V76M)	R476	1-249-430-11	CARBON	12K 5% 1/4W
R371	1-216-053-00	METAL GLAZE	1.5K 5% 1/10W	R477	1-249-398-11	CARBON	27 5% 1/4W
			(KV-27V36/29V36C/29V76M)	R478	1-249-418-11	CARBON	1.2K 5% 1/4W F
R372	1-216-113-00	METAL GLAZE	470K 5% 1/10W	R479	1-249-418-11	CARBON	1.2K 5% 1/4W F
R373	1-216-073-00	METAL GLAZE	10K 5% 1/10W	R480	1-249-385-11	CARBON	2.2 5% 1/4W F
R374	1-216-125-00	METAL GLAZE	1.5M 5% 1/10W	R481	1-249-385-11	CARBON	2.2 5% 1/4W F
R375	1-216-025-91	METAL GLAZE	100 5% 1/10W	R482	1-249-421-11	CARBON	2.2K 5% 1/4W
R376	1-216-073-00	METAL GLAZE	10K 5% 1/10W				(KV-27V26/29V22M/29V66M)
R379	1-216-033-00	METAL GLAZE	220 5% 1/10W	R483	1-249-421-11	CARBON	2.2K 5% 1/4W
							(KV-27V26/29V22M/29V66M)

Note:

The components identified by ☒ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Note:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.



REF.NO.	PART NO.	DESCRIPTION	REMARK
R501	1-216-037-00	METAL GLAZE	330 5% 1/10W
R502	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R503	1-249-426-11	CARBON	5.6K 5% 1/4W F
R504 Δ	1-215-918-00	METAL OXIDE	1.5K 5% 3W F
R505	1-249-431-11	CARBON	15K 5% 1/4W
R506	1-215-861-00	METAL OXIDE	47 5% 1W F
R507	1-249-401-11	CARBON	47 5% 1/4W
R508	1-249-427-11	CARBON	6.8K 5% 1/4W
R509	1-247-750-11	CARBON	680 5% 1/2W F
R510 Δ	1-215-860-11	METAL OXIDE	33 5% 1W F
R511 Δ	1-216-449-11	METAL OXIDE	56 5% 2W F
R512 Δ	1-216-450-00	METAL OXIDE	82 5% 2W F
R513	1-216-347-11	METAL OXIDE	0.68 5% 1W F
R515	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R516	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R517	1-249-415-11	CARBON	680 5% 1/4W
R518	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R519	1-249-411-11	CARBON	330 5% 1/4W
R523	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R524	1-249-429-11	CARBON	10K 5% 1/4W
R525	1-216-071-00	METAL GLAZE	8.2K 5% 1/10W
R528	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R529	1-208-814-11	METAL GLAZE	22K 0.50% 1/10W
<input checked="" type="checkbox"/> R530 Δ		METAL GLAZE	1/10W
<input checked="" type="checkbox"/> R531 Δ		METAL GLAZE	1/10W
R532	1-208-760-11	METAL GLAZE	120 0.50% 1/10W
R533 Δ	1-215-902-11	METAL OXIDE	47K 5% 1W F
R535	1-216-101-00	METAL GLAZE	150K 5% 1/10W
R536 Δ	1-260-288-11	CARBON	0.47 5% 1/2W
R537 Δ	1-260-288-11	CARBON	0.47 5% 1/2W
R538	1-247-887-00	CARBON	220K 5% 1/4W
R543	1-249-377-11	CARBON	0.47 5% 1/4W F
R546	1-215-456-00	METAL	30K 1% 1/4W
R547	1-215-457-00	METAL	33K 1% 1/4W
R549	1-215-437-00	METAL	4.7K 1% 1/4W
R550 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R551	1-215-873-00	METAL OXIDE	4.7K 5% 1W F
R552	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R553 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R554	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R561	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R563 Δ	1-216-351-00	METAL OXIDE	1.5 5% 1W F
R564	1-249-392-11	CARBON	8.2 5% 1/4W
R565 Δ	1-215-890-11	METAL OXIDE	470 5% 2W F
R566	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R567 Δ	1-249-385-11	CARBON	2.2 5% 1/4W F
R568	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R569	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R570	1-216-097-91	METAL GLAZE	100K 5% 1/10W

REF.NO.	PART NO.	DESCRIPTION	REMARK
R571	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R572	1-216-081-00	METAL GLAZE	22K 5% 1/10W
R573	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R574 Δ	1-216-365-00	METAL OXIDE	0.47 5% 2W F
R575	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R576	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R577	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R578	1-208-784-11	METAL GLAZE	1.2K 0.50% 1/10W
R579	1-208-842-11	METAL GLAZE	330K 0.50% 1/10W
R580	1-249-441-11	CARBON	100K 5% 1/4W
R1001	1-247-807-31	CARBON	100 5% 1/4W
R1002	1-247-807-31	CARBON	100 5% 1/4W
R1005	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1101	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R1102	1-215-900-11	METAL OXIDE	22K 5% 2W F
R1103	1-216-051-00	METAL GLAZE	1.2K 5% 1/10W
R1104	1-216-083-00	METAL GLAZE	27K 5% 1/10W
R1105	1-216-689-11	METAL GLAZE	39K 5% 1/10W
R1106	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R1107	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1108	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1109	1-216-019-00	METAL GLAZE	56 5% 1/10W
R1110	1-216-019-00	METAL GLAZE	56 5% 1/10W
R1111	1-216-019-00	METAL GLAZE	56 5% 1/10W
R1115	1-216-045-00	METAL GLAZE	680 5% 1/10W
R1117	1-249-425-11	CARBON	4.7K 5% 1/4W
R1118	1-249-425-11	CARBON	4.7K 5% 1/4W
R1120	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R1121	1-216-035-00	METAL GLAZE	270 5% 1/10W
R1122	1-216-115-00	METAL GLAZE	560K 5% 1/10W
R1123	1-216-039-00	METAL GLAZE	390 5% 1/10W
R1125	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R1126	1-216-035-00	METAL GLAZE	270 5% 1/10W
R1127	1-216-115-00	METAL GLAZE	560K 5% 1/10W
R1128	1-216-039-00	METAL GLAZE	390 5% 1/10W
R1130	1-216-057-00	METAL GLAZE	2.2K 5% 1/10W
R1255	1-216-295-91	CONDUCTOR, CHIP	(2012)
R1258	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R1259	1-216-097-91	METAL GLAZE	100K 5% 1/10W
R1260	1-216-061-00	METAL GLAZE	3.3K 5% 1/10W
R1294	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R1295	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R1351	1-247-815-91	CARBON	220 5% 1/4W
R1352	1-247-815-91	CARBON	220 5% 1/4W
R1353	1-247-815-91	CARBON	220 5% 1/4W
R1354	1-216-033-00	METAL GLAZE	220 5% 1/10W
R1355	1-216-025-91	METAL GLAZE	100 5% 1/10W
R1356	1-216-025-91	METAL GLAZE	100 5% 1/10W
R1357	1-216-025-91	METAL GLAZE	100 5% 1/10W



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R1358	1-247-807-31	CARBON	100 5% 1/4W
R1359	1-216-025-91	METAL GLAZE	100 5% 1/10W
R1360	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R1361	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R1362	1-216-295-91	CONDUCTOR, CHIP	(2012)
R1407	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1408	1-249-429-11	CARBON	10K 5% 1/4W
R1409	1-249-429-11	CARBON	10K 5% 1/4W
R1411	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R1412	1-216-093-00	METAL GLAZE	68K 5% 1/10W
R1413	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R1414	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R1415	1-216-025-91	METAL GLAZE	100 5% 1/10W
R1418	1-216-093-00	METAL GLAZE	68K 5% 1/10W
R1419	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R1420	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R1421	1-216-025-91	METAL GLAZE	100 5% 1/10W
R1424	1-247-807-31	CARBON	100 5% 1/4W
R1425	1-247-807-31	CARBON	100 5% 1/4W

SWITCH

S501 1-572-707-11 SWITCH, LEVER

TRANSFORMER

T501 1-437-210-11 TRANSFORMER, HORIZONTAL DRIVE
 T502 Δ 1-424-545-11 TRANSFORMER, FERRITE (PMT)
 T503 Δ 1-453-207-11 TRANSFORMER ASSY, FLYBACK (NX-2609/X4C)

TUNER

TU102 Δ 8-598-340-00 TUNER, FSS BTF-WA404

CRYSTAL

X001 1-578-774-11 VIBRATOR, CRYSTAL
 X353 1-567-505-11 OSCILLATOR, CRYSTAL
 X354 1-577-611-11 OSCILLATOR, CERAMIC



- * A-1316-252-A G BOARD, COMPLETE (KV-29V36C)
- * A-1316-261-A G BOARD, COMPLETE
(KV-27V26/27V36/29V66M/29V76M/29V22M)

4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C602 1-126-963-11 ELECT 4.7MF 20% 50V
(KV-29V36C)
 C603 Δ 1-113-915-11 CERAMIC 0.001MF 20% 300V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C604 Δ	1-136-346-21	FILM	0.22MF 20% 125V (KV-27V26/27V36/29V22M/29V66M/29V76M)
C605 Δ	1-136-346-21	FILM	0.22MF 20% 125V (KV-27V26/27V36/29V22M/29V66M/29V76M)
C605 Δ	1-136-346-21	FILM	0.22MF 20% 300V (KV-29V36C)
C606 Δ	1-115-388-11	ELECT	560MF 20% 200V
C607 Δ	1-115-388-11	ELECT	560MF 20% 200V
C608	1-164-625-11	CERAMIC	680PF 10% 500V (KV-27V26/27V36/29V22M/29V66M/29V76M)
C608	1-164-645-11	CERAMIC	1000PF 10% 500V (KV-29V36C)
C609	1-136-173-00	FILM	0.47MF 5% 50V
C610	1-136-173-00	FILM	0.47MF 5% 50V
C611	1-136-169-00	FILM	0.22MF 5% 50V
C612	1-136-169-00	FILM	0.22MF 5% 50V
C613	1-164-645-11	CERAMIC	1000PF 10% 500V
C614	1-164-645-11	CERAMIC	1000PF 10% 500V
C615	1-136-759-11	FILM	0.039MF 5% 630V
C617 Δ	1-113-915-11	CERAMIC	0.001MF 20% 250V
C626 Δ	1-113-897-11	CERAMIC	100PF 10% 250V (KV-29V36C)
C641	1-126-943-11	ELECT	2200MF 20% 25V
C642	1-126-767-11	ELECT	1000MF 20% 16V
C643	1-107-641-11	ELECT	220MF 20% 160V
C646	1-126-933-11	ELECT	100MF 20% 16V
C647	1-128-551-11	ELECT	22MF 20% 25V
C648	1-126-933-11	ELECT	100MF 20% 16V
C651	1-137-366-11	FILM	0.0022MF 5% 50V
C652	1-106-351-00	MYLAR	0.0022MF 99% 200V
C653	1-107-636-11	ELECT	10MF 20% 160V
C654	1-164-625-11	CERAMIC	680PF 10% 500V
C655	1-164-625-11	CERAMIC	680PF 10% 500V
C656	1-164-625-11	CERAMIC	680PF 10% 500V
C657	1-164-625-11	CERAMIC	680PF 10% 500V
C661	1-126-963-11	ELECT	4.7MF 20% 50V (KV-27V26/27V36/29V22M/29V66M/29V76M)
C690	1-164-645-11	CERAMIC	1000PF 10% 500V
C691	1-164-645-11	CERAMIC	1000PF 10% 500V

CONNECTOR

CN601 * 1-508-765-00 PIN, CONNECTOR (5MM PITCH) 3P
 CN602 * 1-580-844-11 PIN, CONNECTOR (POWER)
 CN641 * 1-564-515-11 PLUG, CONNECTOR 12P

DIODE

D601 8-719-911-19 DIODE 1SS119-25
 D602 Δ 8-719-510-53 DIODE D4SB60L
 D603 8-719-911-19 DIODE 1SS119-25
 D604 8-719-911-19 DIODE 1SS119-25

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK
D605	8-719-911-19	DIODE 1SS119-25	
D606	8-719-911-19	DIODE 1SS119-25	
D607	8-719-911-19	DIODE 1SS119-25	
D608	8-719-911-19	DIODE 1SS119-25	
D609	8-719-911-19	DIODE 1SS119-25	

D610	8-719-911-19	DIODE 1SS119-25	
D615	8-719-028-45	DIODE D2L20U	
D641	8-719-052-40	DIODE RBA-1004B	
D643	8-719-028-45	DIODE D2L20U	
D644	8-719-028-45	DIODE D2L20U	

D645	8-719-028-45	DIODE D2L20U	
D646	8-719-510-12	DIODE D10SC4M	
D648	8-719-057-52	DIODE EZ0150AV1	
D649	8-719-510-02	DIODE D1NS4	
D650	8-719-510-02	DIODE D1NS4	

FUSE

F601 Δ	1-576-193-11	FUSE 6.3A/125V	
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
F601 Δ	1-532-506-51	FUSE 6.3A/250V (KV-29V36C)	
	1-533-223-11	HOLDER, FUSE (for F601)	

FERRITE BEAD

FB601	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB602	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB641	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB642	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB643	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB644	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB645	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB646	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB647	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH
FB648	1-410-397-21	FERRITE BEAD INDUCTOR	1.1UH

IC

IC641	8-749-920-58	IC SI-3090CA	
IC642	8-759-701-56	IC NJM78M05FA	
IC643	8-749-012-13	IC DM-58	

COIL

L642	1-412-529-11	INDUCTOR	22UH
L643	1-412-525-31	INDUCTOR	10UH

TRANSISTOR

Q601 Δ	8-729-019-49	TRANSISTOR 2SC4834M	
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
Q601 Δ	8-729-019-50	TRANSISTOR 2SC4834NP (KV-29V36C)	
Q602 Δ	8-729-019-49	TRANSISTOR 2SC4834M	
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
Q602 Δ	8-729-019-50	TRANSISTOR 2SC4834NP (KV-29V36C)	

Q644	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q645	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q646	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	

RESISTOR

R603 Δ	1-219-776-11	CARBON	2.2M	10%	1/2W	
						(KV-27V26/27V36/29V22M/29V66M/29V76M)
R603 Δ	1-247-289-00	CARBON	8.2M	5%	1W	
						(KV-29V36C)
R605	1-247-893-11	CARBON	390K	5%	1/4W	
R606	1-247-893-11	CARBON	390K	5%	1/4W	
R607 Δ	1-202-933-61	FUSIBLE	0.1	10%	1/2W F	
R608 Δ	1-216-369-00	METAL OXIDE	1	5%	2W F	
						(KV-29V36C)
R608 Δ	1-216-372-11	METAL OXIDE	1.8	5%	2W F	
						(KV-27V26/27V36/29V22M/29V66M/29V76M)
R609	1-247-791-91	CARBON	22	5%	1/4W	
R610	1-247-791-91	CARBON	22	5%	1/4W	
R611 Δ	1-216-369-00	METAL OXIDE	1	5%	2W F	
						(KV-29V36C)

R611 Δ	1-216-372-11	METAL OXIDE	1.8	5%	2W F	
						(KV-27V26/27V36/29V22M/29V66M/29V76M)
R612	1-247-887-00	CARBON	220K	5%	1/4W	
R613	1-247-887-00	CARBON	220K	5%	1/4W	
R614	1-247-887-00	CARBON	220K	5%	1/4W	
R615	1-247-887-00	CARBON	220K	5%	1/4W	
R616	1-247-791-91	CARBON	22	5%	1/4W	
R617	1-247-791-91	CARBON	22	5%	1/4W	
R622 Δ	1-212-958-00	FUSIBLE	10	5%	1/2W F	
R623 Δ	1-205-943-11	WIREWOUND	1	5%	20W	
						(KV-27V26/27V36/29V22M/29V66M/29V76M)
R623 Δ	1-243-032-11	WIREWOUND	3.9	5%	20W	
						(KV-29V36C)

R641	1-247-843-11	CARBON	3.3K	5%	1/4W	
R642	1-247-843-11	CARBON	3.3K	5%	1/4W	
R643	1-249-387-11	CARBON	3.3	5%	1/4W F	
R644 Δ	1-215-882-00	METAL OXIDE	22	5%	2W F	
R645 Δ	1-260-304-51	CARBON	10	5%	1/2W	
						(KV-29V36C)

R647	1-249-417-11	CARBON	1K	5%	1/4W	
R648	1-247-887-00	CARBON	220K	5%	1/4W	
R649	1-249-425-11	CARBON	4.7K	5%	1/4W F	
R652	1-249-421-11	CARBON	2.2K	5%	1/4W	
R659	1-249-429-11	CARBON	10K	5%	1/4W	
						(KV-29V36C)

R661	1-249-413-11	CARBON	470	5%	1/4W F	
R662	1-249-429-11	CARBON	10K	5%	1/4W	
R663 Δ	1-249-377-11	CARBON	0.47	5%	1/4W F	
R664 Δ	1-249-377-11	CARBON	0.47	5%	1/4W F	
R665 Δ	1-249-377-11	CARBON	0.47	5%	1/4W F	



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R666 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R667 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R668 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R670 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R671 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R672 Δ	1-249-377-11	CARBON	0.47 5% 1/4W F
R678	1-247-863-91	CARBON	22K 5% 1/4W
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
R679	1-247-863-91	CARBON	22K 5% 1/4W
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
R680	1-249-429-11	CARBON	10K 5% 1/4W
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	
R681	1-249-407-11	CARBON	150 5% 1/4W
		(KV-27V26/27V36/29V22M/29V66M/29V76M)	

RELAY

RY601 Δ	1-755-018-11	RELAY (KV-29V36C)
RY601 Δ	1-424-146-11	RELAY (KV-27V26/27V36/29V22M/29V66M/29V76M)

TRANSFORMER

T601 Δ	1-426-717-11	TRANSFORMER, LINE FILTER (LFT)
		(KV-27V26/27V36/29V22M/29V66M/29V76M)
T602 Δ	1-424-220-11	TRANSFORMER, LINE FILTER
		(KV-27V26/27V36/29V22M/29V66M/29V76M)
T602 Δ	1-426-717-11	TRANSFORMER, LINE FILTER (LFT) (KV-29V36C)
T603 Δ	1-427-864-11	TRANSFORMER, CONVERTER (PRT)
T605 Δ	1-429-415-11	TRANSFORMER, CONVERTER (PIT)

THERMISTOR

THP601 Δ	1-809-539-11	THERMISTOR, POSITIVE
		(KV-27V26/27V36/29V22M/29V66M/29V76M)
THP601 Δ	1-809-827-11	THERMISTOR, POSITIVE (KV-29V36C)

VARISTOR

VDR601	1-810-974-21	VARISTOR
--------	--------------	----------



- * A-1331-549-A C BOARD, MOUNTED
- 4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C1765	1-102-116-00	CERAMIC	680PF	10%	50V
C1766	1-102-117-00	CERAMIC	820PF	10%	50V
C1767	1-102-116-00	CERAMIC	680PF	10%	50V
C1775	1-102-116-00	CERAMIC	680PF	10%	50V
C1776	1-102-117-00	CERAMIC	820PF	10%	50V
C1777	1-102-116-00	CERAMIC	680PF	10%	50V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C1785	1-102-116-00	CERAMIC	680PF 10% 50V
C1786	1-102-117-00	CERAMIC	820PF 10% 50V
C1787	1-102-116-00	CERAMIC	680PF 10% 50V
C1790	1-102-129-00	CERAMIC	0.01MF 10% 50V
C1791	1-126-933-11	ELECT	100MF 20% 16V
C1793	1-107-651-11	ELECT	4.7MF 20% 250V
C1795	1-102-074-00	CERAMIC	0.001MF 10% 50V
C1797	1-106-375-12	MYLAR	0.022MF 99% 200V
C1798	1-106-375-12	MYLAR	0.022MF 99% 200V
C1799	1-162-114-00	CERAMIC	0.0047MF 2KV

CONNECTOR

CN1761*	1-564-509-11	PLUG, CONNECTOR 6P
CN1764*	1-564-507-11	PLUG, CONNECTOR 4P
CN1765	1-695-915-11	TAB (CONTACT)
CN1766	1-695-915-11	TAB (CONTACT)

DIODE

D1761	8-719-991-33	DIODE 1SS133T-77
D1762	8-719-991-33	DIODE 1SS133T-77
D1763	8-719-991-33	DIODE 1SS133T-77
D1771	8-719-991-33	DIODE 1SS133T-77
D1772	8-719-991-33	DIODE 1SS133T-77
D1773	8-719-991-33	DIODE 1SS133T-77
D1781	8-719-991-33	DIODE 1SS133T-77
D1782	8-719-991-33	DIODE 1SS133T-77
D1783	8-719-991-33	DIODE 1SS133T-77
D1790	8-719-991-33	DIODE 1SS133T-77
D1792	8-719-983-14	DIODE MTZJ-T-77-3.9

JACK

J1761 Δ	1-251-388-11	SOCKET, CRT
----------------	--------------	-------------

COIL

L1790	1-410-667-31	INDUCTOR	22UH
-------	--------------	----------	------

TRANSISTOR

Q1761	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q1762	8-729-326-11	TRANSISTOR 2SC2611
Q1763	8-729-200-17	TRANSISTOR 2SA1091-O
Q1771	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q1772	8-729-326-11	TRANSISTOR 2SC2611
Q1773	8-729-200-17	TRANSISTOR 2SA1091-O
Q1781	8-729-119-78	TRANSISTOR 2SC2785-HFE
Q1782	8-729-326-11	TRANSISTOR 2SC2611
Q1783	8-729-200-17	TRANSISTOR 2SA1091-O
Q1790	8-729-119-76	TRANSISTOR 2SA1175-HFE

Note:

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK
<u>RESISTOR</u>			
R1760	1-260-105-11	CARBON	3.3K 5% 1/2W
R1761	1-247-807-31	CARBON	100 5% 1/4W
R1763	1-249-409-11	CARBON	220 5% 1/4W F
R1764 Δ	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
R1765	1-249-411-11	CARBON	330 5% 1/4W
R1766	1-249-393-11	CARBON	10 5% 1/4W
R1767	1-249-429-11	CARBON	10K 5% 1/4W
R1768	1-249-411-11	CARBON	330 5% 1/4W
R1770	1-260-105-11	CARBON	3.3K 5% 1/2W
R1771	1-247-807-31	CARBON	100 5% 1/4W
R1773	1-249-409-11	CARBON	220 5% 1/4W F
R1774 Δ	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
R1775	1-249-407-11	CARBON	150 5% 1/4W
R1776	1-249-393-11	CARBON	10 5% 1/4W
R1777	1-249-429-11	CARBON	10K 5% 1/4W
R1780	1-260-105-11	CARBON	3.3K 5% 1/2W
R1781	1-247-807-31	CARBON	100 5% 1/4W
R1783	1-249-409-11	CARBON	220 5% 1/4W F
R1784 Δ	1-216-486-00	METAL OXIDE	8.2K 5% 3W F
R1785	1-249-407-11	CARBON	150 5% 1/4W
R1786	1-249-393-11	CARBON	10 5% 1/4W
R1787	1-249-429-11	CARBON	10K 5% 1/4W
R1789	1-249-437-11	CARBON	47K 5% 1/4W
R1792	1-247-815-91	CARBON	220 5% 1/4W
R1793	1-247-863-91	CARBON	22K 5% 1/4W
R1794	1-249-417-11	CARBON	1K 5% 1/4W
R1795	1-260-087-11	CARBON	100 5% 1/2W
R1796 Δ	1-216-374-00	METAL OXIDE	2.7 5% 2W F
R1797	1-260-123-11	CARBON	100K 5% 1/2W

WB

* A-1372-225-A WB BOARD, MOUNTED
(KV-27V36/29V36C/29V76M)

4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C2941	1-126-935-11	ELECT	470MF	20%	16V
C2944	1-164-232-11	CERAMIC CHIP	0.01MF	10%	50V
C2946	1-126-933-11	ELECT	100MF	20%	16V
C2949	1-161-830-00	CERAMIC	0.0047MF		500V
C2950	1-126-933-11	ELECT	100MF	20%	16V
C2951	1-107-638-11	ELECT	33MF	20%	160V
C2952	1-104-999-11	MYLAR	0.1MF	10%	200V
C2953	1-106-383-00	MYLAR	0.047MF	10%	200V

REF.NO.	PART NO.	DESCRIPTION	REMARK
C2954	1-137-364-11	FILM	0.001MF 5% 50V
C2955	1-107-667-11	ELECT	2.2MF 20% 160V
C2956	1-137-364-11	FILM	0.001MF 5% 50V
C2957	1-106-383-00	MYLAR	0.047MF 10% 200V
C2958	1-126-933-11	ELECT	100MF 20% 16V
C2975	1-163-001-11	CERAMIC CHIP	220PF 10% 50V

CONNECTOR

CN2941* 1-564-508-11 PLUG, CONNECTOR 5P

DIODE

D2941	8-719-991-33	DIODE 1SS133T-77
D2946	8-719-110-88	DIODE RD39ESB2
D2947	8-719-110-88	DIODE RD39ESB2

COIL

L2942	1-215-863-11	METAL OXIDE	100 5% 1W F
-------	--------------	-------------	-------------

TRANSISTOR

Q2943	8-729-422-27	TRANSISTOR 2SD601A-Q
Q2944	8-729-422-27	TRANSISTOR 2SD601A-Q
Q2945	8-729-422-27	TRANSISTOR 2SD601A-Q
Q2946	8-729-017-05	TRANSISTOR 2SA1837
Q2947	8-729-017-06	TRANSISTOR 2SC4793
Q2965	8-729-422-27	TRANSISTOR 2SD601A-Q
Q2966	8-729-216-22	TRANSISTOR 2SA1162-G

RESISTOR

R2943	1-216-025-91	METAL GLAZE	100 5% 1/10W
R2948	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R2949	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R2950	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R2951	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R2952	1-216-037-00	METAL GLAZE	330 5% 1/10W
R2953	1-216-021-00	METAL GLAZE	68 5% 1/10W
R2954	1-216-033-00	METAL GLAZE	220 5% 1/10W
R2955	1-216-047-91	METAL GLAZE	820 5% 1/10W
R2956	1-216-295-91	CONDUCTOR, CHIP	(2012)
R2957	1-216-073-00	METAL GLAZE	10K 5% 1/10W
R2958	1-216-295-91	CONDUCTOR, CHIP	(2012)
R2959	1-216-021-00	METAL GLAZE	68 5% 1/10W
R2979	1-216-017-91	METAL GLAZE	47 5% 1/10W
R4941	1-260-311-11	CARBON	39 5% 1/2W
R4942	1-249-384-11	CARBON	1.8 5% 1/4W F
R4943	1-249-414-11	CARBON	560 5% 1/4W F
R4944	1-249-432-11	CARBON	18K 5% 1/4W
R4945	1-216-476-11	METAL OXIDE	180 5% 3W F
R4946	1-249-417-11	CARBON	1K 5% 1/4W F
R4947	1-249-432-11	CARBON	18K 5% 1/4W
R4948	1-249-414-11	CARBON	560 5% 1/4W



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R4949	1-249-384-11	CARBON	1.8 5% 1/4W F
R4950	1-249-400-11	CARBON	39 5% 1/4W F

HV

- * A-1372-337-A HV BOARD, COMPLETE
(KV-27V26/29V22M/29V66M)
- * A-1372-346-A HV BOARD, COMPLETE
(KV-27V36/29V36C/29V76M)

CAPACITOR

C2068	1-104-665-11	ELECT	100MF	20%	25V
C2070	1-165-319-11	CERAMIC CHIP	0.1MF		50V
C2071	1-126-959-11	ELECT	0.47MF	20%	50V
					(KV-27V36/29V36C/29V76M)
C2233	1-136-161-00	FILM	0.047MF	5%	50V
C2234	1-126-960-11	ELECT	1MF	20%	50V
C2235	1-126-960-11	ELECT	1MF	20%	50V
C2236	1-126-933-11	ELECT	100MF	20%	16V

CONNECTOR

CN2001	1-564-524-11	PLUG, CONNECTOR 9P			
CN2002*	1-564-518-11	PLUG, CONNECTOR 3P			
					(KV-27V36/29V36C/29V76M)
CN2231	1-564-523-11	PLUG, CONNECTOR 8P			

DIODE

D2006	1-810-039-11	LED UNIT			
D2236	8-719-110-17	DIODE RD10ESB2			

IC

IC2003	8-742-014-10	HYB IC SBX1981-51			
IC2004	8-749-012-12	IC IS474			

JACK

J2231	1-691-110-11	JACK, PIN 3P			
-------	--------------	--------------	--	--	--

TRANSISTOR

Q2008	8-729-216-22	TRANSISTOR 2SA1162-G			
Q2009	8-729-422-27	TRANSISTOR 2SD601A-Q			

RESISTOR

R2009	1-216-033-00	METAL GLAZE	220	5%	1/10W
R2010	1-216-033-00	METAL GLAZE	220	5%	1/10W
R2011	1-216-025-91	METAL GLAZE	100	5%	1/10W
R2012	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R2013	1-216-105-91	METAL GLAZE	220K	5%	1/10W
R2014	1-216-033-00	METAL GLAZE	220	5%	1/10W
R2015	1-247-807-31	CARBON	100	5%	1/4W

REF.NO.	PART NO.	DESCRIPTION	REMARK
R2016	1-216-133-00	METAL GLAZE	3.3M 5% 1/10W
R2059	1-216-047-91	METAL GLAZE	820 5% 1/10W
			(KV-27V26/29V22MM/29V66M)
R2060	1-216-049-91	METAL GLAZE	1K 5% 1/10W
			(KV-27V26/29V22MM/29V66M)
R2061	1-216-055-00	METAL GLAZE	1.8K 5% 1/10W
			(KV-27V26/29V22MM/29V66M)
R2062	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
			(KV-27V26/29V22MM/29V66M)
R2063	1-216-073-00	METAL GLAZE	10K 5% 1/10W
			(KV-27V26/29V22MM/29V66M)
R2235	1-216-022-00	METAL GLAZE	75 5% 1/10W
R2236	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R2237	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R2238	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R2239	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W

SWITCH

S2001	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2002	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2003	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2004	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2005	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2006	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)
S2007	1-692-431-21	SWITCH, TACTILE	(KV-27V26/29V22MM/29V66M)

K

- * A-1380-518-A K BOARD, MOUNTED
(KV-27V36/29V36C/29V76M)

4-382-854-11 SCREW (M3X10), P, SW (+)

CAPACITOR

C1462	1-126-961-11	ELECT	2.2MF	20%	50V
C1463	1-126-961-11	ELECT	2.2MF	20%	50V
C1464	1-126-969-11	ELECT	220MF	20%	50V
C1465	1-104-664-11	ELECT	47MF	20%	25V
C1466	1-126-969-11	ELECT	220MF	20%	50V
C1467	1-126-961-11	ELECT	2.2MF	20%	50V
C1469	1-136-173-00	FILM	0.47MF	5%	50V
C1470	1-136-169-00	FILM	0.22MF	5%	50V
C1471	1-136-169-00	FILM	0.22MF	5%	50V
C1472	1-128-548-11	ELECT	4700MF	20%	25V
C1473	1-126-943-11	ELECT	2200MF	20%	25V
C1474	1-126-943-11	ELECT	2200MF	20%	25V
C1475	1-128-548-11	ELECT	4700MF	20%	25V
C1476	1-124-564-11	ELECT	4700MF	20%	25V

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

K SC UV

REF.NO. PART NO. DESCRIPTION REMARK

CONNECTOR

CN1461* 1-564-510-11 PLUG, CONNECTOR 7P
CN1462* 1-564-507-11 PLUG, CONNECTOR 4P

IC

IC1461 8-759-980-43 IC TDA2009A

IC LINK

PS1461 Δ 1-532-984-11 LINK, IC 2A/90V

TRANSISTOR

Q1461 8-729-422-27 TRANSISTOR 2SD601A-Q
Q1462 8-729-216-22 TRANSISTOR 2SA1162-G

RESISTOR

R1461	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R1462	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R1463	1-249-435-11	CARBON	33K	5%	1/4W
R1464	1-208-775-11	METAL GLAZE	510	0.50%	1/10W
R1465	1-216-011-00	METAL GLAZE	27	5%	1/10W
R1467	1-216-011-00	METAL GLAZE	27	5%	1/10W
R1468	1-208-775-11	METAL GLAZE	510	0.50%	1/10W
R1469	1-216-011-00	METAL GLAZE	27	5%	1/10W
R1471	1-216-011-00	METAL GLAZE	27	5%	1/10W
R1472	1-249-418-11	CARBON	1.2K	5%	1/4W F
R1473	1-249-413-11	CARBON	470	5%	1/4W
R1474	1-249-441-11	CARBON	100K	5%	1/4W
R1475	1-249-430-11	CARBON	12K	5%	1/4W
R1476	1-249-430-11	CARBON	12K	5%	1/4W
R1477	1-249-385-11	CARBON	2.2	5%	1/4W F
R1478	1-249-418-11	CARBON	1.2K	5%	1/4W F
R1479	1-249-385-11	CARBON	2.2	5%	1/4W F
R1480	1-249-421-11	CARBON	2.2K	5%	1/4W
R1481	1-249-421-11	CARBON	2.2K	5%	1/4W
R1482	1-249-421-11	CARBON	2.2K	5%	1/4W
R1483	1-249-421-11	CARBON	2.2K	5%	1/4W

SC

* A-1390-585-A SC BOARD, MOUNTED (EXCEPT KV-29V22M)

CONNECTOR

CN104 1-573-978-21 CONNECTOR, BOARD TO BOARD 11P
CN105 1-573-978-21 CONNECTOR, BOARD TO BOARD 11P

REF.NO. PART NO. DESCRIPTION REMARK

UV

* A-1394-856-A UV BOARD, COMPLETE (KV-29V22M)
* A-1394-857-A UV BOARD, COMPLETE (KV-27V26/29V66M)
* A-1394-859-A UV BOARD, COMPLETE (KV-27V36/29V36C/29V76M)

CAPACITOR

C151	1-126-960-11	ELECT	1MF	20%	50V
C152	1-126-960-11	ELECT	1MF	20%	50V
C153	1-164-489-11	CERAMIC CHIP	0.22MF	10%	16V
C154	1-164-489-11	CERAMIC CHIP	0.22MF	10%	16V
C156	1-164-182-11	CERAMIC CHIP	0.0033MF	10%	50V
C157	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C158	1-163-034-00	CERAMIC CHIP	0.033MF		50V
C159	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	50V
C160	1-126-959-11	ELECT	0.47MF	20%	50V
C161	1-126-960-11	ELECT	1MF	20%	50V
C162	1-126-960-11	ELECT	1MF	20%	50V
C163	1-165-319-11	CERAMIC CHIP	0.1MF		50V
C164	1-165-319-11	CERAMIC CHIP	0.1MF		50V
C165	1-165-319-11	CERAMIC CHIP	0.1MF		50V
C166	1-165-319-11	CERAMIC CHIP	0.1MF		50V
C167	1-126-933-11	ELECT	100MF	20%	16V
C168	1-126-964-11	ELECT	10MF	20%	50V
C170	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C231	1-163-031-11	CERAMIC CHIP	0.01MF		50V
C232	1-136-161-00	FILM	0.047MF	5%	50V
C233	1-136-161-00	FILM	0.047MF	5%	50V
C234	1-126-960-11	ELECT	1MF	20%	50V
C235	1-126-960-11	ELECT	1MF	20%	50V
C236	1-136-161-00	FILM	0.047MF	5%	50V
					(KV-27V26/27V36/29V36/29V66M/29V76M)
C237	1-126-960-11	ELECT	1MF	20%	50V
					(KV-27V26/27V36/29V36/29V66M/29V76M)
C238	1-126-960-11	ELECT	1MF	20%	50V
					(KV-27V26/27V36/29V36/29V66M/29V76M)
C241	1-126-941-11	ELECT	470MF	20%	25V
C242	1-126-959-11	ELECT	0.47MF	20%	50V
C244	1-126-959-11	ELECT	0.47MF	20%	50V
C245	1-126-941-11	ELECT	470MF	20%	25V
					(KV-27V36/29V36C/29V76M)
C246	1-126-959-11	ELECT	0.47MF	20%	50V
					(KV-27V36/29V36C/29V76M)
C247	1-126-959-11	ELECT	0.47MF	20%	50V
					(KV-27V36/29V36C/29V76M)
C261	1-136-161-00	FILM	0.047MF	5%	50V
					(KV-27V36/29V36C/29V76M)
C262	1-104-664-11	ELECT	47MF	20%	25V
C263	1-136-161-00	FILM	0.047MF	5%	50V



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
C264	1-126-941-11	ELECT 470MF 20% 25V (KV-27V26/27V36/29V36C/29V66M/29V76M)	
C264	1-126-933-11	ELECT 100MF 20% 16V (KV-29V22M)	
C265	1-104-664-11	ELECT 47MF 20% 25V (KV-27V26/27V36/29V36C/29V66M/29V76M)	
C265	1-107-701-11	ELECT 47MF 20% 16V (KV-29V22M)	
C266	1-126-960-11	ELECT 1MF 20% 50V (KV-27V36/29V36C/29V76M)	
C267	1-126-960-11	ELECT 1MF 20% 50V (KV-27V36/29V36C/29V76M)	
C270	1-126-960-11	ELECT 1MF 20% 50V	
C271	1-126-960-11	ELECT 1MF 20% 50V	
C273	1-136-165-00	FILM 0.1MF 5% 50V	
C274	1-163-031-11	CERAMIC CHIP 0.01MF 50V	
C275	1-104-664-11	ELECT 47MF 20% 25V	
C276	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	
C301	1-126-933-11	ELECT 100MF 20% 16V (KV-29V22M)	
C301	1-126-935-11	ELECT 470MF 20% 16V (KV-27V26/27V36/29V36C/29V66M/29V76M)	

FILTER BLOCK

CM301	1-473-548-11	FILTER BLOCK, COMB (KV-29V22M)	
CM301	1-467-554-21	FILTER BLOCK, COMB (KV-27V26/27V36/29V36C/29V66M/29V76M)	

CONNECTOR

CN261	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P (KV-27V26/27V36/29V36C/29V66M/29V76M)	
CN262	1-573-301-21	CONNECTOR, BOARD TO BOARD 20P	
CN263 *	1-564-506-11	PLUG, CONNECTOR 3P (KV-27V26/27V36/29V36C/29V66M/29V76M)	
CN264	1-573-979-21	CONNECTOR, BOARD TO BOARD 11P	

DIODE

D231	8-719-110-17	DIODE RD10ESB2	
D232	8-719-110-17	DIODE RD10ESB2	
D233	8-719-110-17	DIODE RD10ESB2	
D234	8-719-110-17	DIODE RD10ESB2	
D235	8-719-110-17	DIODE RD10ESB2	
D236	8-719-110-17	DIODE RD10ESB2	
D237	8-719-981-99	DIODE MTZJ-T-77-3.3	
D238	8-719-981-99	DIODE MTZJ-T-77-3.3	
D239	8-719-981-99	DIODE MTZJ-T-77-3.3 (KV-27V36/29V36C/29V76M)	
D240	8-719-110-17	DIODE RD10ESB2 (KV-27V26/27V36/29V36C/29V66M/29V76M)	
D241	8-719-110-17	DIODE RD10ESB2 (KV-27V26/27V36/29V36C/29V66M/29V76M)	

REF.NO.	PART NO.	DESCRIPTION	REMARK
D242	8-719-110-17	DIODE RD10ESB2 (KV-27V26/27V36/29V36C/29V66M/29V76M)	
D243	8-719-110-17	DIODE RD10ESB2	
D244	8-719-110-17	DIODE RD10ESB2	
D245	8-719-981-99	DIODE MTZJ-T-77-3.3 (KV-27V36/29V36C/29V76M)	
D246	8-719-981-99	DIODE MTZJ-T-77-3.3 (KV-27V36/29V36C/29V76M)	
D264	8-719-110-17	DIODE RD10ESB2	
D265	8-719-110-17	DIODE RD10ESB2	
D902	8-719-921-54	DIODE MTZJ-6.2B (KV-27V26/27V36/29V36C/29V66M/29V76M)	

IC

IC151	8-759-700-44	IC NJM2902M	
IC152	8-759-700-44	IC NJM2902M	
IC153	8-759-100-96	IC UPC4558G2	
IC154	8-759-068-07	IC CD4052BCN	
IC261	8-759-366-78	IC MM1313AD	

JACK

J231	1-750-515-11	TERMINAL BLOCK, S 3P	
J232	1-750-517-11	JACK BLOCK, PIN 3P (KV-27V26/27V36/29V36C/29V66M/29V76M)	
J233	1-750-516-11	JACK BLOCK, PIN 2P	
J234	1-750-517-11	JACK BLOCK, PIN 3P	
J235	1-750-517-11	JACK BLOCK, PIN 3P (KV-27V36/29V36C/29V76M)	
J902	1-764-143-11	JACK 3P (KV-27V26/27V36/29V36C/29V66M/29V76M)	
J903	1-764-143-11	JACK 3P (KV-27V26/27V36/29V36C/29V66M/29V76M)	
J904	1-764-143-11	JACK 3P (KV-27V26/27V36/29V36C/29V66M/29V76M)	

CHIP CONDUCTOR

JR151	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR152	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR201	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR204	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR205	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR206	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR208	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR209	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR210	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR211	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR212	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR213	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR214	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR215	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR216	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR217	1-216-295-91	CONDUCTOR, CHIP (2012)	
JR218	1-216-295-91	CONDUCTOR, CHIP (2012)	

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK		
JR219	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR220	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR221	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR222	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR223	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR226	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR228	1-216-295-91	CONDUCTOR, CHIP (2012)			
JR233	1-216-295-91	CONDUCTOR, CHIP (2012) (KV-29V22M)			
JUMPER					
JW226	1-249-389-11	CARBON	4.7	5%	1/4W
JW240	1-249-385-11	CARBON	2.2	5%	1/4W
TRANSISTOR					
Q231	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q232	8-729-422-27	TRANSISTOR 2SD601A-Q			(KV-27V36/29V36C/29V76M)
Q233	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q234	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q235	8-729-422-27	TRANSISTOR 2SD601A-Q			(KV-27V36/29V36C/29V76M)
Q236	8-729-422-27	TRANSISTOR 2SD601A-Q			(KV-27V36/29V36C/29V76M)
Q237	8-729-216-22	TRANSISTOR 2SA1162-G			
Q238	8-729-216-22	TRANSISTOR 2SA1162-G			
Q239	8-729-216-22	TRANSISTOR 2SA1162-G			
Q240	8-729-216-22	TRANSISTOR 2SA1162-G			(KV-27V36/29V36C/29V76M)
Q241	8-729-216-22	TRANSISTOR 2SA1162-G			(KV-27V36/29V36C/29V76M)
Q242	8-729-216-22	TRANSISTOR 2SA1162-G			(KV-27V36/29V36C/29V76M)
Q243	8-729-216-22	TRANSISTOR 2SA1162-G			
Q261	8-729-422-27	TRANSISTOR 2SD601A-Q			(KV-27V36/29V36C/29V76M)
Q262	8-729-422-27	TRANSISTOR 2SD601A-Q			
Q263	8-729-216-22	TRANSISTOR 2SA1162-G			
Q265	8-729-216-22	TRANSISTOR 2SA1162-G			
RESISTOR					
R151	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R152	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R153	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R154	1-216-085-00	METAL GLAZE	33K	5%	1/10W
R155	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R156	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R157	1-216-079-00	METAL GLAZE	18K	5%	1/10W
R158	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R159	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R160	1-216-079-00	METAL GLAZE	18K	5%	1/10W

REF.NO.	PART NO.	DESCRIPTION	REMARK		
R161	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R162	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R163	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R164	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R165	1-216-073-00	METAL GLAZE	10K	5%	1/10W
R166	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R167	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R168	1-216-077-00	METAL GLAZE	15K	5%	1/10W
R169	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R170	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R171	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R172	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R173	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R174	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R175	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R176	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R177	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R178	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R179	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R180	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R181	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R183	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R184	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R185	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R186	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R187	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R188	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R189	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R190	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R191	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R192	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W
R193	1-216-075-00	METAL GLAZE	12K	5%	1/10W
R194	1-216-099-00	METAL GLAZE	120K	5%	1/10W
R195	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R196	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R197	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R198	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R199	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R200	1-216-081-00	METAL GLAZE	22K	5%	1/10W
R201	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W
R202	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R203	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R204	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W
R206	1-216-049-91	METAL GLAZE	1K	5%	1/10W
(KV-27V36/29V36C/29V76M)					
R207	1-216-295-91	CONDUCTOR, CHIP (2012)			(KV-27V36/29V36C/29V76M)
R208	1-216-049-91	METAL GLAZE	1K	5%	1/10W
(KV-27V36/29V36C/29V76M)					



Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	REMARK
R209	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W (KV-27V36/29V36C/29V76M)
R210	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W (KV-27V36/29V36C/29V76M)
R212	1-249-440-11	CARBON	82K 5% 1/4W
R213	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R214	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R215	1-249-413-11	CARBON	470 5% 1/4W
R216	1-216-025-91	METAL GLAZE	100 5% 1/10W
R217	1-216-025-91	METAL GLAZE	100 5% 1/10W
R218	1-216-025-91	METAL GLAZE	100 5% 1/10W
R219	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (KV-27V36/29V36C/29V76M)
R220	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (KV-27V36/29V36C/29V76M)
R221	1-249-413-11	CARBON	470 5% 1/4W (KV-27V36/29V36C/29V76M)
R222	1-216-025-91	METAL GLAZE	100 5% 1/10W (KV-27V36/29V36C/29V76M)
R223	1-216-025-91	METAL GLAZE	100 5% 1/10W (KV-27V36/29V36C/29V76M)
R224	1-216-025-91	METAL GLAZE	100 5% 1/10W (KV-27V36/29V36C/29V76M)
R225	1-247-815-91	CARBON	220 5% 1/4W
R226	1-247-815-91	CARBON	220 5% 1/4W
R227	1-249-440-11	CARBON	82K 5% 1/4W
R228	1-216-033-00	METAL GLAZE	220 5% 1/10W
R229	1-216-025-91	METAL GLAZE	100 5% 1/10W
R230	1-216-033-00	METAL GLAZE	220 5% 1/10W
R231	1-216-022-00	METAL GLAZE	75 5% 1/10W
R232	1-216-022-00	METAL GLAZE	75 5% 1/10W
R233	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R234	1-216-022-00	METAL GLAZE	75 5% 1/10W
R235	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R236	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R237	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R238	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R239	1-216-022-00	METAL GLAZE	75 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R240	1-216-113-00	METAL GLAZE	470K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R241	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R242	1-216-113-00	METAL GLAZE	470K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R243	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R244	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R245	1-249-417-11	CARBON	1K 5% 1/4W
R246	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R247	1-249-417-11	CARBON	1K 5% 1/4W

REF.NO.	PART NO.	DESCRIPTION	REMARK
R248	1-216-021-00	METAL GLAZE	68 5% 1/10W
R249	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R250	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R251	1-216-113-00	METAL GLAZE	470K 5% 1/10W
R252	1-216-019-00	METAL GLAZE	56 5% 1/10W (KV-27V36/29V36C/29V76M)
R253	1-216-113-00	METAL GLAZE	470K 5% 1/10W (KV-27V36/29V36C/29V76M)
R254	1-216-113-00	METAL GLAZE	470K 5% 1/10W (KV-27V36/29V36C/29V76M)
R255	1-216-113-00	METAL GLAZE	470K 5% 1/10W (KV-27V36/29V36C/29V76M)
R256	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W
R258	1-216-069-00	METAL GLAZE	6.8K 5% 1/10W (KV-27V36/29V36C/29V76M)
R259	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R260	1-247-807-31	CARBON	100 5% 1/4W
R264	1-247-815-91	CARBON	220 5% 1/4W
R265	1-247-815-91	CARBON	220 5% 1/4W
R266	1-216-043-91	METAL GLAZE	560 5% 1/10W (KV-27V36/29V36C/29V76M)
R267	1-249-415-11	CARBON	680 5% 1/4W (KV-27V36/29V36C/29V76M)
R268	1-216-025-91	METAL GLAZE	100 5% 1/10W
R269	1-216-025-91	METAL GLAZE	100 5% 1/10W
R270	1-216-041-00	METAL GLAZE	470 5% 1/10W
R271	1-249-415-11	CARBON	680 5% 1/4W
R272	1-249-417-11	CARBON	1K 5% 1/4W
R274	1-249-413-11	CARBON	470 5% 1/4W
R275	1-249-425-11	CARBON	4.7K 5% 1/4W (KV-27V36/29V36C/29V76M)
R276	1-249-425-11	CARBON	4.7K 5% 1/4W (KV-27V36/29V36C/29V76M)
R277	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R278	1-249-413-11	CARBON	470 5% 1/4W (KV-27V36/29V36C/29V76M)
R279	1-216-025-91	METAL GLAZE	100 5% 1/10W
R280	1-216-033-00	METAL GLAZE	220 5% 1/10W
R281	1-216-033-00	METAL GLAZE	220 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)
R282	1-216-025-91	METAL GLAZE	100 5% 1/10W
R283	1-216-025-91	METAL GLAZE	100 5% 1/10W
R284	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R285	1-216-065-00	METAL GLAZE	4.7K 5% 1/10W
R286	1-216-049-91	METAL GLAZE	1K 5% 1/10W
R288	1-247-815-91	CARBON	220 5% 1/4W
R289	1-247-815-91	CARBON	220 5% 1/4W
R290	1-247-815-91	CARBON	220 5% 1/4W
R291	1-216-025-91	METAL GLAZE	100 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK
R292	1-216-025-91	METAL GLAZE 100 5% 1/10W (KV-29V22M)	
R293	1-216-025-91	METAL GLAZE 100 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R294	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R301	1-249-417-11	CARBON 1K 5% 1/4W	
R304	1-249-417-11	CARBON 1K 5% 1/4W	
R902	1-249-405-11	CARBON 100 5% 1/4W F (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R919	1-216-295-91	CONDUCTOR, CHIP (2012) (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R920	1-249-405-11	CARBON 100 5% 1/4W F (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R921	1-249-405-11	CARBON 100 5% 1/4W F (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R922	1-216-049-91	METAL GLAZE 1K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R923	1-216-049-91	METAL GLAZE 1K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R924	1-216-049-91	METAL GLAZE 1K 5% 1/10W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R925	1-215-433-00	METAL 3.3K 1% 1/4W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R926	1-215-433-00	METAL 3.3K 1% 1/4W (KV-27V26/27V36/29V36C/29V66M/29V76M)	
R1151	1-216-053-00	METAL GLAZE 1.5K 5% 1/10W	
R1152	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1153	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R1154	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1155	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R1156	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1157	1-216-073-00	METAL GLAZE 10K 5% 1/10W	
R1158	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R1159	1-216-065-00	METAL GLAZE 4.7K 5% 1/10W	
R1160	1-216-295-91	CONDUCTOR, CHIP (2012)	
R1161	1-216-295-91	CONDUCTOR, CHIP (2012)	
R1164	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1165	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1166	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1167	1-216-049-91	METAL GLAZE 1K 5% 1/10W	
R1168	1-216-049-91	METAL GLAZE 1K 5% 1/10W	

REF.NO.	PART NO.	DESCRIPTION	REMARK
MISCELLANEOUS			
Δ	1-406-726-81	COIL DEMAGNETIC (KV-29V36C)	
Δ	1-411-899-11	COIL DEMAGNETIC (except KV-29V36C)	
	1-452-032-00	MAGNET, DISC	
Δ	1-452-509-41	NECK ASSY, CRT (NA-308) (KV-27V36/29V36C/29V76M)	
	1-473-549-11	SWITCH BLOCK, CONTROL (KV-27V36/29V36C/29V76M)	
*	1-557-056-31	CABLE, P-P (KV-27V36/29V36C/29V76M)	
*	1-556-945-21	CABLE, P-P (KV-27V36/29V36C/29V76M)	
Δ	1-751-059-11	CORD POWER (WITH CONNECTOR) (except KV-29V36C)	
Δ	1-769-796-41	CORD POWER (WITH CONNECTOR) (KV-29V36C)	
	1-766-374-11	PLUG, F-PIN (KV-27V26/29V22M/29V66M)	
Δ	8-451-275-42	DEFLECTION YOKE (Y28PFA)	
*	4-052-905-01	V5/6 BRACKET (KV-27V36/29V36C/29V76M)	
	8-598-414-00	SWITCH, ANTENNA AS-2F (KV-27V36/29V36C/29V76M)	
Δ	8-733-848-05	CRT29PXD (SD-268/ECR) A68KZJ50X (KV-27V26/27V36/29V76M/29V22M/29V66M)	
Δ	8-733-849-05	CRT20PXD (SD-268) A68KZJ50X (KV-29V36C)	
Δ	1-453-207-11	TRANSFORMER ASSY, FLYBACK (NX-2609/XX4C)	

ACCESSORIES AND PACKING MATERIALS

	3-859-518-21	MANUAL, INSTRUCTION (KV-27V26/27V36(US))
	3-859-518-31	MANUAL, INSTRUCTION (KV-27V36 (CND))
	3-859-518-41	MANUAL, INSTRUCTION (KV-29V22M/29V36M/29V66M/29V76M)
*	4-049-757-11	BAG, PROTECTION
*	4-054-059-01	CUSHION (UPPER) (ASSY)
*	4-054-062-01	CUSHION (LOWER) (ASSY)
*	4-054-065-01	INDIVIDUAL CARTON (KV-27V26/27V36)
*	4-054-066-01	INDIVIDUAL CARTON (KV-29V22M/29V36C/29V66M/29V76M)

REMOTE COMMANDER

	1-473-748-31	REMOTE COMMANDER (RM-Y135A) (KV-29V22M only)
	1-473-750-41	REMOTE COMMANDER (RM-Y137A) (except KV-29V22M)
	4-978-977-01	LID, BATTERY COVER (for RM-Y135A/Y137A)

NOTES:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTES:

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

