

TOSHIBA

FILE NO. 050-200409A
SUPPLEMENT Revision 2

SERVICE MANUAL

COLOR TELEVISION

19A24

-SUMMARY-

This supplement serves as an update to the original 19A24 Service Manual, file number 050-200409. Please refer to this Supplement in conjunction with the original Service Manual when servicing this model.

TOSHIBA

TOSHIBA CORPORATION DIGITAL MEDIA NETWORK COMPANY
VISUAL MEDIA NETWORK DIV.
INTERNATIONAL CUSTOMER SERVICE & SUPPORT DEPT [11F-B]
TOSHIBA BLDG.
1-1, SHIBAURA 1-CHOME, MINATOKU, TOKYO 105-8001, JAPAN
FACSIMILE: (03)5444-9439 PHONE: (03)3457-3536

SERVICE INSTRUCTION

FILE NO. 050-200409A

DATE: Jul., 2004

RANK:

A

Product: COLOR TELEVISION

Model: 19A24 (for CANADA only)

Corrective action: Parts exchange.

Applicable units: 4761B2180 or younger.

TOSHIBA CORPORATION

KATSUMI TSUNODA
MANAGER
INTERNATIONAL CUSTOMER
SERVICE & SUPPORT DEPT

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	MFR'S VERSION A			MFR'S VERSION B			CAUSE
	PART NO.	DESCRIPTION	TSB P/N	PART NO.	DESCRIPTION	TSB P/N	
IC199	A3M213B015	IC S-24C02BDP-1A	AE001534	A3M216J015	IC S-24C02BDP-1A	AE005410	Delete the V-Chip.
PCB010	A3M217J010	MAIN PCB ASS'Y (VERSION A) TMC558A	AE003281	A3M216J010	MAIN PCB ASS'Y (VERSION B) TMC558A	AE005411	

All parts are interchangeable between version.

ORION ELECTRIC CO.,LTD.
41-1 IEHISA-CHO,TAKEFU-CITY,FUKUI 915-8555 JAPAN
FACSIMILE: (0778)24-5456 PHONE: (0778)23-0001

SERVICE INSTRUCTION

FILE NO. 053-200409B
DATE:Jan.,2005
RANK:

A

Product: COLOR TELEVISION
Model: 19A24 (for USA only)

Corrective reason: Performance improvement of IC

Corrective action: Parts exchange and memory data change.

Applicable units: 7961C6001 or younger.

ORION ELECTRIC CO.,LTD.

KATSUMI TSUNODA
MANAGER
INTERNATIONAL CUSTOMER
TECHNICAL ENGINEERING DEPT


IC199 memory data

NOTE FOR THE REPLACING OF MEMORY IC

Address	From	To	Cause
0A	00	0C	Change of MICON IC.

How to Change memory data

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 seconds.

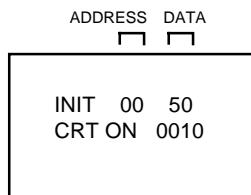

3. ADDRESS is now selected and should "blink". Using the VOL. +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using VOL. +/- button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	MFR'S VERSION A			MFR'S VERSION C			CAUSE
	PART NO.	DESCRIPTION	TSB P/N	PART NO.	DESCRIPTION	TSB P/N	
IC101	I56F07091B	IC OEC7091B	AE002802	I56F07091C	IC OEC7091C	AE005644	
IC199	A3M213B015	IC S-24C02BDP-1A	AE001534	A3M213B015	IC S-24C02BDP-1A	AE001534	
PCB010	A3M217J010	MAIN PCB ASS'Y (VERSION A) TMC558A	AE003281	A3M215S010	MAIN PCB ASS'Y (VERSION C) TMC558A	AE006151	

All parts are not interchangeable between version.

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN



TOSHIBA

FILE NO. 050-200409

SERVICE MANUAL

COLOR TELEVISION

19A24

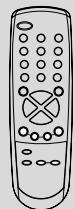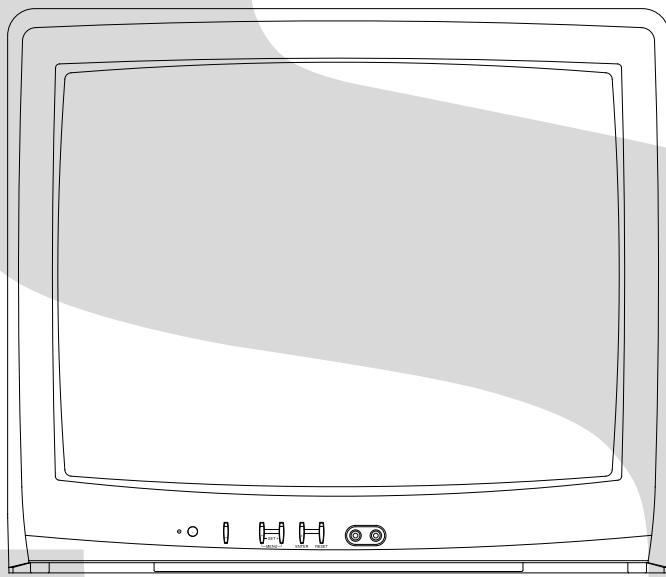

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal [Note 2] should be more than 1M ohm by using the 500V insulation resistance meter [Note 1].
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.

When replacing an IC's or transistors, use only specified silicon grease (YG6260M).

Remove all old silicon before applying new silicon.

CONTENTS

SERVICING NOTICES ON CHECKING	A1-1
HOW TO ORDER PARTS	A1-1
IMPORTANT	A1-1
CONTENTS	A2-1
GENERAL SPECIFICATIONS	A3-1~A3-5
DISASSEMBLY INSTRUCTIONS	
1.REMOVAL OF ANODE CAP	B1-1
2.REMOVAL AND INSTALLATION OF FLAT PACKAGE IC	B2-1, B2-2
SERVICE MODE LIST	C-1
CONFIRMATION OF HOURS USED	C-1
WHEN REPLACING EEPROM(MEMORY) IC	C-1
ELECTRICAL ADJUSTMENTS	D-1~D-4
BLOCK DIAGRAM	E-1, E-2
PRINTED CIRCUIT BOARDS	
MAIN/CRT	F-1~F-4
SCHEMATIC DIAGRAMS	
MICON/CHROMA/TUNER	G-1, G-2
TV POWER	G-3, G-4
DEFLECTION/CRT	G-5, G-6
SOUND/AV	G-7, G-8
WAVEFORMS	H-1, H-2
MECHANICAL EXPLODED VIEW	I-1, I-2
MECHANICAL REPLACEMENT PARTS LIST	J1-1, J1-2
ELECTRICAL REPLACEMENT PARTS LIST	J2-1~ J2-3

GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	19 inch / 480.0mmV
		CRT Type	Normal	
		Deflection	90 degree	
		Magnetic Field	BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		1 Speaker
		Position		Bottom
		Size		3 Inch
		Impedance		8 ohm
		Sound Output	MAX 10%(Typical)	1.5 W 1.0 W
		NTSC3.58+4.43	/PAL60Hz	No
G-2	Tuning System	Broadcasting System		US System M
		Tuner and Receive CH	System Destination	1 Tuner USA(W/ CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP) Sound(FS) FP-FS	45.75MHz 41.25MHz 4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		No
		Tuner Sound Muting		Yes
G-3	Power	Power Source	AC DC	120V AC 60Hz
		Power Consumption	at AC	73 W at AC 120 V 60 Hz 5 W at AC 120 V 60 Hz -- kWh/Year
			Stand by (at AC) Per Year	
		Protector	Power Fuse	Yes
G-4	Regulation	Safety Radiation X-Radiation		UL / CSA FCC / IC DHHS / HWC
G-5	Temperature	Operation Storage		+5oC ~ +40oC -20oC ~ +60oC
G-6	Operating Humidity			Less than 80% RH

GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Yes
		Menu Type	Character
		Picture	Yes
		Contrast	Yes
		Brightness	Yes
		Color	Yes
		Tint	Yes
		Sharpness	Yes
		Audio	No
		Bass	No
		Treble	No
		Balance	No
		BBE On/Off	No
		Stable Sound On/Off	No
		CH Set Up	Yes
		TV/CABLE(CATV)	Yes
		Auto CH Memory	Yes
		Add/ Delete	Yes
		Language	Yes
		V-chip	Yes
		Lock	Yes
		On Timer	Yes
		CH Label	No
		Favorite CH	No
		Color Stream DVD/DTV	No
		Control Level	Yes
		Volume	Yes
		Brightness	Yes
		Contrast	Yes
		Color	Yes
		Tint	Yes
		Sharpness	Yes
		Tuning	No
		Bass	No
		Treble	No
		Balance	No
		Back Light	No
		Stereo, Audio Output, SAP	No
		Video	Yes
		Color Stream	No
		Channel(TV/Cable)	Yes
		CH Label	No
		Game Timer	Yes
		Sleep Timer	Yes
		Sound Mute	Yes
		V-chip Rating	Yes
G-8	OSD Language	English French Spanish	
G-9	Clock and Timer	Sleep Timer	Max Time Step
			120 Min 10 Min
		On Timer	Program(On Timer)
		Wake Up Timer	No
Timer Back-up (at Power Off Mode)	more than -- Min Sec		

GENERAL SPECIFICATIONS

G-10	Remote Control	Unit	RC-EH
		Glow in Dark Remocon	Yes
		Format	Toshiba
		Custom Code	<u>40-BF h</u>
		Power Source	Voltage(D.C) UM size x pcs
		Total Keys	3V UM-4 x 2 pcs <u>27 Keys</u>
		Keys	Power 1 2 3 4 5 6 7 8 9 0 100
			Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes Yes
		CH Up	No
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		TV/Caption/Text	Yes
		CH1/CH2	Yes
		TV/Video(TV/AV)	Yes
		CH RTN/CH ENT(Quick View)	Yes
		Sleep	Yes
		RE Call(Call)	Yes
		Reset	Yes
		Menu	Yes
		Enter	Yes
		Mute	Yes
		Exit	No
		MTS(Audio Select)	No
		Set +	Yes
		Set -	Yes
	Multi Brand Keys	CH Up(VCR)	No
		CH Down(VCR)	No
		Pause/Still	No
		TV/VCR(VCR)	No
		Code	No
		FF	No
		Rew	No
		Rec	No
		Play	No
		Stop	No
		TV	No
		VCR	No
		Cable	No

GENERAL SPECIFICATIONS

G-11	Features	Auto Degauss	Yes
		Auto Shut Off	Yes
		Canal+	No
		CATV	Yes
		Anti-theft	No
		Rental	No
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	<u>USA,ORION Type</u>
		BBE	No
		Auto Search	No
		CH Allocation	No
		SAP	No
		Just Clock Function	No
		CH Label	No
		VM Circuit	No
		Full OSD	No
		Premiere	No
		Comb Filter	No
			<u>Lines</u>
		Auto CH Memory	Yes
		Hotel Lock	No
		Closed Caption	Yes
		Stable Sound	No
		FBT Leak Test Protect	Yes
		CH Lock	Yes
		Video Lock	Yes
		Game Timer (Max Time:120 Min)	Yes
		Stable Sound	No
		Energy Star	No
		Power On Memory	Yes
		Favorite CH	No
G-12	Accessories	Owner's Manual	Language W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
		Poles	
		Terminal	
		Loop Antenna	No
		Terminal	
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Facility List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes
		UM size x pcs	UM4 x 2
		OEM Brand	No
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	Yes
		ESP Card	No[From '04 MAR O/R]
		PTB Sheet	No
		300 ohm to 75 ohm Antenna Adapter	No

GENERAL SPECIFICATIONS

G-13	Interface	Front	Power	Yes
			System Select	No
			Main Power SW	No
			Sub Power	No
			Channel Up/Reset	Yes
		Rear	Channel Down/Enter	Yes
			Volume Up/Set Up	Yes
			Volume Down/Set Down	Yes
			MENU=Volume Up+Volume Down	Yes
			AC/DC	No
	Indicator	Rear	TV/CATV Selector	No
			Degauss	No
			Main Power SW	No
		Front	Power	Yes
			Stand-by	No
			On Timer	No
	Terminals	Front	Video Input	RCA
			Audio Input	RCA x 1
			Other Terminal	No
		Rear	Video Input(Rear1)	No
			Video Input(Rear2)	No
			Audio Input(Rear1)	No
			Audio Input(Rear2)	No
			Video Output	No
			Audio Output	No
			Euro Scart	No
			Color Stream	No
			Diversity	No
			Ext Speaker	No
			DC Jack 12V(Center +)	No
			VHF/UHF Antenna Input	F Type
			AC Outlet	No
G-14	Set Size	Approx. W x D x H (mm)	<u>488 x 465 x 416</u>	
G-15	Weight	Net (Approx.)	<u>17.5kg (38.6 lbs)</u>	
		Gross (Approx.)	<u>20.0kg (44.1lbs)</u>	
G-16	Carton	Master Carton	Content	No
			Material	---- Sets
			Dimensions W x D x H(mm)	<u>-- x -- x --</u>
			Description of Origin	No
			Gift Box	Yes
			Material	Double/Brown
			Dimensions W x D x H(mm)	<u>546 x 526 x 472</u>
			Design	As per Buyer's
			Description of Origin	Yes
			Drop Test	Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces
			Height (cm)	60 (ORION SPEC:46)
			Container Stuffing	<u>436</u> Sets/40' container
	Cabinet Material	Cabinet	Cabinet Front	PS 94V0 DE CABROM
			Cabinet Rear	PS 94V0 DE CABROM
		PCB	Non-Halogen Demand	No
			Eyelet Demand	Yes
G-18	Environment	Pb Free	Lead-free Solder	No
		Cd Free		No

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

- * After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- * Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.

A cracking noise will be heard as the voltage is discharged.

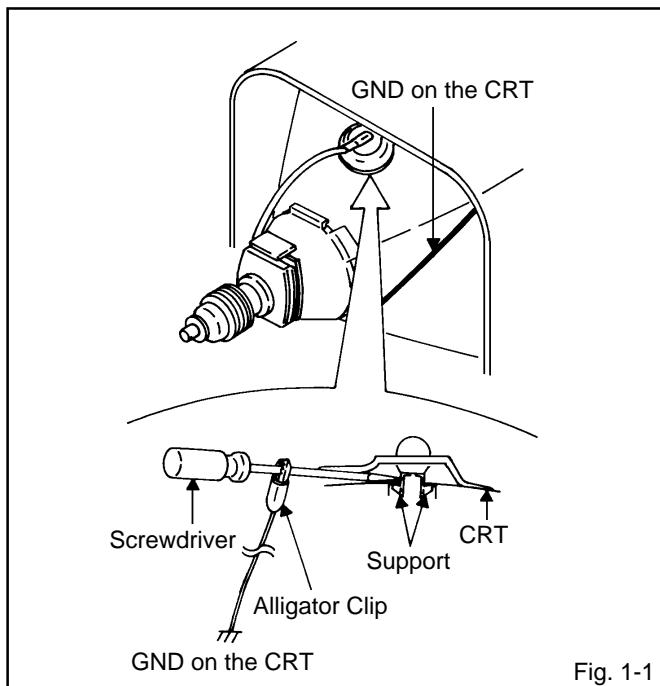


Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

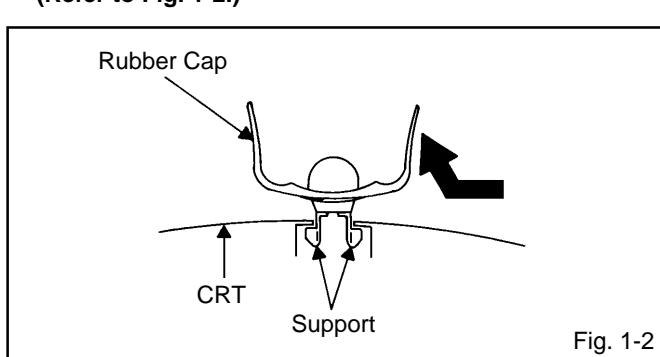


Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

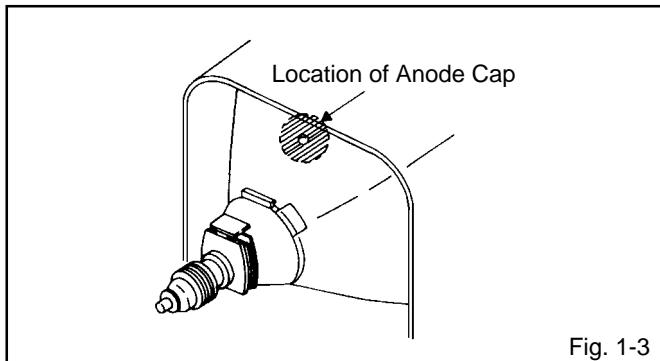


Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

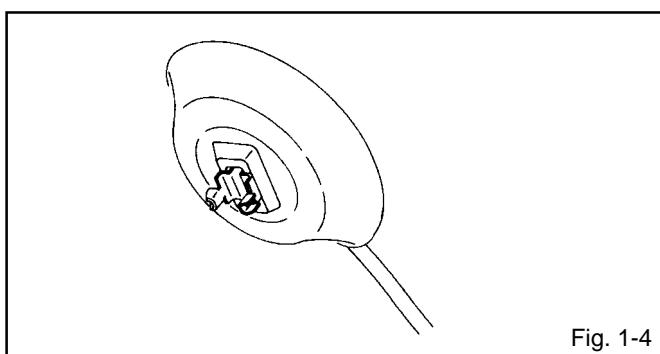


Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5.**

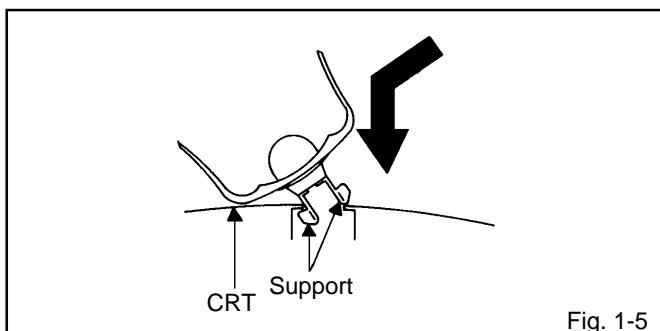


Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS


2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

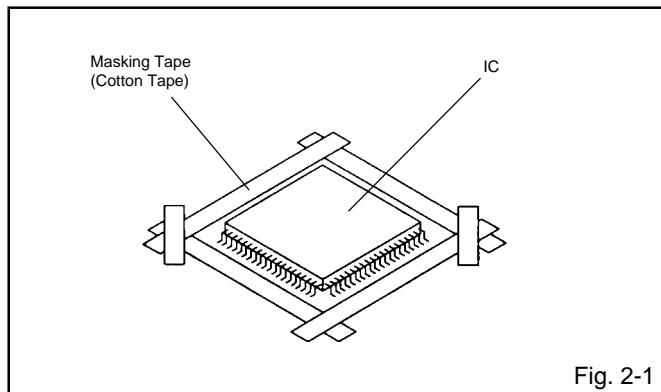

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

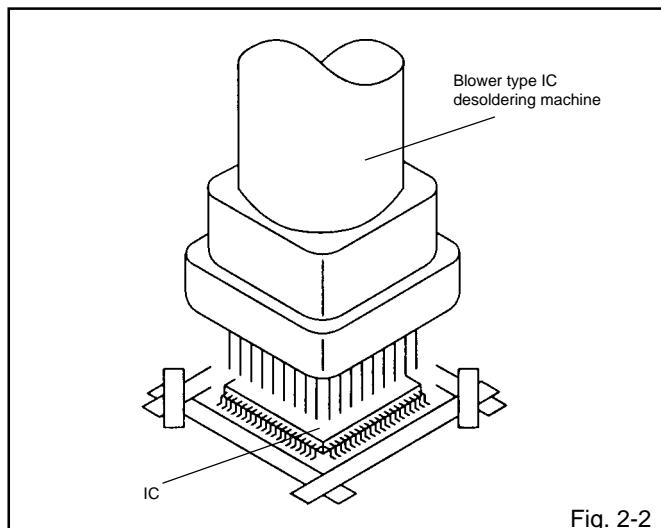

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

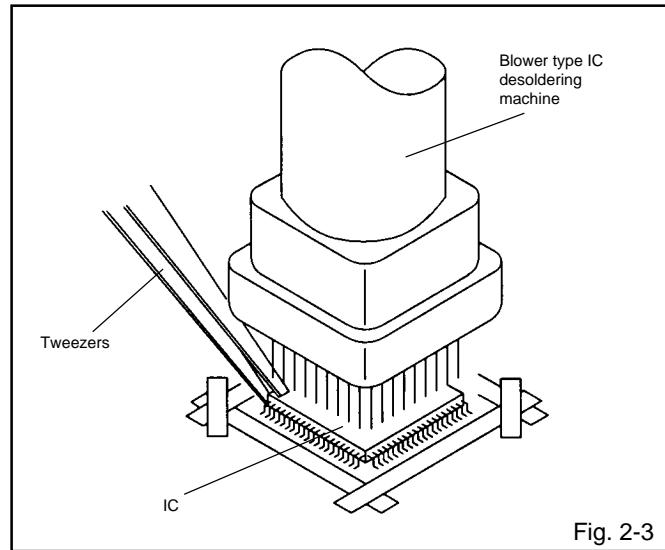

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

NOTE

Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

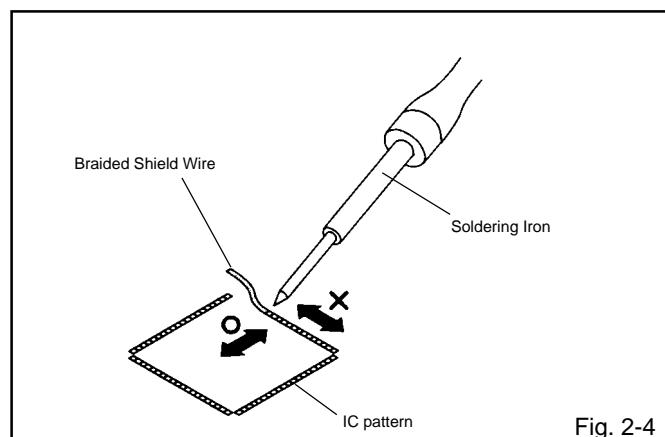

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily.
(Refer to Fig. 2-5.)

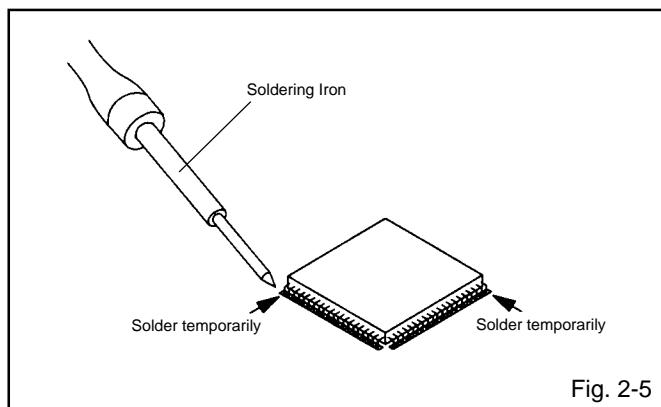


Fig. 2-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads.
(Refer to Fig. 2-6.)

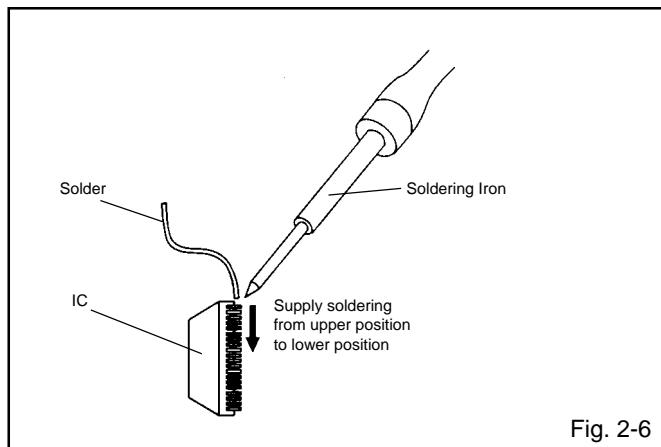


Fig. 2-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

NOTE

Do not absorb the solder to excess.

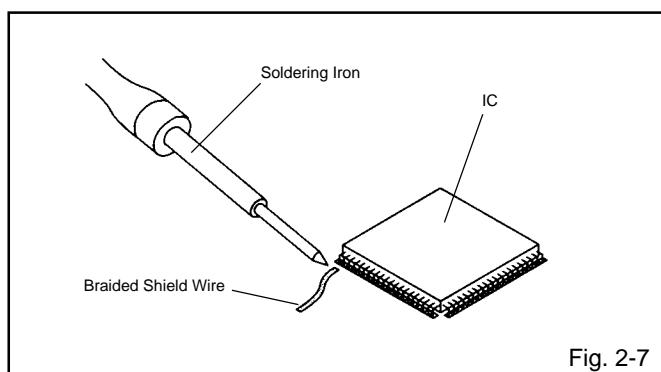


Fig. 2-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

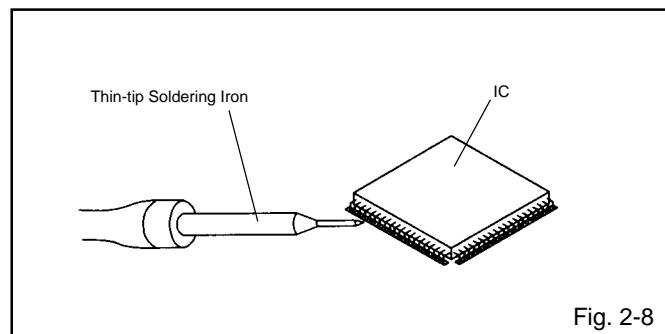


Fig. 2-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 1 second.


Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

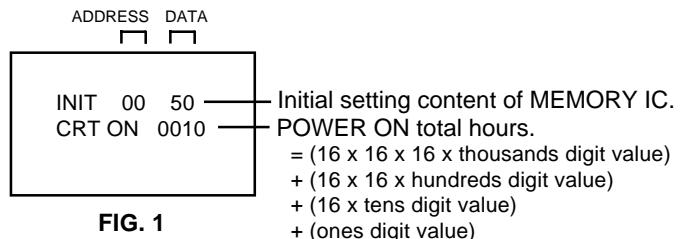

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI OF due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	04	EB	4E	57	B3	24	69	39	00	00	05	90	AE	00	07

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
 2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
 3. ADDRESS is now selected and should "blink". Using the VOL. +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
 4. Press ENTER to select DATA. When DATA is selected, it will "blink".
 5. Again, step through the DATA using VOL. +/- button until required DATA value has been selected.
 6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
 7. Repeat steps 3 to 6 until all data has been checked.
 8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.
After the data input, set to the initializing of shipping.
 9. Turn POWER on.
 10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
 11. After the finishing of the initializing of shipping, the unit will turn off automatically.
- The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button (9) on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in Fig. 1-1.

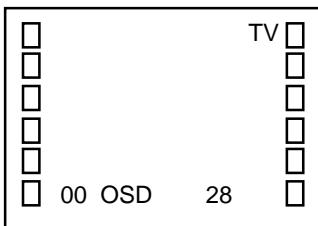


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button (0-9) on the remote control to select the options shown in Fig. 1-2.
4. Press the MENU button on the remote control to end the adjustments.

NO. FUNCTION	NO. FUNCTION
00 OSD H	16 CONTRAST CENT
01 CUT OFF	17 CONTRAST MAX
04 H. VCO	18 CONTRAST MIN
05 H. PHASE	19 COLOR CENTER
06 V. SIZE	20 COLOR MAX
07 V. SHIFT	21 COLOR MIN
08 R DRIVE	22 TINT
09 B DRIVE	23 SHARPNESS
10 R BIAS	24 FM LEVEL
11 G BIAS	25 LEVEL
12 B BIAS	26 SEPARATION1
13 BRIGHT CENT	27 SEPARATION2
14 BRIGHT MAX	28 TEST MONO
15 BRIGHT MIN	29 TEST STEREO

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CUT OFF

1. Adjust the unit to the following settings.
R.DRIVE=10, B.DRIVE=10, R.BIAS=64, G.BIAS=64, B.BIAS=64, BRI.CENT=100, CONT.MAX=60.
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (01) on the remote control to select "CUT OFF".
4. Adjust the **Screen Volume** until a dim raster is obtained.

2-2: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of Fig. 1-1 and press the channel button (10) on the remote control to select "R. BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R. BIAS", "G. BIAS", "B. BIAS", "R. DRIVE" or "B. DRIVE".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, R. DRIVE, and B. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-3: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-4: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (05) on the remote control to select "H. PHAS".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

2-5: VERTICAL SHIFT

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button (07) on the remote control to select "V. SFT".
4. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.

ELECTRICAL ADJUSTMENTS

2-6: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V. SIZE".
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes $10 \pm 2\%$.

2-7: SUB BRIGHTNESS

1. Receive the monoscope pattern. (RF Input)
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "BRI.CENT".
4. Press the VOL. UP/DOWN button on the remote control until the white 0% is starting to be visible
5. Receive the monoscope pattern. (Audio Video Input)
6. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.

2-8: SUB TINT/SUB COLOR

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP023**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line
(Refer to Fig. 2-1)
5. Connect the oscilloscope to **TP022**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(19)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to $110 \pm 10\%$ of the white level. **(Refer to Fig. 2-2)**
8. Receive the color bar pattern. (Audio Video Input)
9. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~7

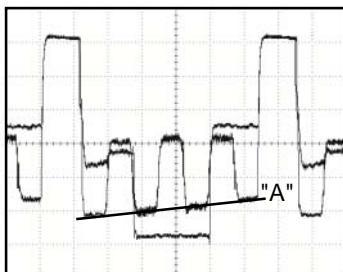


Fig. 2-1

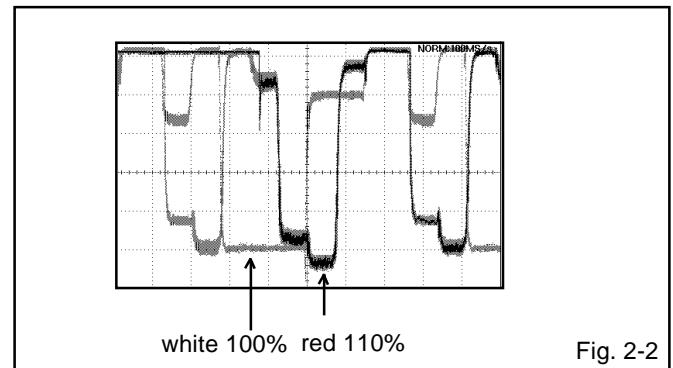


Fig. 2-2

2-9: SUB CONTRAST

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "CONT. MAX".
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes "60".
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.

2-10: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum.
(Refer to Fig. 2-3)

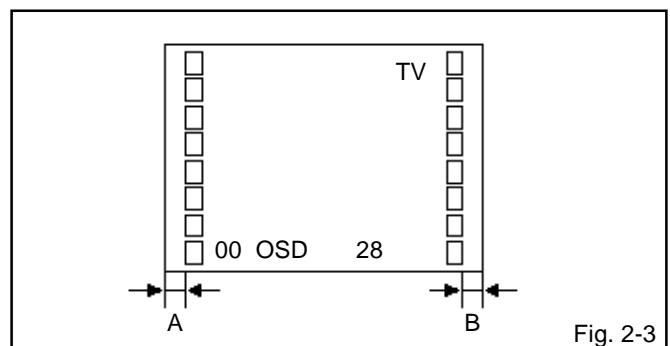


Fig. 2-3

2-11: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below. (RF/AV)

NO.	FUNCTION	STEP NO.
04	H. VCO	04
14	BRIGHT MAX	183
15	BRIGHT MIN	60
16	CONTRAST CENT	30
18	CONTRAST MIN	17
20	COLOR MAX	74
21	COLOR MIN	00
23	SHARPNESS	45
24	FM LEVEL	00
25	LEVEL	00
26	SEPARATION1	00
27	SEPARATION2	00

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. (**Refer to Fig. 3-1**)
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

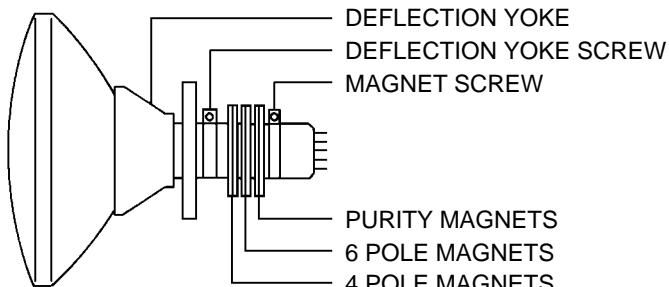


Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.


1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE


Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. (**Refer to Fig. 3-2-a**)
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. (**Refer to Fig. 3-2-b**)

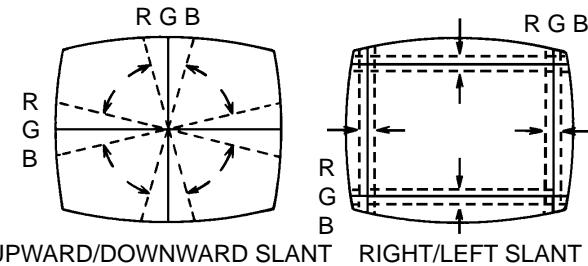

UPWARD/DOWNWARD SLANT RIGHT/LEFT SLANT

Fig. 3-2-a

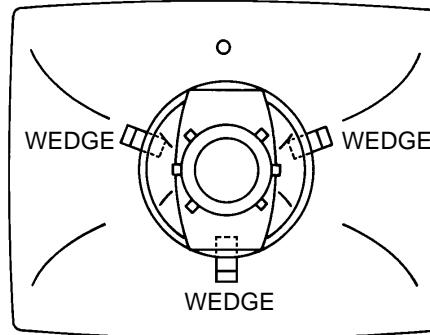


WEDGE POSITION


Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

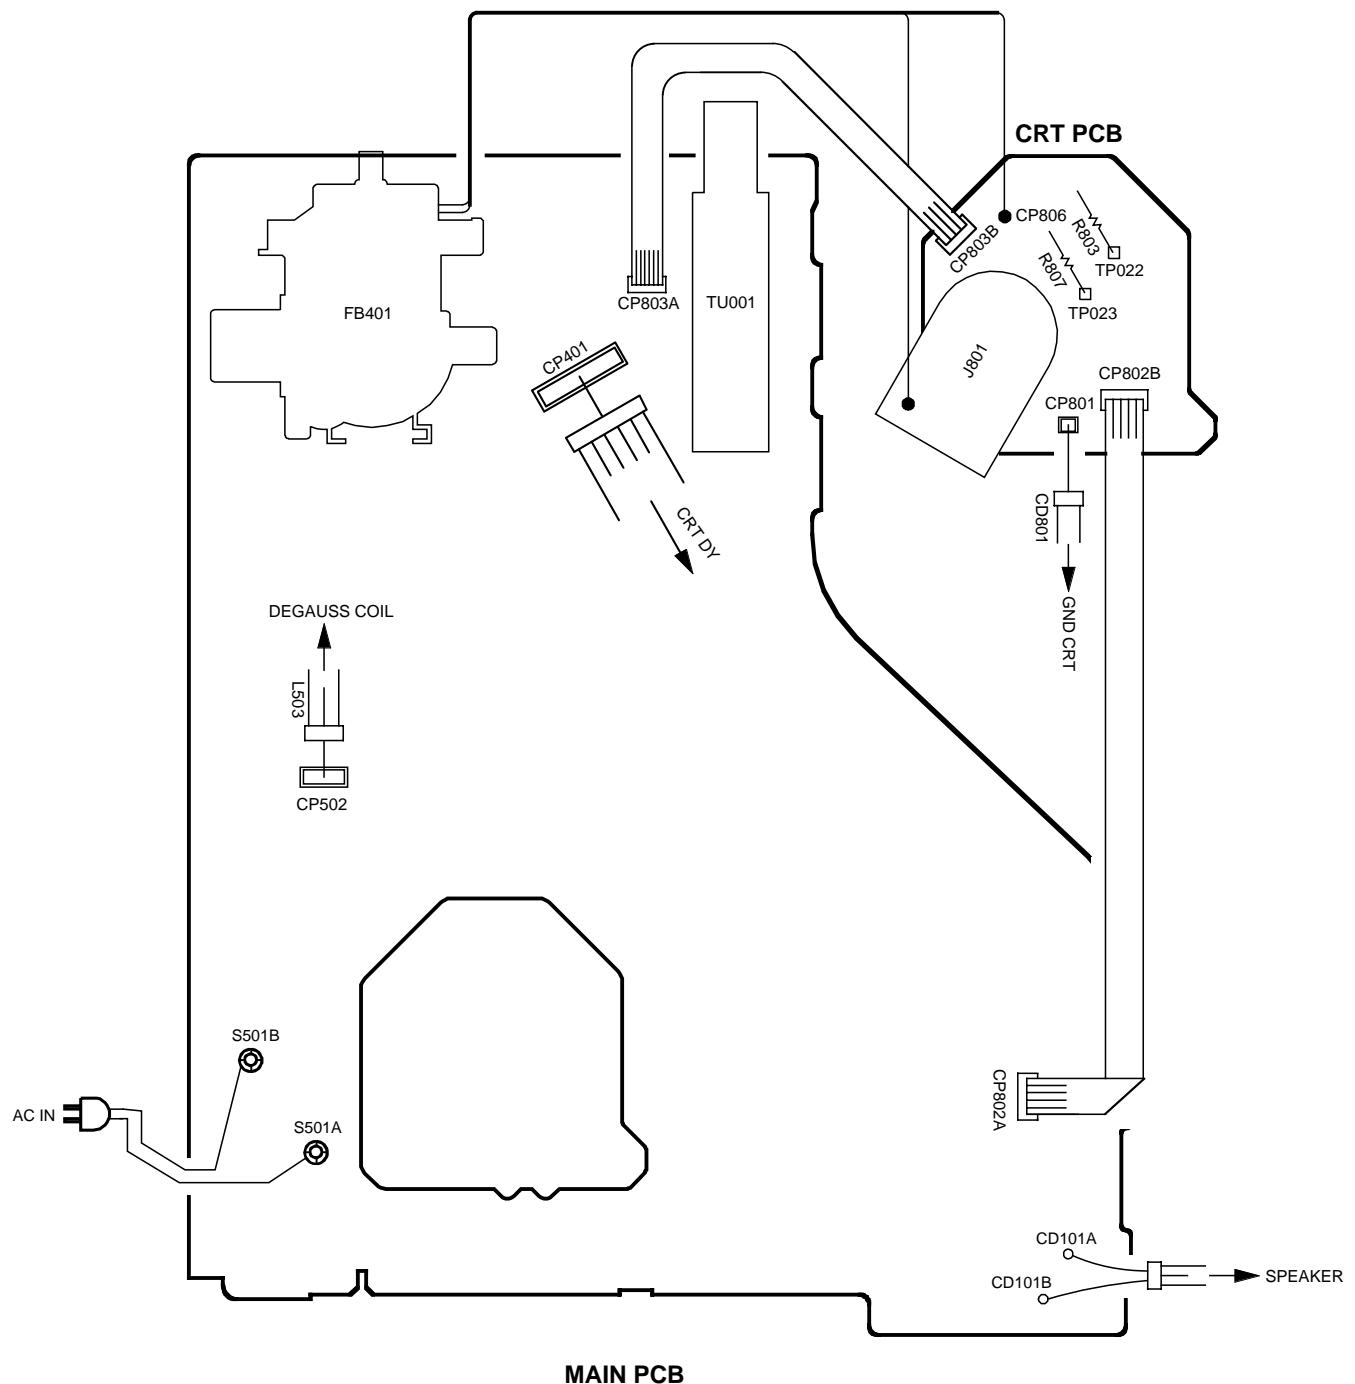


BLOCK DIAGRAM

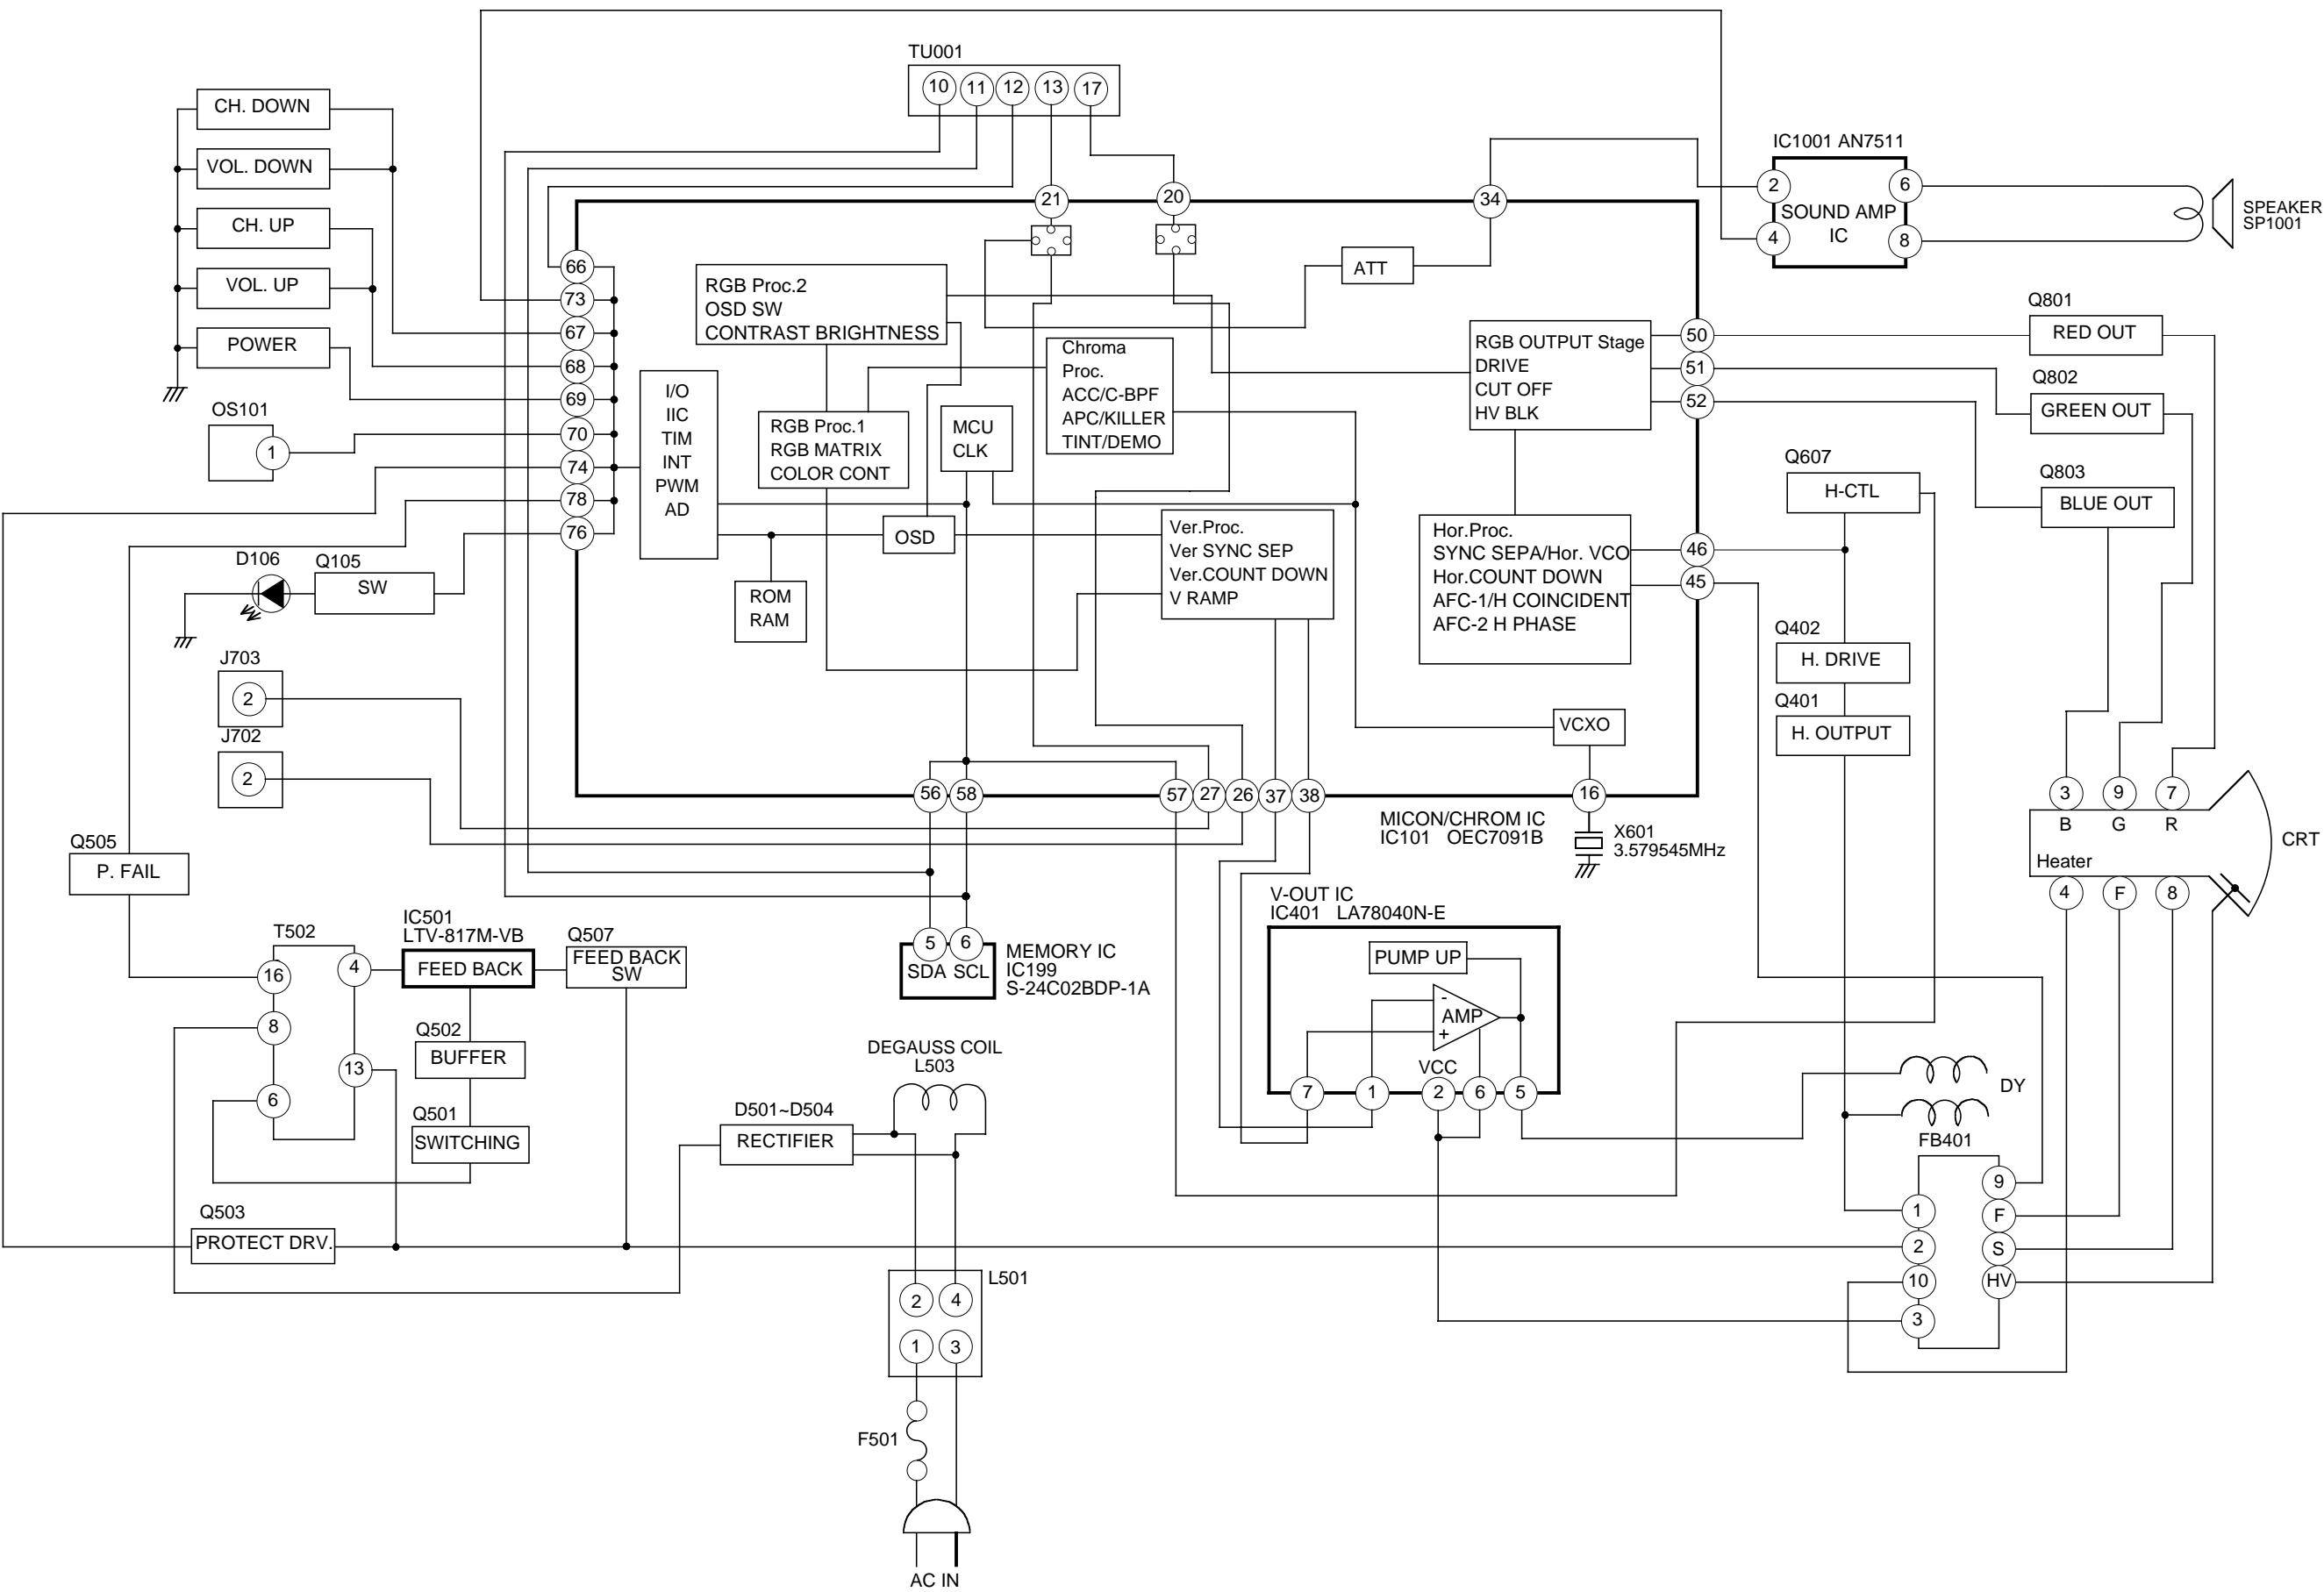


**PRINTED CIRCUIT BOARDS
MAIN/CRT (INSERTED PARTS)
SOLDER SIDE**




PRINTED CIRCUIT BOARDS
MAIN (CHIP MOUNTED PARTS)
SOLDER SIDE

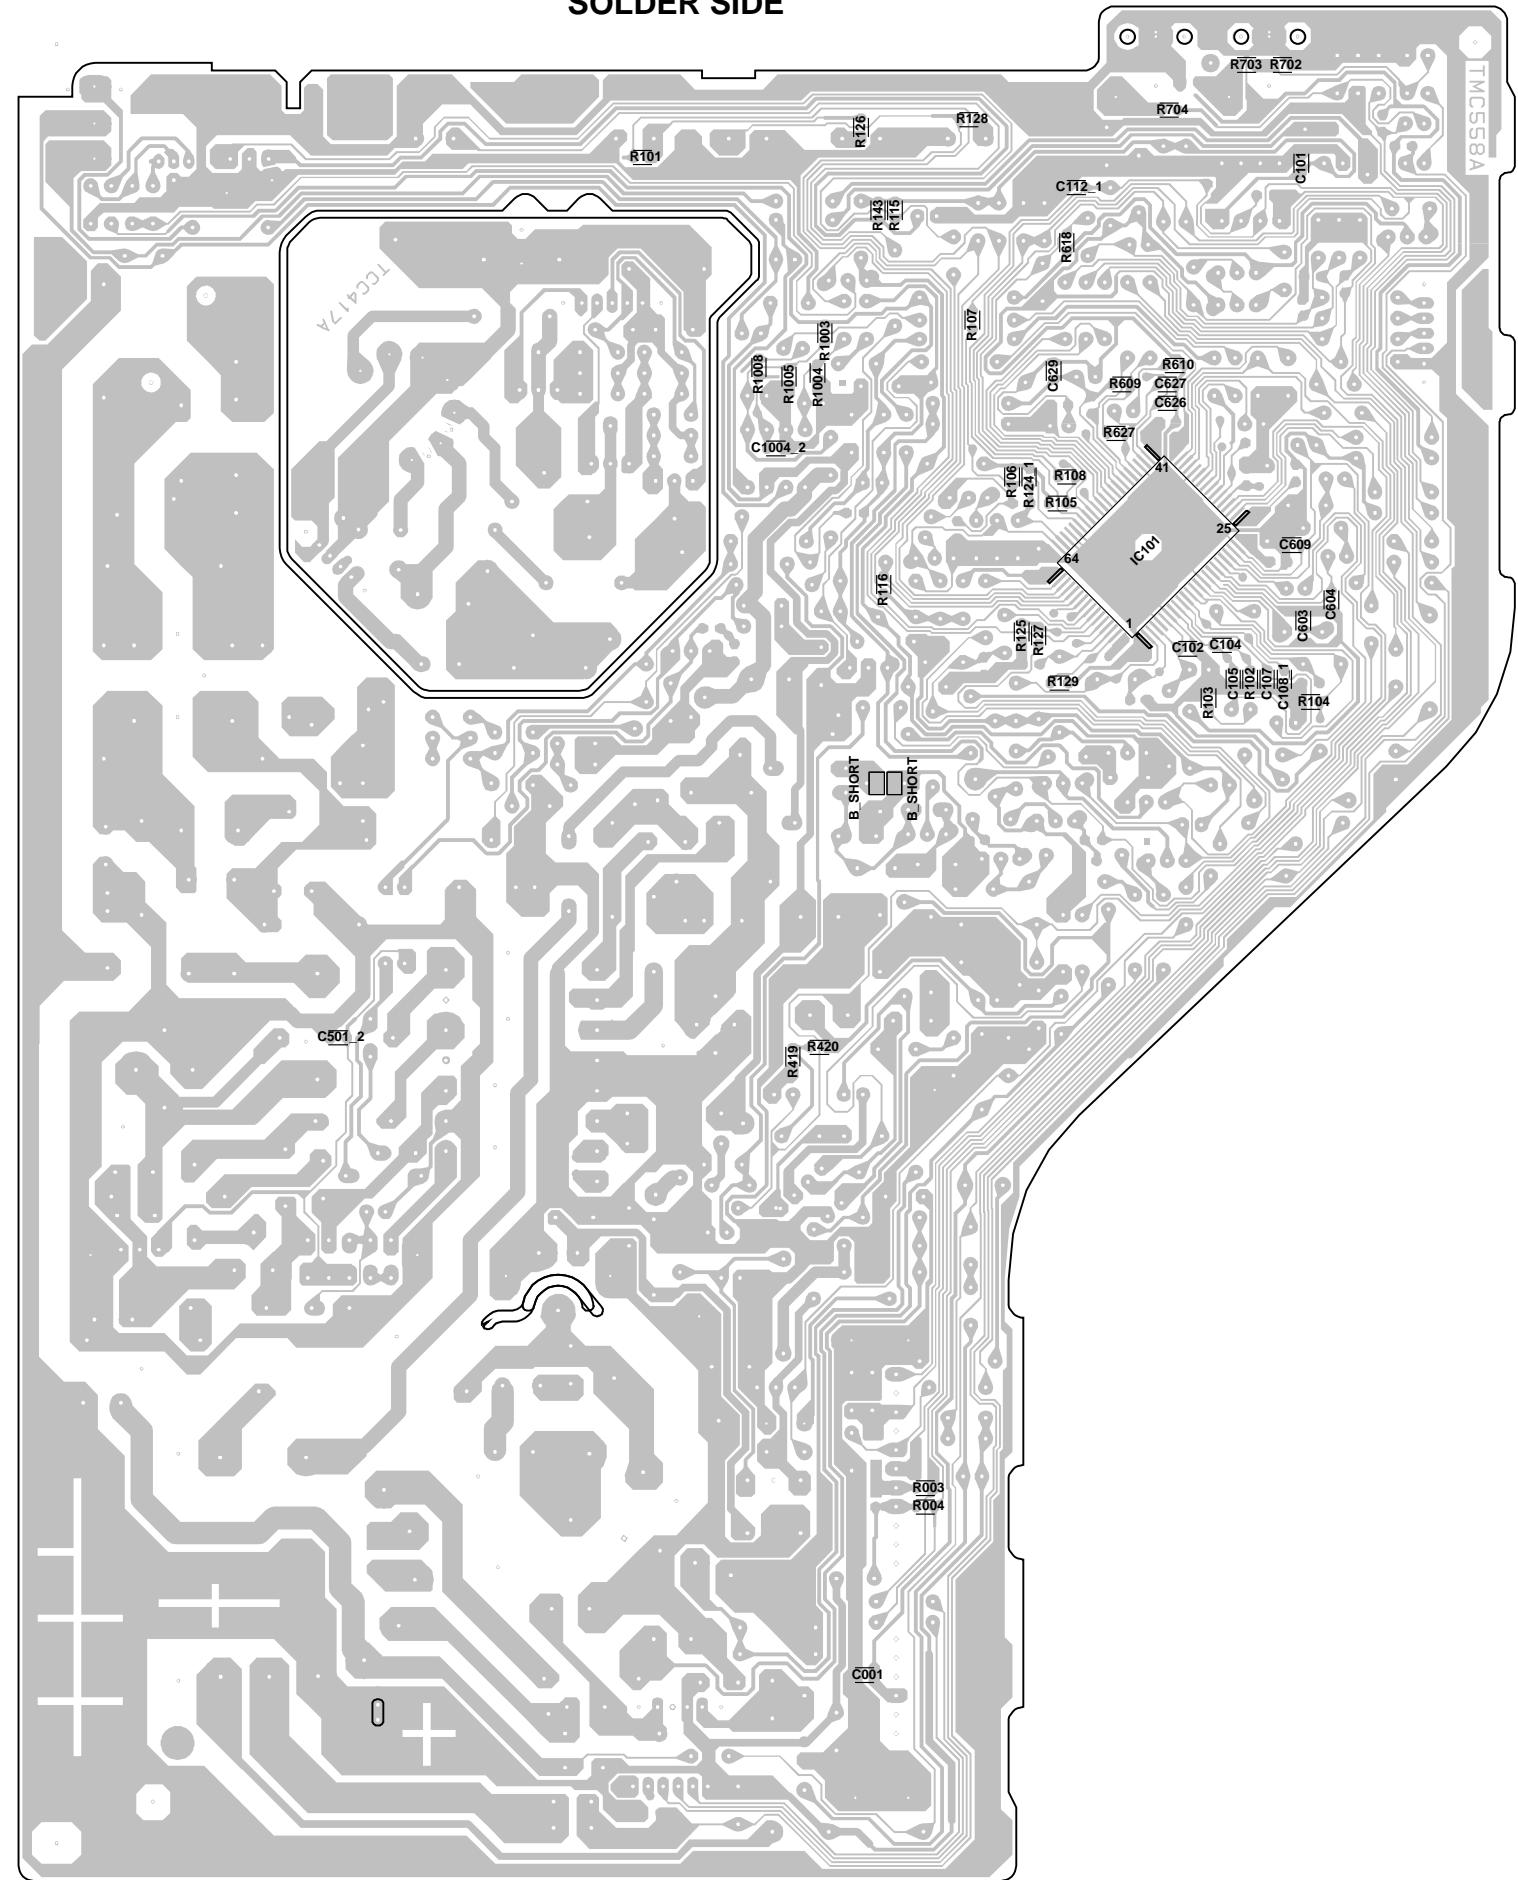

MICON/CHROMA/TUNER SCHEMATIC DIAGRAM (MAIN PCB)

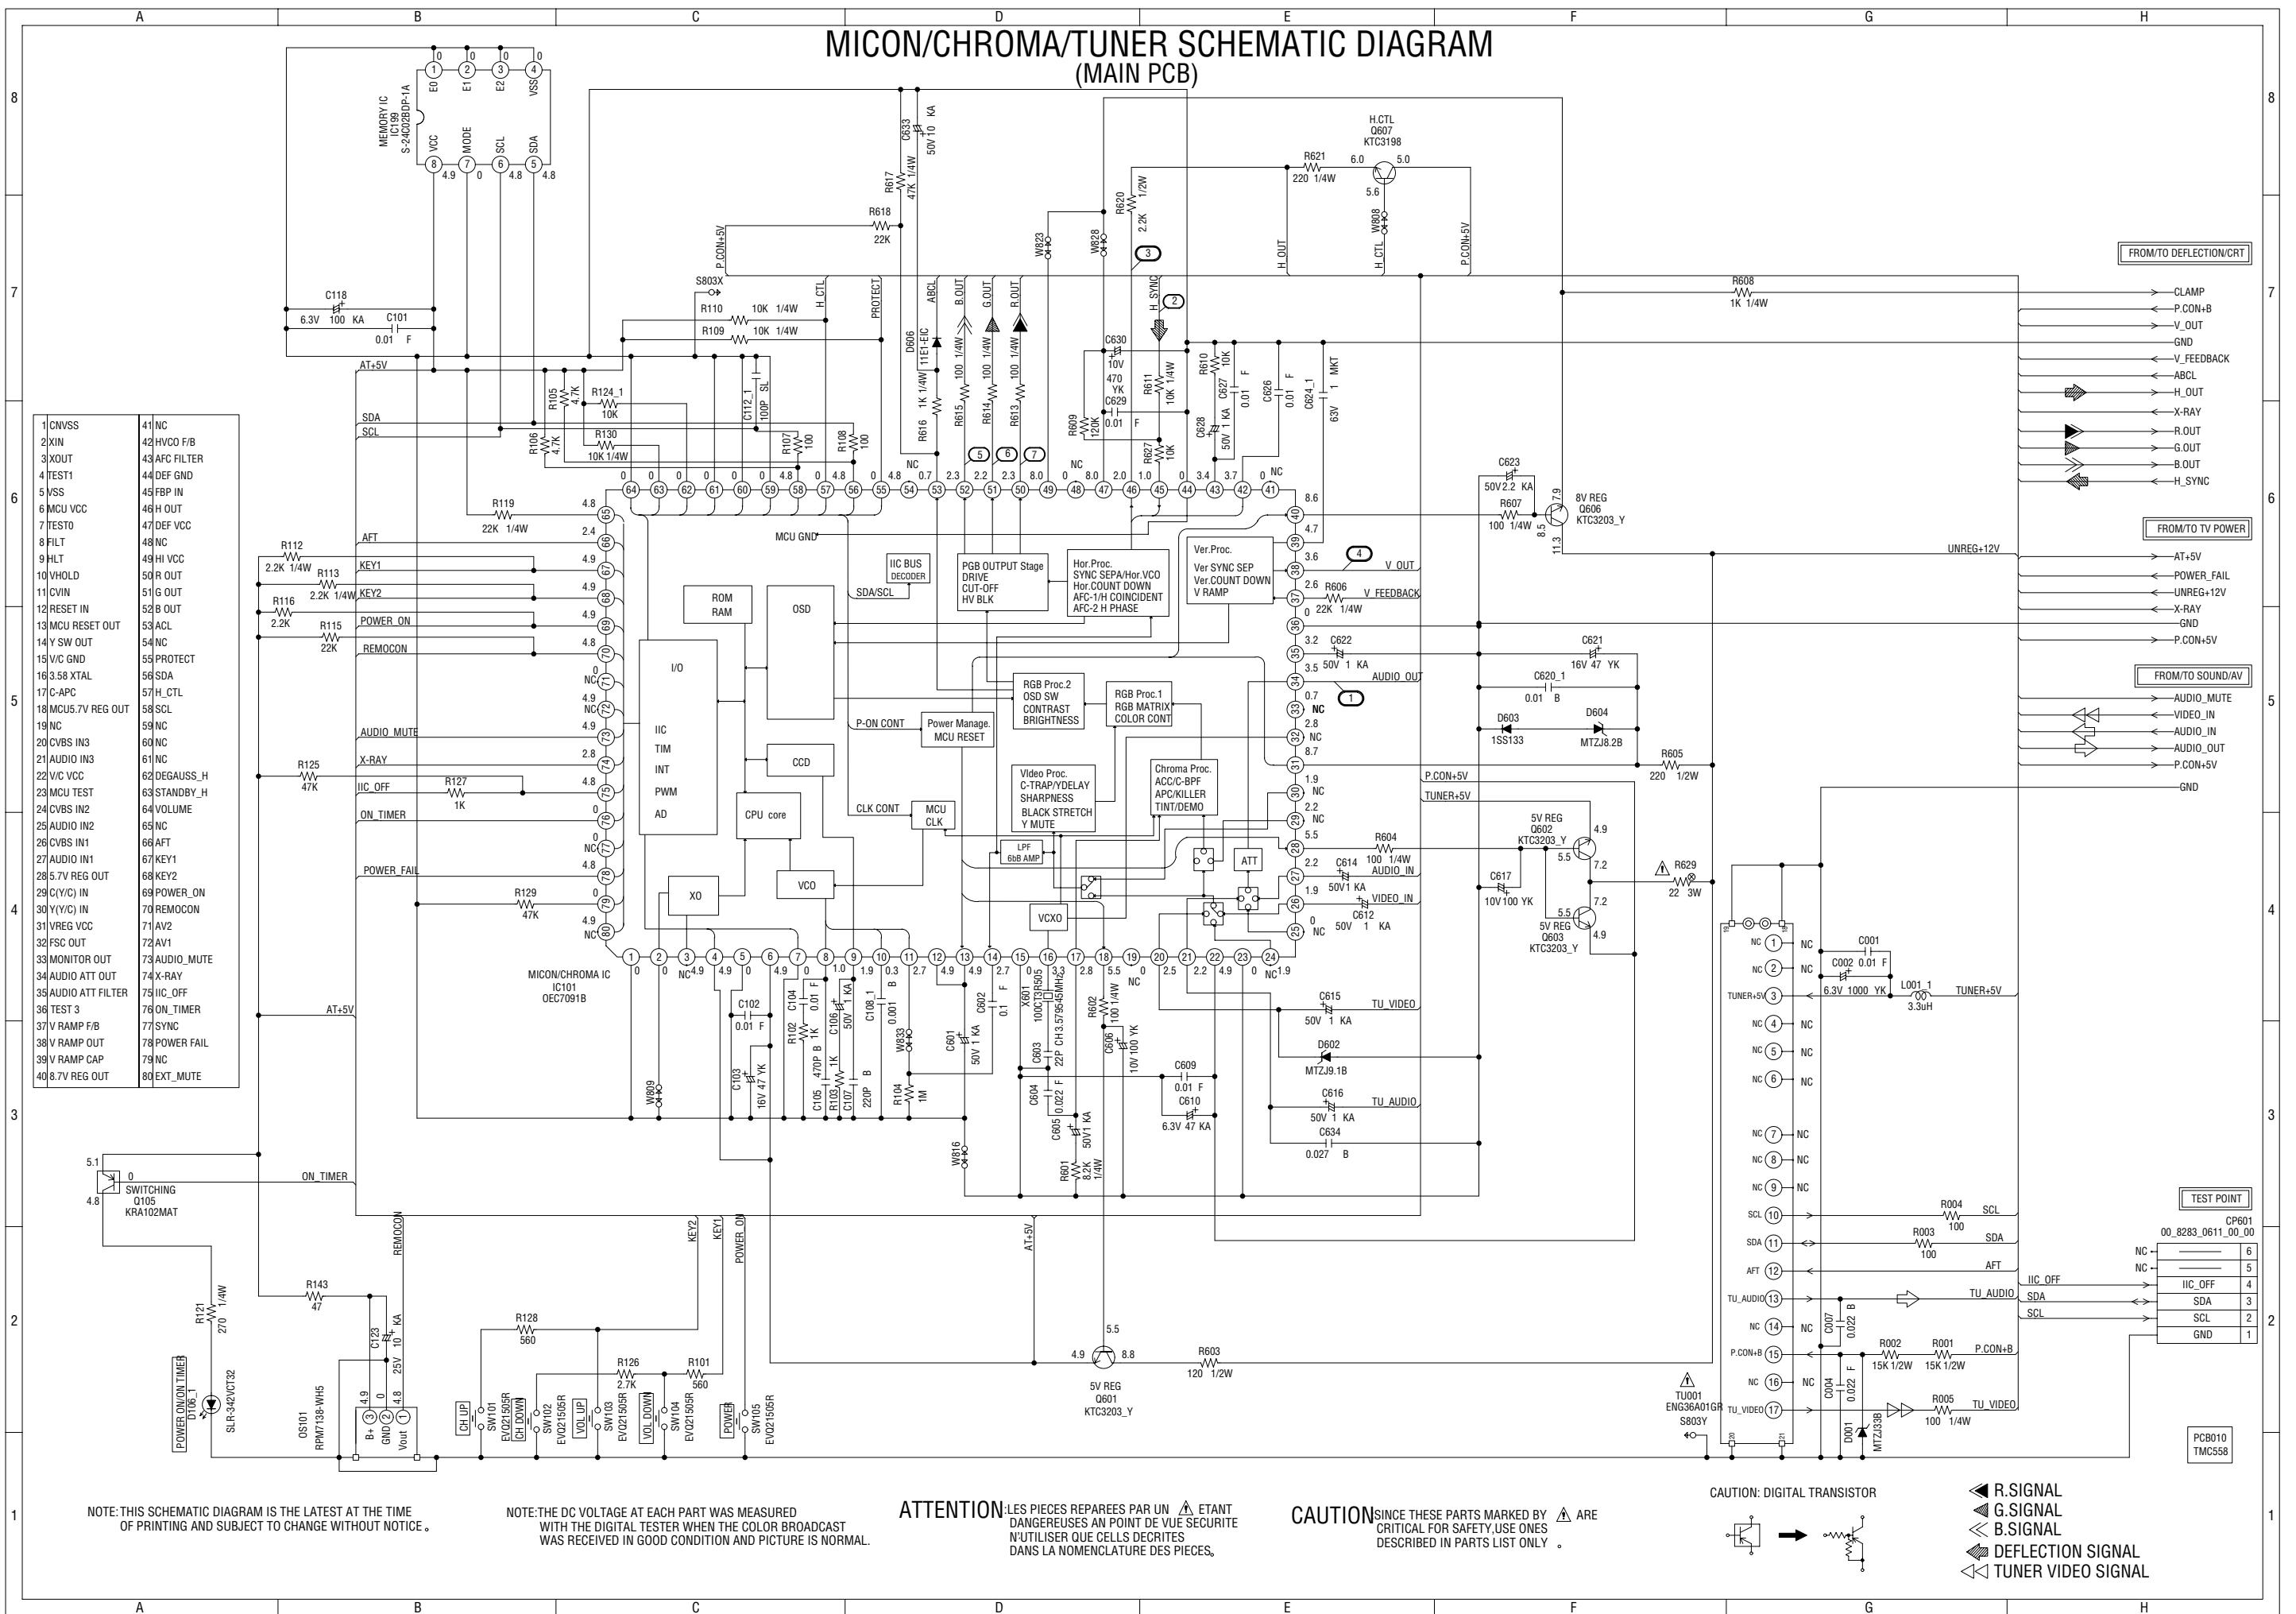

TV POWER SCHEMATIC DIAGRAM (MAIN PCB)

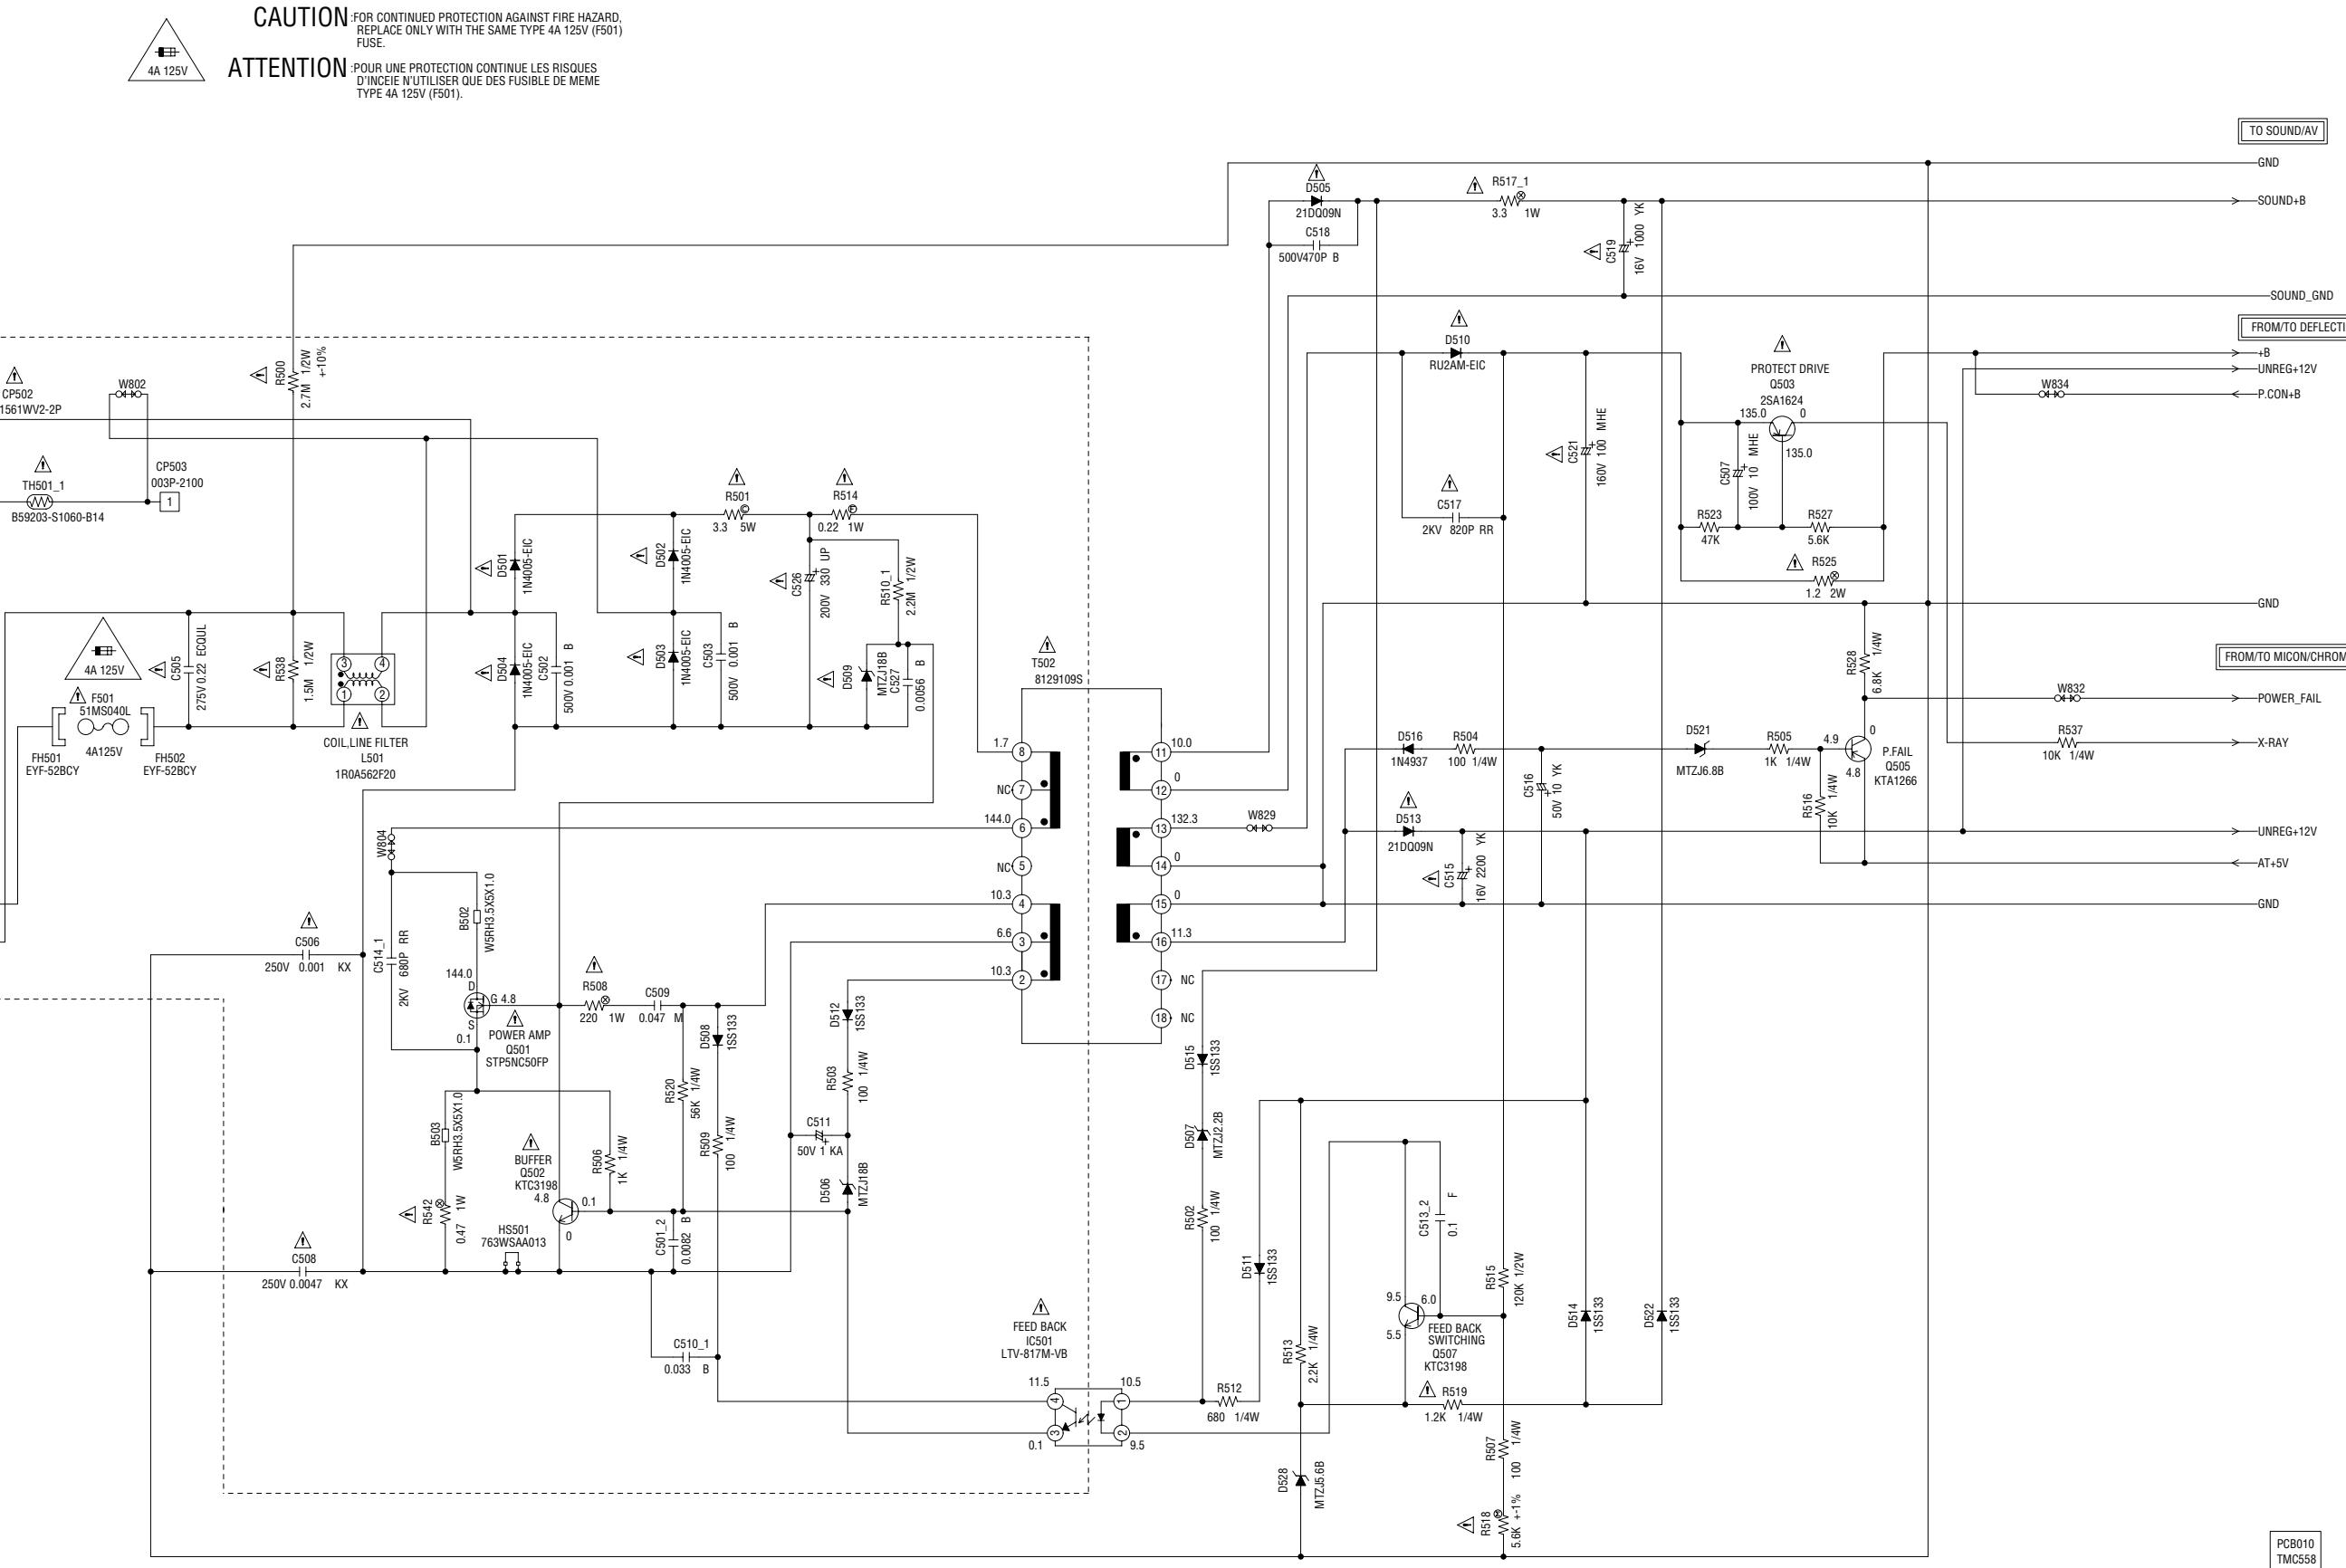

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION: LES PIECES REPERES PAR UN △ ETANT DANGEREUSES AU POINT DE VUE SECURITE N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.




CAUTION: SINCE THESE PARTS MARKED BY △ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

DEFLECTION/CRT SCHEMATIC DIAGRAM

(MAIN PCB)

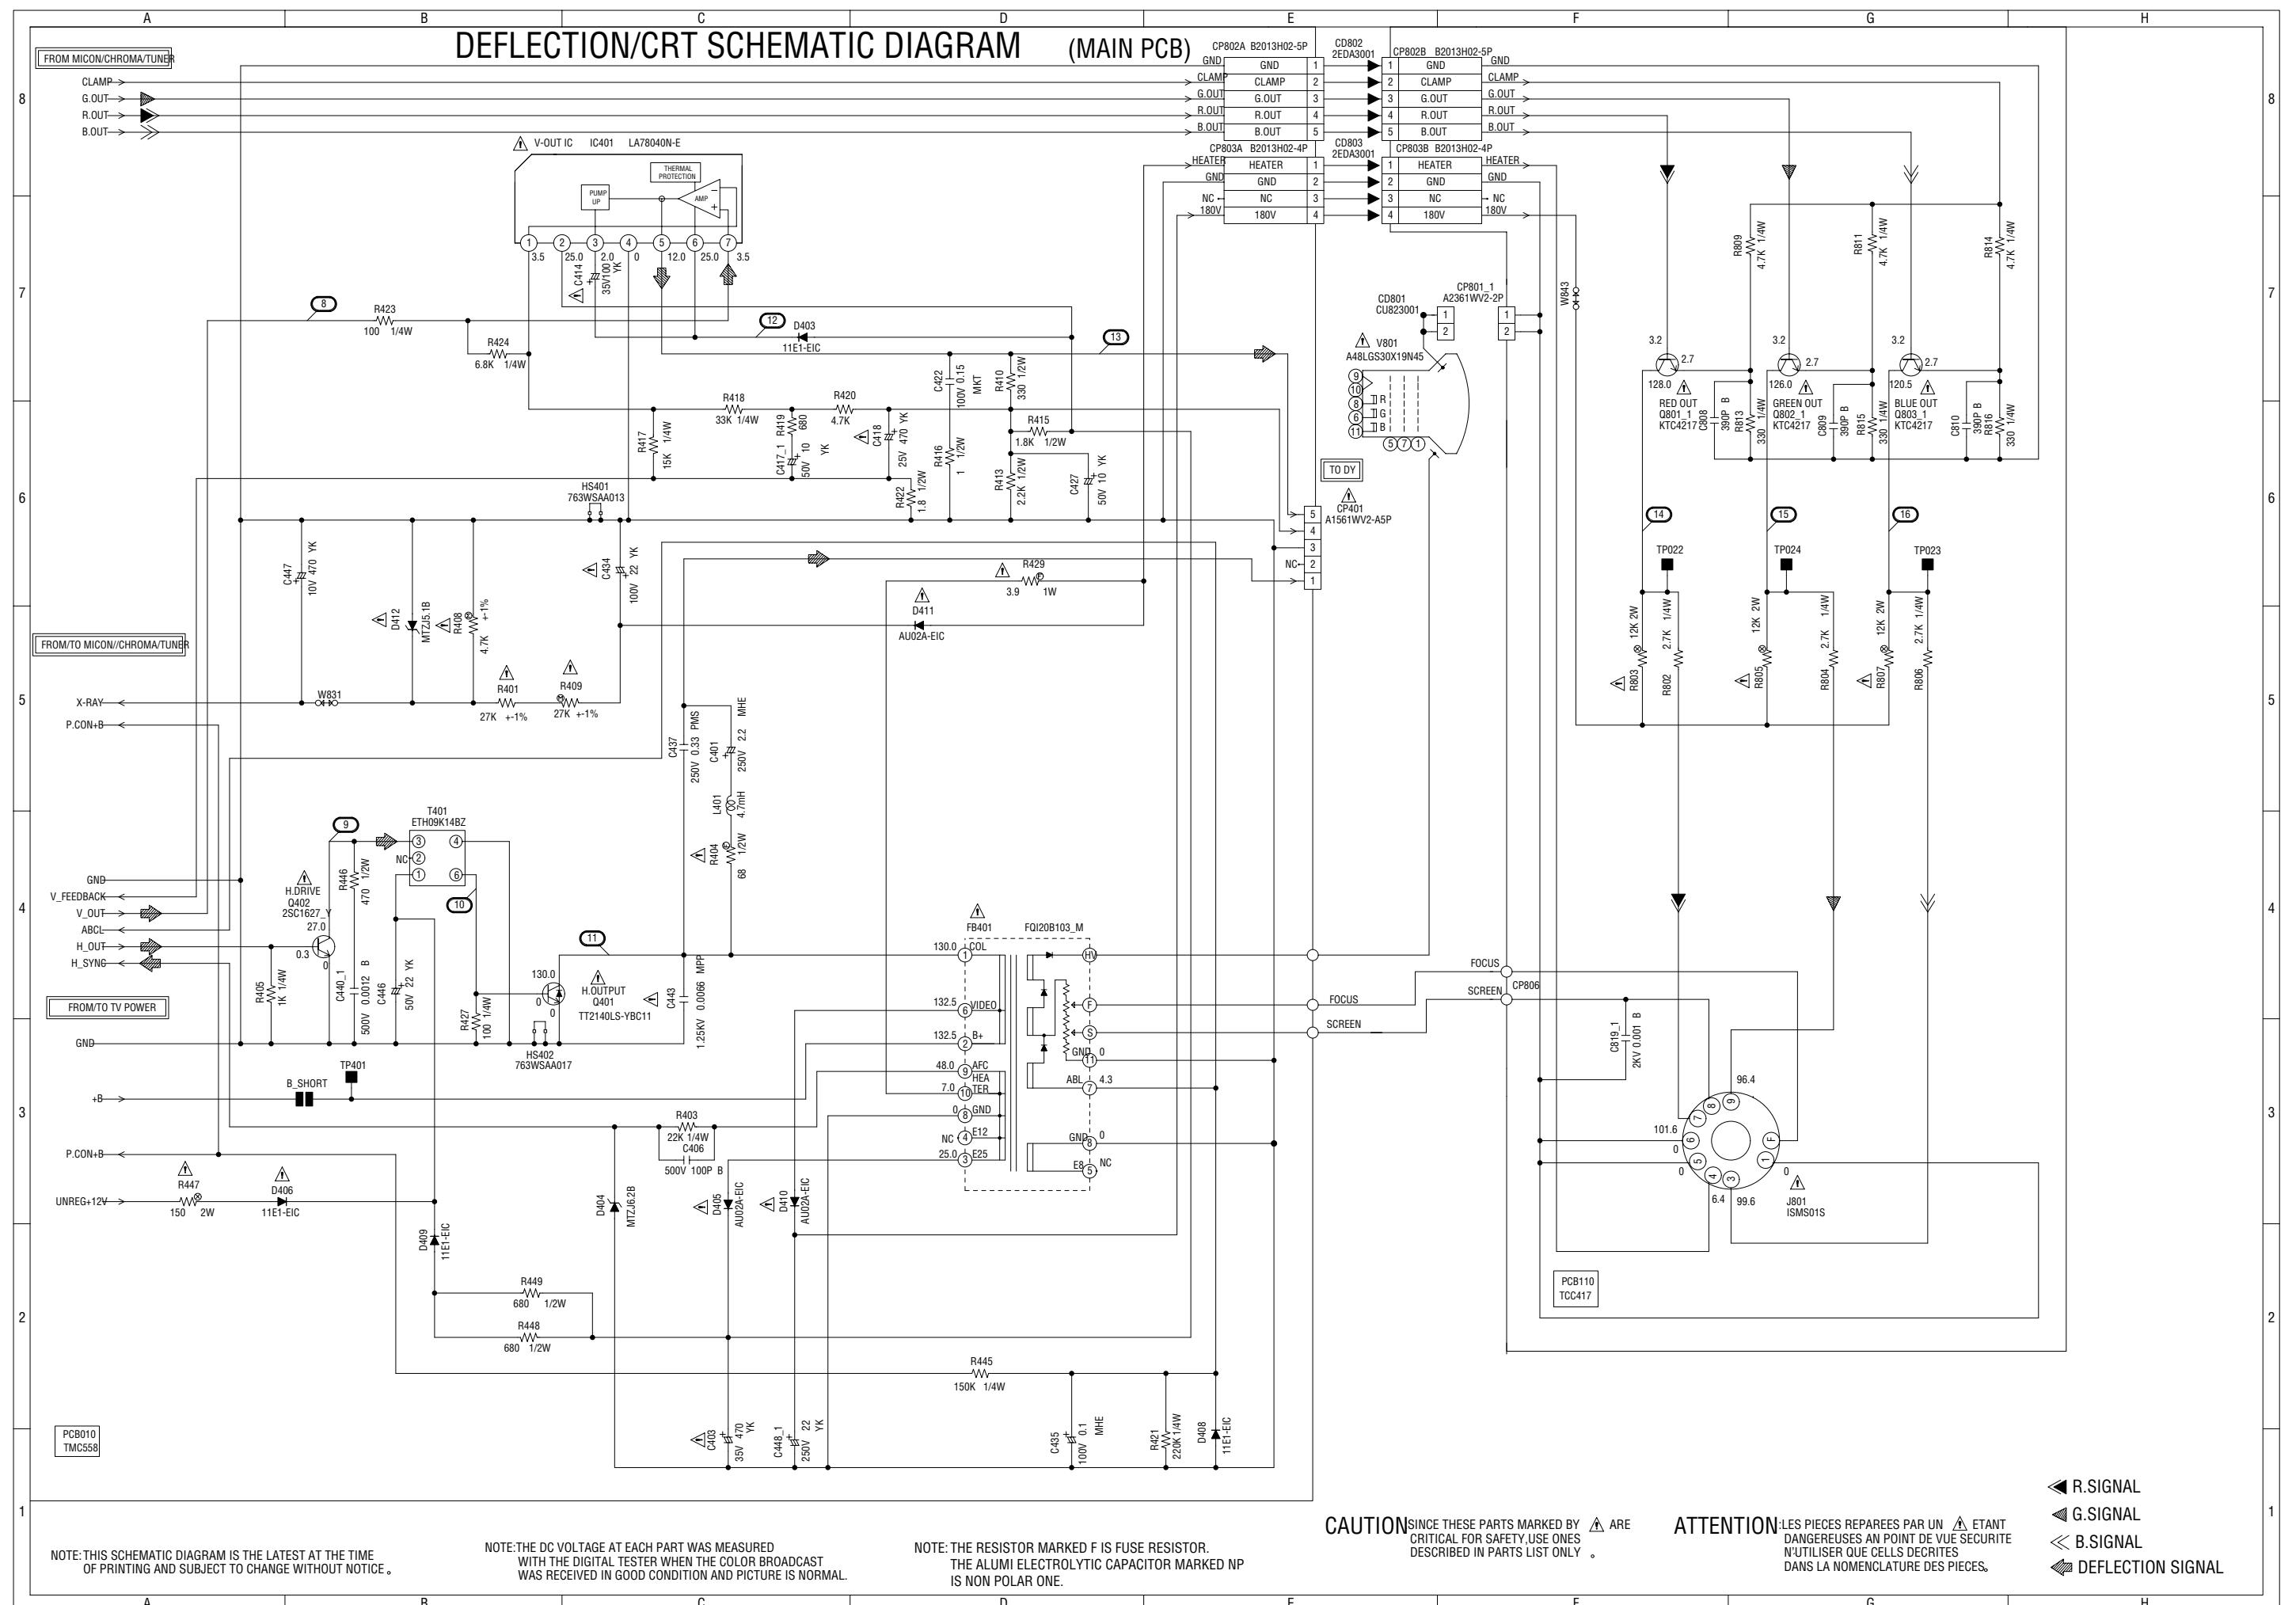

SOUND/AV SCHEMATIC DIAGRAM (MAIN PCB)

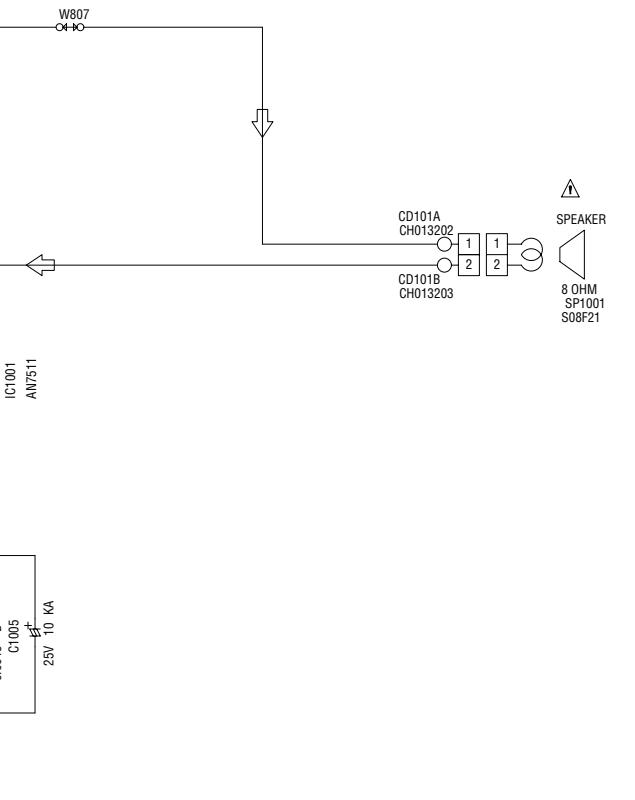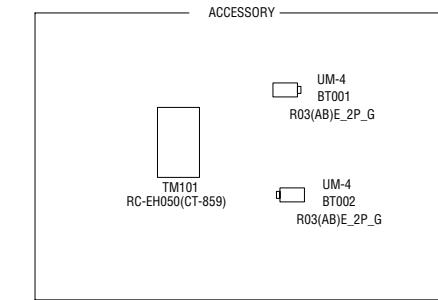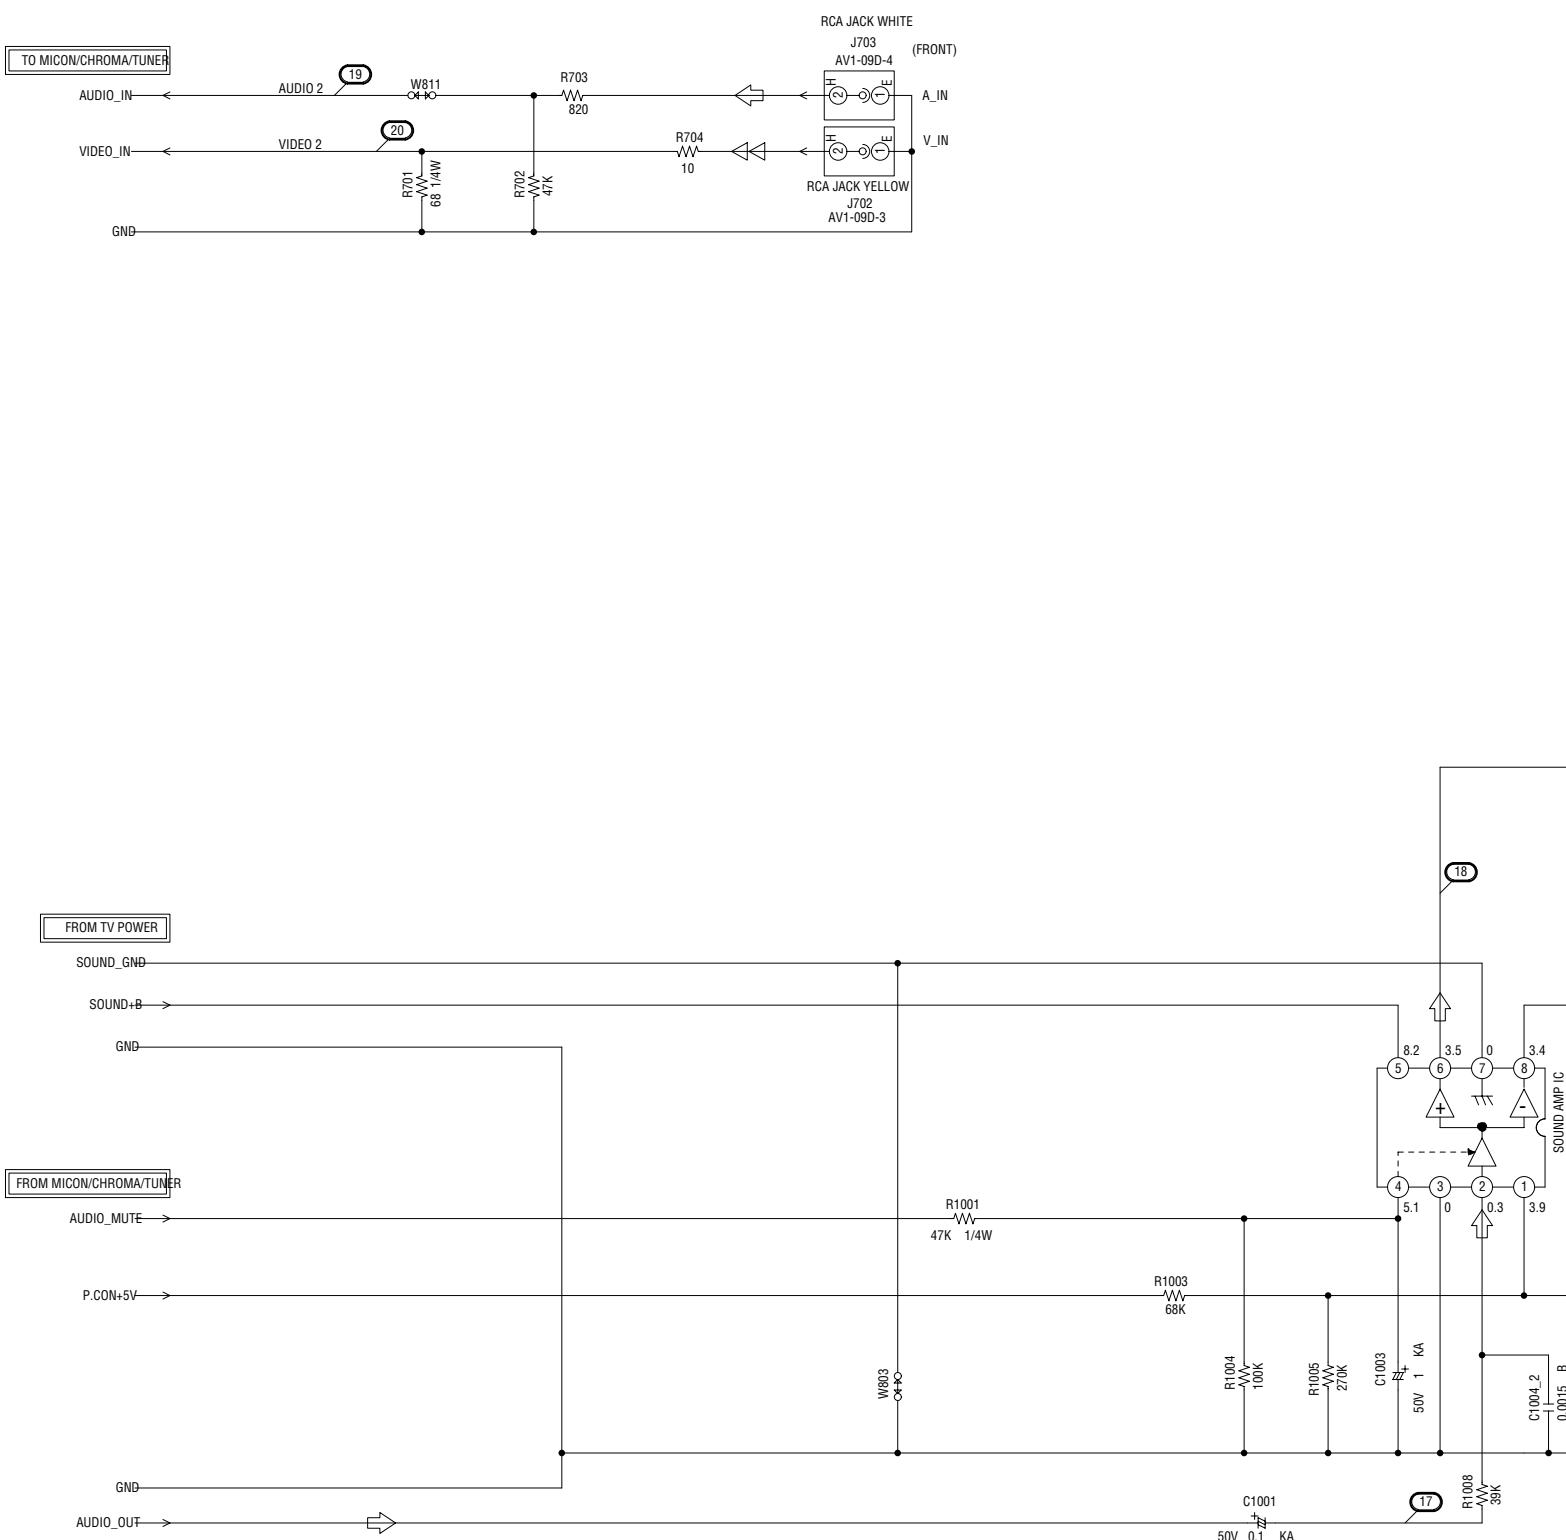

ATTENTION: LES PIECES REPARÉES PAR UN ETANT DANGEREUSES AU POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.


CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

TUNER VIDEO SIGNAL
 AUDIO SIGNAL


PCB010
TMC558

WAVEFORMS


MICON/CHROMA/TUNER

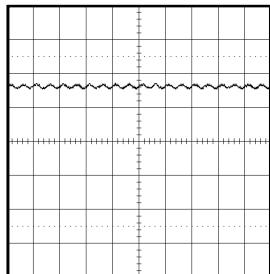


① 0.5V 2ms/div

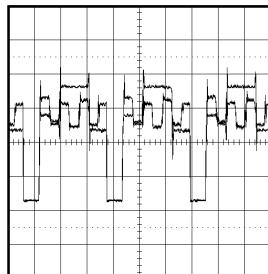


⑥ 1V 20μs/div

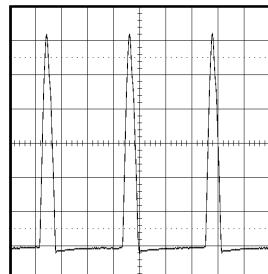


⑪ 200V 20μs/div

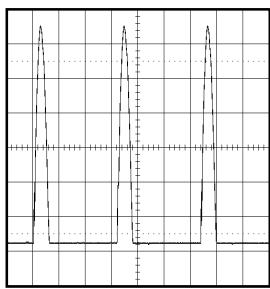


② 20V 20μs/div

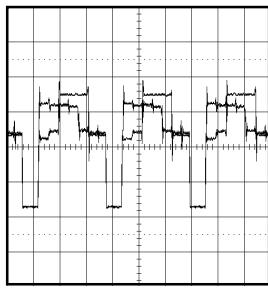


⑦ 1V 20μs/div

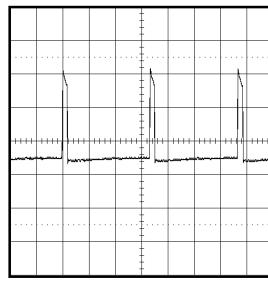


⑫ 10V 5ms/div

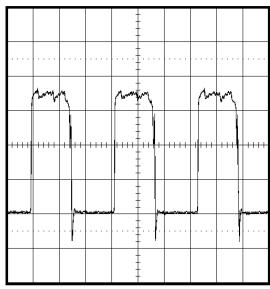


③ 200mV 20μs/div

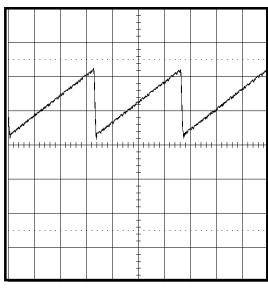


⑧ 0.5V 5ms/div

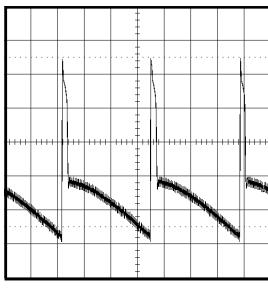


⑬ 10V 5ms/div

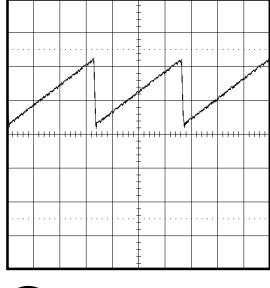


④ 0.5V 5ms/div

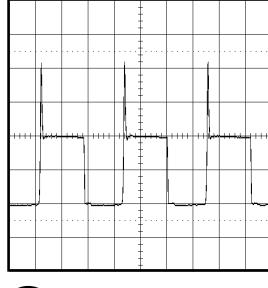


⑨ 20V 20μs/div

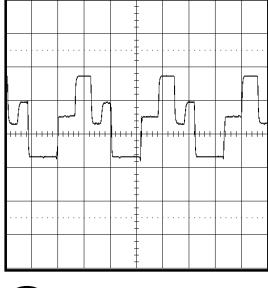


⑭ 50V 20μs/div

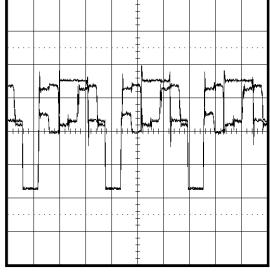

⑤ 1V 20μs/div

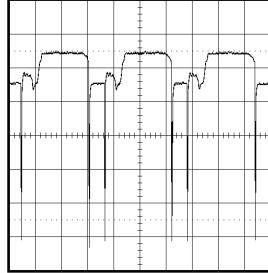


⑯ 2V 20μs/div

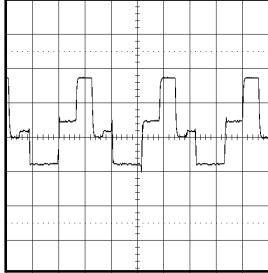

⑰ 50V 20μs/div


NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

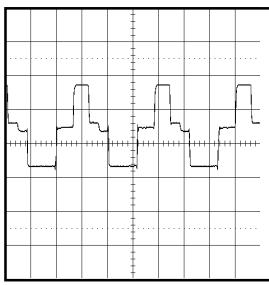


⑯ 50V 20 μ s/div


SOUND/AV

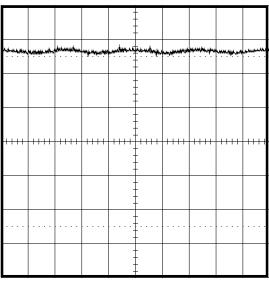


⑰ 0.5V 1ms/div

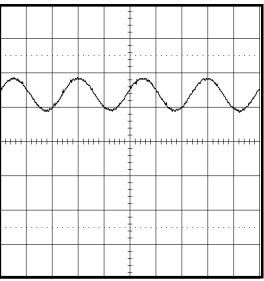

⑱ 1V 1ms/div

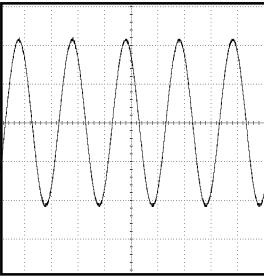


⑲ 200mV 500 μ s/div

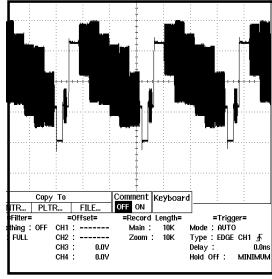


⑳ 500mV 20 μ s/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

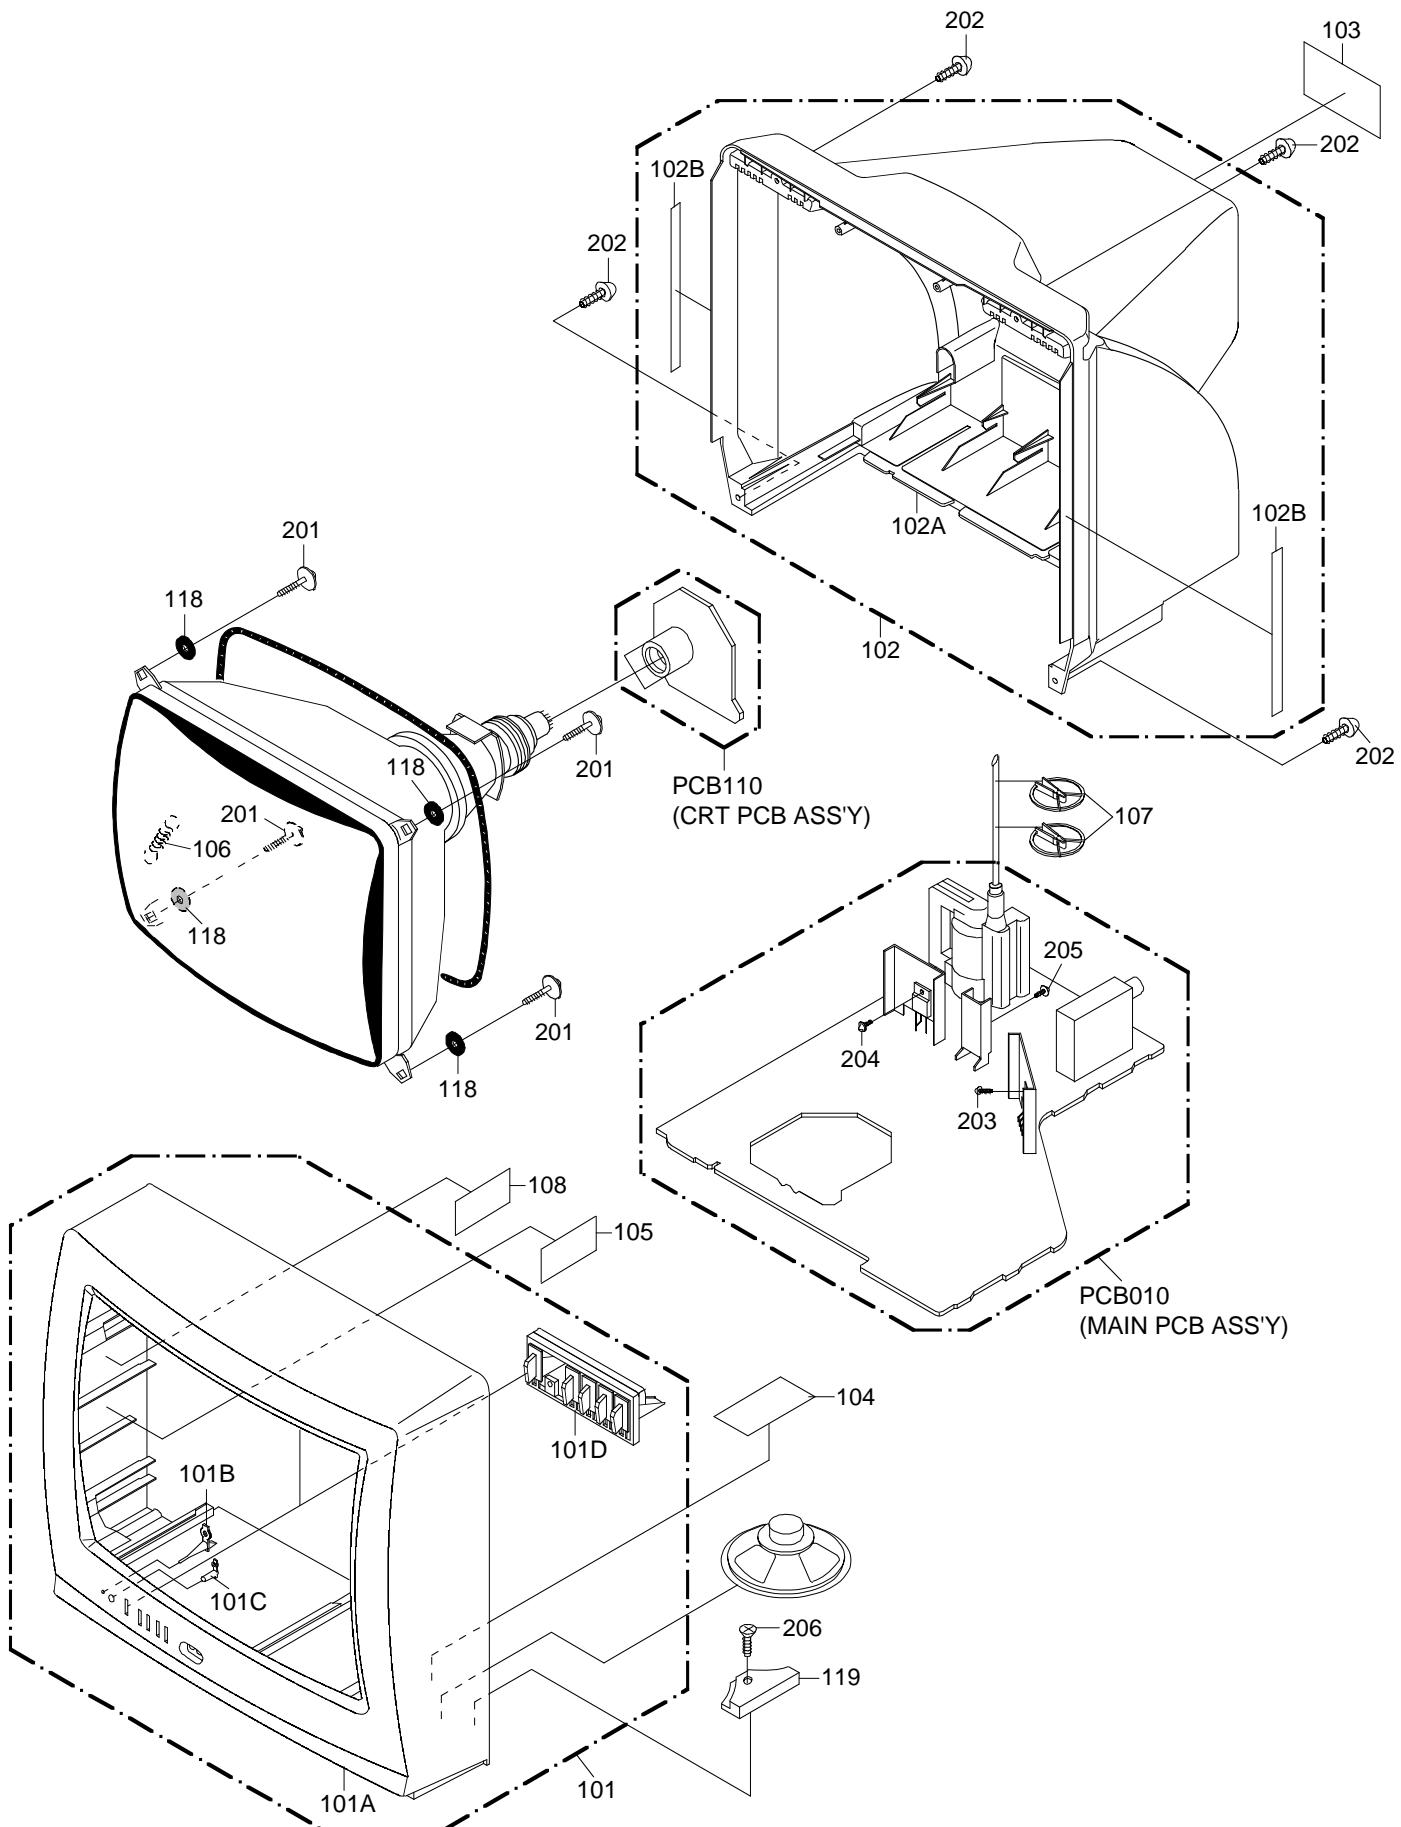

MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

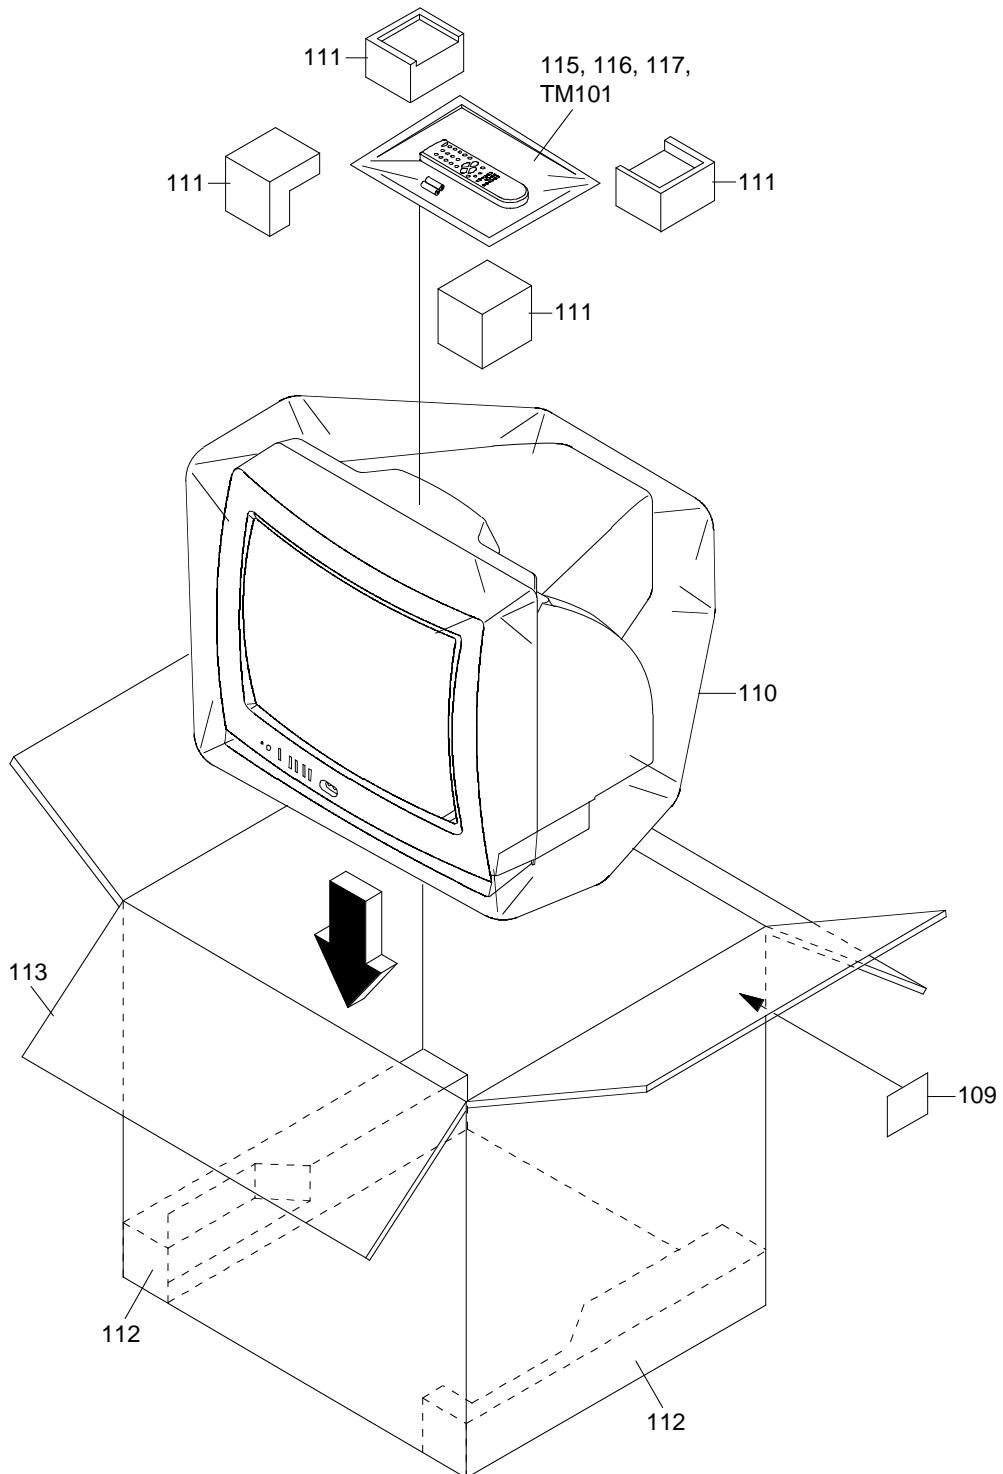

MECHANICAL REPLACEMENT PARTS LIST (FOR USA)

Location No.	TSB P/N	Reference No.	Description
101	AE003382	A3M215J720	CABINET,FRONT ASSY
101A	AE003383	701WPJC538	CABINET,FRONT
101B	AE001500	713WPAA046	GLASS,LED
101C	AD300694	713WPAA050	GUIDE,REMOCON
101D	AE003384	735WPBA980	BUTTON,FRAME
102	AE003385	A3M215J740	CABINET,BACK ASSY
102A	AE003263	702WPAA593	CABINET,BACK
102B	AE001694	800WQ0A014	FELT SHEET
103	AE003386	722549A320	SHEET,RATING
104	AD300132	7230006818	SHEET,CAUTION
105	AE000007	7220001107	SHEET,HWC
106	AD300759	741WUA0021	SPRING,EARTH
107	BZ710260	899HV3T000	HOLDER,ANODE WIRE
108	AE000006	7220001119	SHEET,CSA WARNING
109	AE003387	723000C576	SHEET,BAR CODE
110	AD302402	791WHA0061	LAMIFILM BAG
111	AD300700	792WHAA054	PACKAGE, TOP
112	AD300701	792WHAA055	PACKAGE, BOTTOM
113	AE003388	793WCDC100	GIFT BOX
114	AE003389	A3M215J975	INSTRUCTION BOOK KIT
115	AD302406	JB5UD200	POLYBAG,INSTRUCTION(RED CAUTION)
116	AD300022	J3I70417	REGISTRATION CARD
117	AE003391	J3M21501A	INSTRUCTION BOOK
118	AD302158	800WR0A002	SHEET,CRT SUPPORT
119	AE004088	735WPAA647	HOLDER,SPEAKER
201	BZ710321	8121F50B84	SCREW,TAP TITE(P) FAI20 FLAT 5x28
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS 4x16
203	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER 3x8
204	BZ710352	8109I30604	SCREW,TAP TITE(B) WH7 3x6
205	BZ710562	8109I30804	SCREW,TAP TITE(B) WH7 3x8
206	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER 3x10

MECHANICAL REPLACEMENT PARTS LIST (FOR CANADA)

Location No.	TSB P/N	Reference No.	Description
101	AE003382	A3M215J720	CABINET,FRONT ASSY
101A	AE003383	701WPJC538	CABINET,FRONT
101B	AE001500	713WPAA046	GLASS,LED
101C	AD300694	713WPAA050	GUIDE,REMOCON
101D	AE003384	735WPBA980	BUTTON,FRAME
102	AE003385	A3M215J740	CABINET,BACK ASSY
102A	AE003263	702WPAA593	CABINET,BACK
102B	AE001694	800WQ0A014	FELT SHEET
103	AE003386	722549A320	SHEET,RATING
104	AD300132	7230006818	SHEET,CAUTION
105	AE000007	7220001107	SHEET,HWC
106	AD300759	741WUA0021	SPRING,EARTH
107	BZ710260	899HV3T000	HOLDER,ANODE WIRE
108	AE000006	7220001119	SHEET,CSA WARNING
109	AE003387	723000C576	SHEET,BAR CODE
110	AD302402	791WHA0061	LAMIFILM BAG
111	AD300700	792WHAA054	PACKAGE,TOP
112	AD300701	792WHAA055	PACKAGE,BOTTOM
113	AE003388	793WCDC100	GIFT BOX
114	AE003389	A3M215J975	INSTRUCTION BOOK KIT
115	AD302406	JB5UD200	POLYBAG,INSTRUCTION(RED CAUTION)
116	AD300022	J3I70417	REGISTRATION CARD
117	AE003391	J3M21501A	INSTRUCTION BOOK
118	AD302158	800WR0A002	SHEET,CRT SUPPORT
201	BZ710321	8121F50B84	SCREW,TAP TITE(P) FAI20 FLAT 5x28
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS 4x16
203	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER 3x8
204	BZ710352	8109130604	SCREW,TAP TITE(B) WH7 3x6
205	BZ710562	8109130804	SCREW,TAP TITE(B) WH7 3x8

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
RESISTORS				
△R401	BZ210089	R4X5T6273F	R,METAL	27K OHM 1/6W
△R404	AE001556	R615U2680J	R,FUSE	68 OHM 1/2W
△R408	AD301014	R4X5T6472F	R,METAL	4.7K OHM 1/6W
△R409	BZ210089	R4X5T6273F	R,METAL	27K OHM 1/6W
△R429	BZ210242	R635813R9J	R,FUSE	3.9 OHM 1W
△R447	BZ210229	R3X28A151J	R,METAL OXIDE	150 OHM 2W
△R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W
△R501	AD301632	R5Y2CD3R3J	R,CEMENT	3.3 OHM 5W
△R508	AD300783	R3X181221J	R,METAL OXIDE	220 OHM 1W
△R509	AD301203	R002T4101J	RC	100 OHM 1/4W
R510	AE003279	R00202225J	RC	2.2M OHM 1/2W
△R514	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W
△R515	BZ210081	R002T2124J	RC	120K OHM 1/2W
△R517	AE001696	R3X1813R3J	R,METAL OXIDE	3.3 OHM 1W
△R518	AD300036	R4X5T6562F	R,METAL	5.6K OHM 1/6W
△R519	BZ210124	R002T4122J	RC	1.2K OHM 1/4W
△R525	AD301315	R3X18A1R2J	R,METAL OXIDE	1.2 OHM 2W
△R538	BZ210206	R002T2155J	RC	1.5M OHM 1/2W
△R542	AD300659	R3X181R47J	R,METAL OXIDE	0.47 OHM 1W
△R629	AE000081	R3X28B220J	R,METAL	22 OHM 3W
△R803	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
△R805	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
△R807	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W
CAPACITORS				
△C403	BZ110149	E02LT4471M	CE	470 UF 35V
△C414	AD301434	E02LU4101M	CE	100 UF 35V
△C418	BZ110041	E02LT3471M	CE	470 UF 25V
△C434	BZ110195	E02LU8220M	CE	22 UF 100V
C437	AD300663	P4J7F3334J	CMPP	0.33 UF 250V PMS
△C443	AE001548	P4N8FJ662H	CMPP	0.0066UF 1.25KV
△C446	BZ110205	E02LU5220M	CE	22 UF 50V
△C448	BZ110204	E0ELFD220M	CE	22 UF 250V
△C503	BZ110061	CQJTB0513K	CC	0.001 UF 500V B
△C505	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQL
△C506	AD301026	CD39E0M13M	CC	0.001 UF 250V
△C508	AE002878	CD39E0MQ3M	CC	0.0047UF 250V
C514	AD301320	COPLRR7U2K	CC	680 PF 2KV R
△C515	BZ110135	E02L02222M	CE	2200 UF 16V
C517	BZ110203	COPLRR7W2K	CC	820 PF 2KV RR
△C519	AD300925	E02LT2102M	CE	1000 UF 16V
C521	BZ110092	E5EZFB101M	CE	100 UF 160V
△C526	AD301635	E51CGC331M	CE	330 UF 200V
C527	AE001697	CQGBT04S3K	CC	0.0056UF 50V B
C615	AE003280	E52H05010M	CE	1 UF 50V
C819	BZ110247	C0JBB0713K	CC	0.001 UF 2KV B
DIODES				
D001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77
D106	BZ410054	0021721150	LED	SLR-342VCT32
D403	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D404	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77
△D405	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
D406	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D408	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D409	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
△D410	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
△D411	BZ410063	D2WTAU02A0	DIODE,SILICON	AU02A-EIC
△D412	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
△D501	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
△D502	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
△D503	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
△D504	BZ410085	D2WXN40050	DIODE,SILICON	1N4005-EIC
△D505	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D506	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
D507	BZ410067	D97U02R21B	DIODE,ZENER	MTZJ2.2B T-77
D508	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
△D509	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77
△D510	BZ410080	D2WXRU2AM0	DIODE,SILICON	RU2AM-EIC
D511	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
△D512	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D513	BZ410010	D28T21DQN9	DIODE,SCHOTTKY	21DQ09N-TA2B1
D514	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
DIODES				
D515	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
△D516	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D521	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D522	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D602	BZ410023	D97U09R11B	DIODE,ZENER	MTZJ9.1B T-77
D603	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D604	BZ410058	D97U08R21B	DIODE,ZENER	MTZJ8.2B T-77
D606	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
ICS				
IC101	AE002802	I56F07091B	IC	OEC7091B
IC199	AE001534	A3M213B015	IC	S-24C02BDP-1A
△IC401	AE002783	I03TD804N0	IC	LA78040N-E
△IC501	BZ410088	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC1001	BZ611001	I01DP75110	IC	
TRANSISTORS				
Q105	BZ510086	TPATB03003	COMPOUND TRANSISTOR	KRA102MAT
△Q401	AD301779	TD3Q021400	TRANSISTOR,SILICON	TT2140LS-YBC11
△Q402	BZ510089	TC5T01627Y	TRANSISTOR,SILICON	2SC1627_Y(TPE2)
△Q501	BZ510093	TJXG5NC500	FET	STP5NC50FP
△Q502	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q503	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q505	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q601	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q602	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q603	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q606	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q607	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
△Q801	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q802	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
△Q803	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
COILS & TRANSFORMERS				
L001	AD300676	021LA63R3K	COIL	3.3 UH
L401	AD301644	021L75472J	COIL	4.7 MH
△L501	AD301395	029T000104	COIL,LINE FILTER	1R0A562F20
△L503	AE001529	028R200030	COIL,DEGAUSS	8R200030
T401	BZ310157	045009003J	TRANS,HORIZONTAL DRIVE	ETH09K14BZ
△T502	AE001531	048129109S	TRANSFORMER,SWITCHING	8129109S
JACKS				
J702	AD300680	060Q401077	RCA JACK	AV1-09D-3
J703	AD300681	060Q401076	RCA JACK	AV1-09D-4
△J801	AD301147	066F120018	SOCKET,CATHODE RAY TUBE	ISMS01S
SWITCHES				
SW101	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW102	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
P.C.BOARD ASSEMBLIES				
PCB010	AE003281	A3M217J010	PCB ASS'Y	TMC558A
PCB110	AE003282	A3M217J110	PCB ASS'Y	TCC417A
MISCELLANEOUS				
B502	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B503	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
△CD501	AD300685	120R414903	CORD,AC BUSH	0R414903
CD801	BZ614378	06CU823001	CORD,CONNECTOR	CU823001
△CP401	BZ614303	069S450089	CONNECTOR PCB SIDE	A1561WV2-A5P
△CP502	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP503	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP601	AD301329	069E260659	CONNECTOR PCB SIDE	00_8283_0611_00_00
CP801	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
CD101A	AE001532	06CH013202	CORD CONNECTOR	CH013202
CD101B	AE001533	06CH013203	CORD CONNECTOR	CH013203
CP802A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP802B	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP803A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP803B	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
EL001	BZ614043	124116281A	EYE LET	XRY16X28BD

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
MISCELLANEOUS				
EL002	BZ614044	124120301A	EYE LET	XRY20X30BD
△F501	AD302166	081PC04005	FUSE	51MS040L
△FB401	AE003283	043220061F	TRANSFORMER,FLYBACK	FQI20B103_M
FH501	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
OS101	AD301048	0773071001	REMOTE RECEIVER	RPM7138-WH5
S101	AD301450	WBL6032038	FLAT CABLE AWM2468 A	WG26 4C BLACK 320MM
S102	BZ614310	WCL6844038	FLAT CABLE AWM2468 A	WG26 5C GRAY 440MM
SP1001	AD300689	070Y132018	SPEAKER	S08F21
△TH501	AD302000	D8EE0B1400	DEGAUSS ELEMENT	B59203-S1060-B14
TM101	AE003331	076N0EH050	TRANSMITTER	RC-EH050(CT-859)
△TU001	AE001528	0163100007	RF UNIT	ENG36A01GR
△V801	BZ614509	098Y200480	COLOR PICTURE TUBE	W/DY A48LGS30X19N45
X601	AD302003	100CT3R505	CRYSTAL	HC-49/C

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC.....	CERAMIC CAPACITOR
CE.....	ALUMI ELECTROLYTIC CAPACITOR
CP.....	POLYESTER CAPACITOR
CPP.....	POLYPROPYLENE CAPACITOR
CPL.....	PLASTIC CAPACITOR
CMP.....	METAL POLYESTER CAPACITOR
CMPL.....	METAL PLASTIC CAPACITOR
CMPP.....	METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN